



Current Production Float Sub-Assembly and Parts

Wipaire Parts Sales Team:

1.888.947.2473

WIPLINE FLOATS - SKIS - MODIFICATIONS

Direct: 1.888.947.2473 | Fax: 651.451.1786 | www.wipaire.com
1700 Henry Avenue South - Fleming Field (KSGS) South St. Paul, MN 55075

Part Number	Part Description	Unit of Measure
0238-0035	Paddle, 4ft, Beaver Brand	EA
0238-0050	Paddle, 5ft, Beaver Brand	EA
0238-0068	Paddle, 5-1/2ft, Beaver Brand	EA
03-09-1022	Connector Plug, Female, 2 Connectors 3/16" DIA Side A, 1 Connector 9/16" DIA Side B	EA
0322-0404	3/4" Fitting Plastic Screw and Bolt, 1" Screw & Bolt, White	EA
0-332-209-137	Relay, 12V, 5 Prong	EA
05DU06	Bushing, 5/16" DIA, Length 3/8"	EA
062-00300	Brake Piston, 1/2" DIA, 1/8" Groove	EA
062-30161	Brake Piston, 1-3/4" DIA, 1/4" Groove	EA
063-00500	Pressure Plate, Flat, 2 large holes 7/16", 3 small holes 1/8"	EA
063-01100	Pressure Plate, Flat, 2 Large holes 7/16", 4 Small holes 1/8"	EA
064-00500	Back Plate, Pressure Plate, w/out lining, 2 screw holes 1/4", 3 pin holes 1/8"	EA
064-01500	Back Plate, Pressure Plate, w/out lining, 2 screw holes 1/4", 2 pin holes 1/8"	EA
066-10500	Brake Lining, Length 2-3/4", 2 Holes 1/8"	EA
066-10600	Brake Lining, Length 2-5/8", 3 Holes 1/8"	EA
067-06300	Spacer, 2" DIA, Grease Retainer, White	EA
067-06700	Spacer	EA
067-14700	Spacer, 2-1/8" DIA, Grease Retainer, Grey	EA
068-30373	Gasket, Rough Paper, 3-5/8" Total DIA, 1-1/2" Center Hole DIA	EA
069-00400	Bolt, Anchor, Brake Pin, w/ Screw 1/4", Length 2-3/8"	EA
06DU08	Bushing, 3/8" DIA, Length 1/2"	EA
073-01500	Pressure Plate Assembly, w/ 2 brake linings filling 4 holes, Length 4-3/4"	EA
074-00200	Back Plate, w/ Break Lining, Length 3", 2 Screw holes 1/4", 2 Filled holes by lining	EA
074-01300	Back Plate, w/ Break Lining, Length 2-1/2", 2 Screw holes 1/4"	EA
08125	Bearing, Cone (non-chrome)	EA
08231	Bearing, Cup (non-chrome)	EA
0861233-2	Knob, Black, 5/16" DIA	EA
091-03000	Subassembly, Cylinder	EA
091-21600	Subassembly, Cylinder	EA
1001031	Metering Tube Shock-Strut	EA
1001032	Cover, Pumper Cup, Small, Assembly	EA
1001033	Cover, Pumper Cup, Large, Assembly	EA
1001052	Panel, Bulkhead Side #15, Right	EA
1001054	Flute, Bulkhead #15, Fwd Right	EA
1001055	Flute, Bulkhead #15, Fwd Left	EA
1001056	Flute, Bulkhead #15, Aft Right	EA
1001057	Flute, Bulkhead #15, Aft Left	EA
1001058	Flute, Bulkhead #16, Fwd Right	EA
1001059	Flute, Bulkhead #16, Fwd Left	EA
1001060	Bulkhead #16 Aft. Rt. Flute	EA
1001064	Angle, Stiffener, Rt., 10000 Float	EA
1001065	Angle, Stiffener, Lt., 10000 Float	EA
1001067	Scoop Tunnel Side Assembly, Port Side	EA
1001068	Scoop Tunnel Side Assembly, Starboard Side	EA
1001069	Bulkhead #18, Formed, Left, 10000	EA
1001070	Bulkhead #18, Formed, Right, 10000	EA
1001071	Bulkhead Assembly #18, Left, 10000	EA
1001072	Bulkhead Assembly #18, Right, 10000	EA
1001073	Keel, Extrusion Repair, Aft, 4000, 6100, 8000	EA
1001100	Bushing Assembly, Shock Strut, 2100	EA
1001101	Bushing Assembly, Shock Strut, 2300	EA

Part Number	Part Description	Unit of Measure
1001102	Bushing Assembly, Shock Strut, 3000	EA
1001104	Cover,Float Deck, Small,Two Piece	EA
1001105	Cover, Float Deck, Large, Two Piece	EA
1001106	Angle, Cover, Float Deck Large	EA
1001107	Angle, Float Deck Cover,Small	EA
1001108	Assembly, Cover Small	EA
1001109	Assembly, Cover Medium	EA
1001110	Doubler, Support Bulkhead #7	EA
1001111	Step, Wide Co-Pilot (DHC-6)	EA
1001112	Step, Wide Pilot (DHC-6)	EA
1001113	Step, Wide Cargo Rt. (DHC-6)	EA
1001114	Step, Cargo Wide Lt. (DHC-6)	EA
1001115	Bracket, Relay extension(W/B)	EA
1001120	Keel, Main	EA
1001147	Skin,Formed Bottom, Lower Left(13000)	EA
1001148	Skin, Formed Bottom, Lower Right(13000)	EA
1001149	Skin, Formed Bottom, Upper Left13000)	EA
1001150	Skin, Formed Bottom, Upper Right(13000)	EA
1001158	Cover, Bulkhead #18 (10000 Float)	EA
1001158	Cover, Bulkhead #18 (10000 Float)	EA
1001159	Clamp,WaterTube, 10000	EA
1001164	Stiffener, Rear, Aft Sideskin 10000	EA
1001165	Stiffener, Fwd, Aft Sideskin 10000	EA
1001166	Stiffener, Rear, Mid Sideskin 10000	EA
1001167	Stiffener, Fwd, Mid Sideskin 10000	EA
1001172	Block, Gear Control	EA
1001179	Doubler, Top Rail Right 10000	EA
1001185	Panel, Instrument, Rear Seat 2-seater	EA
1001202	Pulley Bracket, Forward Spreader Bar	EA
1001203	Bracket, Pulley, Fwd, Spreader Bar, No Mounting Holes	EA
1001288	Bulkhead #16 Aft. Lt. Flute	EA
1001290	Panel, Main Strut, Inbrd, Aft, Rt, 10000	EA
1001294	Panel, Main Strut, Inboard, Fwd Left	EA
1001296	Panel, Main Strut, Outbrd, Aft, Rt, 10000	EA
1001297	Panel, Main Strut, Outbrd, Aft, Lt, 10000	EA
1001299	Panel, Main Strut, Outboard, Fwd Right	EA
1001301	Panel, Bulkhead #15, Center	EA
1001305	Flute, #4 bulkhead fwd left	EA
1001306	Flute, #4 bulkhead fwd right	EA
1001308	Flute, #4 bulkhead aft left	EA
1001309	Flute: #4 bulkhead aft right	EA
1001346	Bulkhead, #8 Fwd. LT. Flute	EA
1001347	Bulkhead # 8Fwd Rt Flute	EA
1001349	Bulkhead #8 Aft Lt, Flute	EA
1001350	Bulkhead #8 Aft. Rt. Flute	EA
1001354	Rub Strip, Cable	EA
1001380	Doubler, Brake Line	EA
1001384	Channel-Aft, Hyd Pump, Garmin 10000, 206	EA
1001385	Plate, Aft Fuselage, Hyd Pump, Garmin 10000, 206	EA
1001416	Cover, Aux Circuit Breaker Assy	EA
1001430	Fuselage Mount Pump	EA
1001431	Selector Assembly	EA
1001433	Panel, Main Strut Fwd	EA

Part Number	Part Description	Unit of Measure
1001434	Panel, Main Strut Aft	EA
1001437	Gasket, access cover	EA
1001438	Gasket, baggage cover	EA
1001444	Step, Wide, Left, Air Stair Door, DHC-6	EA
1001448	Panel, Bulkhead #19, Left	EA
1001449	Panel, Bulkhead # 19, Right	EA
1001453	Bulkhead # 19 Left Assembly	EA
1001454	Bulkhead Assembly #19 Right	EA
1001457	3/32" X 7/8" Roll Pin	EA
1001458	Assy, Cable, 3/32, 18', Lt. Turnbuckle end	EA
1001459	Assy, Cable, 3/32, 18', RH Turnbuckle end	EA
1001495	Fwd. Upper Bracket	EA
1001499	Gasket, baggage cover	EA
1001506	Pulley Bracket	EA
1001524	Fitting Rear Strut Lower	EA
1001525	Fitting Rear Strut Upper	EA
1001527	Strut, Pa-18 Rear Right. Heavy	EA
1001533	Strut, PA-18 Rear Left. Heavy	EA
1001535	Cover Long Fill Tube Left	EA
1001550	Lug - Upper - Forward Flywire - AT802	EA
1001551	Eyebolt - Fly wire - AT802	EA
1001565	Gusset Airframe 802	EA
1001570	Gasket, baggage cover	EA
1001571	Gasket, baggage cover	EA
1001587	Flute, Bulkhead #12 Aft Lt.	EA
1001590	Flute, Bulkhead #12, Aft, Rt.	EA
1001605	Actuator, Ball Drive	EA
1001616	Gunwall, outboard right.	EA
1001617	Gunwall, Outboard left	EA
1001662	Install Kit, Landing Gear Advisory System	EA
1001672	Superpanel, Fwd, Big	EA
1001673	Superpanel, Fwd, Small	EA
1001674	Panel, Spreader Bar, Big Side	EA
1001675	Panel, Spreader Bar, Small Side	EA
1001701	Template, Drill Jig, Bracket Assembly Flying Wire Attach	EA
1001702	Template, Drill Jig, Bracket Assembly Flying Wire Attach	EA
1001703	Inner sister keel forward Left.	EA
1001704	Inner sister keel forward right	EA
1001719	Plate, Support, Wheelwell Wide, Lh	EA
1001720	Plate, Support, Wheelwell Wide, Rh	EA
1001728	Gasket, access cover	EA
1001739	Assy, BH12, 10000	EA
1001763	10000 Tow Lug, Left	EA
1001764	10000 Tow Lug, Right	EA
1001781	Sister keel, Left outer, 10000	EA
1001782	Sister keel, right outer, 10000	EA
1001794	Strip Fairing, Long Lt, Aft	EA
1001795	Strip Fairing, Short Rt, Fwd	EA
1001796	Water Sensor Assy.	EA
1001797	Assy, Bilge Pump	EA
1001798	Assy, Foam Tank, Elect, 10000 Floats	EA
1001828	Panel, Bulkhead #16	EA
1001861	Assy, BH10, 10000	EA

Part Number	Part Description	Unit of Measure
1001869	Panel, Wheel Well, Side, Left	EA
1001870	Panel, Wheel Well, Side, Right	EA
1001879	Sping,Nose Gear, White	EA
1001901	Fitting, RH Main Gear 172	EA
1001902	Fitting, Left Main Gear 172	EA
1001911	Gasket, Retract Cable, Floor	EA
1001913	Retainer, Gasket, Retract Cable, Floor	EA
1001922	Roll Pin, 3/16 x 1	EA
1001929	T-Seal,	EA
1001930	T-Seal,	EA
1001930	T-Seal,	EA
1001935	Lift Ring, 208 (replaces Cessna 2601102-4)	EA
1001957	Strap - Support, Pulley, Ballance	EA
1001973	Cable, Rudder	EA
1001974	Cable, Rudder	EA
1001994	Seal, Outer	EA
1001996	Seal, Inner	EA
1002002	Brace, Long, Forward, Fly wire	EA
1002003	Brace, Short, Forward, Fly wire	EA
1002008	Flange,Sell 1002235 Cylinder, Main Gear (T-Seals)	EA
1002010	Cylinder, Main Gear 13000	EA
1002011	End Cap Cylinder Sell 1002236	EA
1002013	Flange, Sell 1002237 Cylinder Nose Gear Ram	EA
1002014	Cylinder, Nose Gear 13000	EA
1002017	Gland Shock-Strut	EA
1002018	Outer Cylinder, Shock Strut 6100	EA
1002020	Outer Cylinder, Shock Strut 8000	EA
1002022	Cylinder, Main Gear 6100	EA
1002023	Cylinder, Main Gear 8000	EA
1002024	Cylinder, Nose Gear 6100/8000	EA
1002030	Gravel Guard, Top	EA
1002035	Wiper, Rod 2-5/8", Black-90Dur	EA
1002038	Step, Boarding, Left, (husky)	EA
1002039	Step, Boarding, Left, (PA-18, PA-12)	EA
1002042	Skin, Top, Fwd, Left	EA
1002044	Skin, Side,Fwd Inboard, Left	EA
1002046	Skin, Side, Fwd, Outboard, Left	EA
1002048	Skin, Top, Fwd, Right	EA
1002053	Doubler, Water Rudder, 3450 Lt.	EA
1002054	Doubler, Water Rudder 3450 RH	EA
1002058	Access Door	EA
1002060	Hinge, Access Door	EA
1002061	Frame, Access Door	EA
1002063	Extra Lip, Baggage Cover	EA
1002064	Extra Lip, Baggage Cover	EA
1002065	Extra Lip, Baggage Cover	EA
1002066	Extra Lip, Baggage Cover	EA
1002067	Extra Lip, Baggage Cover	EA
1002075	Assembly, Access Door	EA
1002079	Cover, Access, With Pump-Outs	EA
1002087	Bushing Assy, Dual, Shock Strut, 2100	EA
1002088	Bushing Assy, Dual, Shock Strut, 2350	EA
1002089	Bushing Assy, Dual, Shock Strut, 3000	EA

Part Number	Part Description	Unit of Measure
1002090	Bushing Assy, Dual, Shock Strut, 3450	EA
1002091	Scuff Plate	EA
1002113	Stop, Canoe Paddle Bracket	EA
1002114	Bracket, Paddle	EA
1002115	Bracket, Relay, Scoop Position Logic	EA
1002126	Fairing Reinforcement	EA
1002132	Strut, Assy, Fwd, Right, 180/185, 3000 (SK 66)	EA
1002134	Strut, Assy, Diagonal, 180/185, 3000 (SK 66)	EA
1002136	Strut, Assy, Rear, Left ,180/185, 3000 (SK 66)	EA
1002137	Strut, Assy, Rear, Right, 180/185, 3000 (SK 66)	EA
1002142	Assy, Rim & Bearings,Grove, 2100	EA
1002149	Wire Pull, Crosswire	EA
1002150	Skin, Side, Fwd, Outboard, Right	EA
1002151	Skin, Side, Fwd, Inboard, Right	EA
1002159	Strut, Assy, Fwd, Left, 180/185, 3000 (SK 66)	EA
1002160	Wire Harness,Scoop position Retrofit, AT802	EA
1002161	Bus bar, Circuit Breaker Assembly	EA
1002163	Assy, Heat Sink, Scoop Position Logic	EA
1002184	Cover, Airduct	EA
1002203	AOA Display & Wiring	EA
1002204	Assy, Vane Sensor	EA
1002212	Strut, Ass'y, Kicker, AT802	EA
1002216	Ass'y, Fitting, Upper Rear, AT802	EA
1002220	Bushing, Kicker Strut, Lower, AT802	EA
1002224	Assy, Ram, Main Gear 13000	EA
1002230	T-Seal	EA
1002231	T-Seal	EA
1002231	T-Seal	EA
1002233	Assy, Nose Gear Actuator, 10000	EA
1002235	Assy-Cylinder Flange, Main Gear	EA
1002236	Assy-Cylinder End Cap	EA
1002237	Assy-Cylinder Flange, Nose	EA
1002264	Seal, Nose Wheel, Inner	EA
1002271	Bushing, front Strut Link, Edo	EA
1002272	Strut, Ass'y, Fwd Link, Edo	EA
1002278	Plate, Anchor, "V" Brace (182 G-1000)	EA
1002473	Bracket Assembly, Secure, Foam Tank, 10000 Floats	EA
1002575	Cover-Top, Wheel Well Vent, AT-802	EA
1002577	Kit, Rebuild, Main Gear Cylinder, (1002573) 3000/3450	EA
1002580	Assembly, Access Cover, Twist-off Access	EA
1002582	Ass'y, Cover, Access, Twist off, Large	EA
1002621	Carriage, Main Gear	EA
1002627	Cover,Deck Plate,1.5" (Modified)	EA
1002642	Ass'y, Carriage, w/bushings	EA
1002643	Ass'y, Carriage	EA
1002651	Cap, Top, Assy,Shock Strut	EA
1002653	Inner Cylinder Shock-Strut, 6100	EA
1002654	Piston Shock-Strut, 6000/8000	EA
1002663	Ring, Baggage Lock (25/pkg)	EA
1002670	Strap-Support, Accumulator, W/Slts	EA
1002681	Bulkhead, #22, 10000 Assy.	EA
1002751	Wedge, Step Strut, 10 Deg, DHC6	EA
1002760	Service Kit 74, 10000 Float Baggage	EA

Part Number	Part Description	Unit of Measure
1002828	Decal, Wipline Floats, Black, L and R	EA
1002829	Decal, Wipline Floats, White, L and R	EA
1002838	Handle, Hand Pump	EA
1002866	Mount - walk cable, bolted	EA
1002938	Mount - Walk cable, Rivet	EA
1003104	Assembly - Cable, 70.30 inches	EA
1003107	Assembly - Cable, 99.50 inches	EA
1003109	Assembly - Cable, 115.50 inches	EA
1003138	Skin, Finlet forward (Tall Finlets for the Air Tractor two seater)	EA
1003139	Rib, finlet forward (Tall Finlets for the Air Tractor two seater)	EA
1003140	Rib, center finlet (Tall Finlets for the Air Tractor two seater)	EA
1003141	Rib, finlet aft (Tall Finlets for the Air Tractor two seater)	EA
1003204	Finlet Assembly (Tall Finlets for the Air Tractor two seater)	EA
1003206	Stall strip	EA
1003213	Plate, Gear selector mount, G-1000	EA
1003215	Wiring Harness, Selector, G-1000	EA
1003216	Placard, Gear Selector, G-1000	EA
1003220	Doubler, Bracket, Pulley, G-1000	EA
1003221	Angle, Cable, Steering, G-1000	EA
1003232	Retainer, Grease, Nose Wheel	EA
1003233	Assembly, Nose Wheel	EA
1003242	Angle, Steering Cable, G-1000	EA
1003358	Fitting, Wire Pull, PA-18 Wide Body	EA
1003363	Bracket, Attach, Aft Spreader Bar	EA
1003384	Assembly, Cable Guide	EA
1003385	Assembly, Clamp, Fairing, Filler Tube	EA
1003425	Angle - Top skin cross tie	EA
1003442	Spacer, Access door	EA
1003478	Gusset, Baggage Floor, BH10	EA
1003479	Gusset, Baggage Floor, BH12	EA
1003480	Support, Baggage Floor	EA
1003515	Chine, Fwd left hand	EA
105-00200	Rivet Brake Lining, 1/8" DIA, Gold	EA
10-782-PP	Float Switch, Compact Vertical, 10000A Foam Tank, PP	EA
1085H3-1MDC	Seal, Baggage Cover	FT
1085H3-1MDC	Seal, Baggage Cover	FT
10A01000-411	Bulkhead Assembly, #20	EA
10A01000-412	Bulkhead Assembly, #21	EA
10A01000-414	Skin Assembly, Top Rt	EA
10A01000-417	Bulkhead Assembly, #8	EA
10A01000-418	Bulkhead Assembly, #9	EA
10A01000-419	Skin Assembly, Top Left	EA
10A01000-422	Bulkhead Assy, #6	EA
10A01000-431	#15 Bulkhead Assy.	EA
10A01000-434	Assembly, Tunnel Water Bomber	EA
10A01000-435	Assembly,#17 Horizontal Panel	EA
10A01000-436	Wheel Well Half, Upper	EA
10A01000-437	Wheel Well Half, Upper	EA
10A01000-438	Wheel Well, Side Panel	EA
10A01000-439	Wheel Well, Side Panel	EA
10A01000-440	Wheel Well Half, Lower	EA
10A01000-441	Wheel Well Half, Lower	EA
10A01000-443	Assembly, Wheel Well	EA

Part Number	Part Description	Unit of Measure
10A01000-446	Panel Assembly, Rear Strut	EA
10A01000-447	Panel Assembly, Rear Strut	EA
10A01000-448	Cover Assy, Bulkhead # 9	EA
10A01000-450	Cover Reinforcement, Side Assembly	EA
10A01000-451	Floor, Baggage	EA
10A01000-464	Assembly, Door, Baggage Bay	EA
10A01001-064	Plate Scoop, Tunnel	EA
10A01001-065	Plate Scoop, Tunnel	EA
10A01001-066	Cover,Top	EA
10A01001-068	Doubler, Top Skin left	EA
10A01001-071	Spacer, #16 Bulkhead W.W.	EA
10A01001-072	Doubler, Scoop Tunnel	EA
10A01001-073	Doubler, Scoop Tunnel	EA
10A01001-236	Doubler, Tunnel End	EA
10A01031-002	Pivot - Bracket, Probe Jack	EA
10A01150-113	Doubler, #15 (Water Bomber)	EA
10A01150-161	Bulkhead, #21	EA
10A01150-167	Skin, Side, Aft, Lt, 10000	EA
10A01150-169	Bulkhead, #8	EA
10A01150-170	Bulkhead, #9	EA
10A01150-172	Skin, Side, Aft, Rt, 10000	EA
10A01150-187	Cover, #19	EA
10A01155-053	Cover Tie	EA
10A01156-171	Spacer, #22, Top	EA
10A01156-172	Spacer, #22, Side	EA
10A01156-173	Spacer, #22, Bottom	EA
10A01156-174	Pulley Bracket Back	EA
10A01156-175	Cluster, Pulley Bracket	EA
10A01156-178	Pulley Plate	EA
10A01156-179	Reinforcement, Pulley	EA
10A01156-180	Cover Reinforcement, Side	EA
10A01156-186	Splice Pivot	EA
10A01157-011	Spacer, Tank Support, Short	EA
10A01157-013	Spacer, Tank Support, Long	EA
10A01157-014	Spacer, Tank Support, Long	EA
10A01158-265	Skin-Bottom, Aft, Lt, 10000 Float	EA
10A01158-266	Skin-Bottom, Aft, Rt, 10000 Float	EA
10A01160-048	Splice - Main Keel	EA
10A01162-067	Skin, Bottom Splice, Fwd Upper	EA
10A01162-073	Splice, Tunnel	EA
10A01162-074	Doubler, #16 Bulkhead W/B	EA
10A01162-081	Cover, Bulkhead #s 9 & 14	EA
10A01163-098	Skin, Bottom Splice, Fwd Lower	EA
10A01163-104	Doubler #9 Bulkhead	EA
10A01163-105	Skin, Mid Top Lt.	EA
10A01163-106	Skin, Mid Inbrd Side Rt.	EA
10A01163-107	Skin, Mid Outbrd Side Lt.	EA
10A01163-108	Skin - Mid. Top Rt.	EA
10A01163-109	Skin, Mid Side Inbd. Lt.	EA
10A01163-110	Skin, Mid Side Outb. Rt.	EA
10A01163-111	Skin, Bottom Splice Fwd Lower	EA
10A01163-115	Cover, Side	EA
10A01163-116	Mount, Bilge Pump	EA

Part Number	Part Description	Unit of Measure
10A01196-005	Aft. Main Keel Support	EA
10A01198-020	Support, Bottom Skin (Right)	EA
10A01198-021	Support, Bottom Skin (left)	EA
10A01198-022	Bottom Bolt Seal	EA
10A01205-010	Spacer, Tunnel	EA
10A01264-006	Adapter - Water Sensor	EA
10A01328-002	Keel, Afterbody	EA
10A01348-027	Angle,Upper Vert. Wheel Well #16 Bulk.	EA
10A01348-028	Angle,Upper Vert. Wheel Well #16 Bulk.	EA
10A01348-029	Angle,Upper Vert. Wheel Well #16 Bulk.	EA
10A01348-030	Angle,Upper Vert. Wheel Well #16 Bulk.	EA
10A01348-031	Bracket, Tank Support	EA
10A01352-044	Angle, Stiffener- Bulk.#22	EA
10A01357-075	Angle,Vert.Extension Trunion #16 Bulkhead	EA
10A01357-076	Angle,Vert.Extension Trunion #16 Bulkhead	EA
10A01357-077	Angle #16 B.H. Vertical Trunion Extension	EA
10A01357-078	Angle #16 B.H. Vertical Trunion Extension	EA
10A01357-081	Arm, Strut Panel Rear	EA
10A01357-082	Arm, Strut Panel Rear	EA
10A01359-232	Angle, Stiffener #19 Bulkhead (Right)	EA
10A01359-233	Angle, Stiffener #20 Bulkhead	EA
10A01359-234	Angle, Stiffener #21 Bulkhead	EA
10A01359-235	Angle, Cover Tunnel Long	EA
10A01359-237	Angle Short Cover Tunnel	EA
10A01359-239	Angle, Tunnel end	EA
10A01359-240	Angle, Stiffener #9 Bulkhead W.B.	EA
10A01359-241	Angle,Sister Keel Bulk #8 W/B	EA
10A01359-242	Angle, Sister Keel Bulk. #8 W/B	EA
10A01359-243	Angle,Attach Horizontal Panel #16 Bulk.	EA
10A01359-244	Angle,Attach Horizontal Panel #16 Bulk.	EA
10A01381-016	Stiffener, #9 Bulkhead	EA
10A01381-017	Angle, Center Support #8 Bulkhead	EA
10A01381-018	Rib, Tank Support, Long	EA
10A01381-019	Rib, Tank Support, Short	EA
10A01382-003	Angle,Top Rail Mod.	EA
10A01382-004	Angle,Top Rail Mod.	EA
10A01382-020	Rail, Top Mid W/B	EA
10A01382-021	Rail,Top FWD W/B	EA
10A01382-024	Rail, Top AFT W/B	EA
10A01382-026	Angle,Top Rail (Right)	EA
10A01382-028	Angle, Top Rail Mod.	EA
10A01382-029	Angle, Top Rail Mod.	EA
10A01382-030	Angle, Cross Tie & Top Rail	EA
10A01382-031	Angle,Cross Tie	EA
10A01382-032	Rail, Top Wheel Well	EA
10A01383-047	Sister Keel, Inboard Aft Lt	EA
10A01383-048	Sister Keel, Inboard Aft Rt	EA
10A01383-049	Sister Keel, Outboard Aft Lt	EA
10A01383-050	Sister Keel, Outboard Aft Rt	EA
10A01384-003	Gunwall, Left	EA
10A01384-004	Gunwall, Right	EA
10A01386-003	Chine, Rear Lt	EA
10A01386-004	Chine, Rear Rt	EA

Part Number	Part Description	Unit of Measure
10A01387-002	Main Keel End	EA
10A01387-003	Main Keel; Water Bomber	EA
10A01388-002	Wear Strip	EA
10A01388-003	Wear Strip Aft.	EA
10A01427-028	Scoup Tunnel Aft. Angle (Right)	EA
10A01427-029	Scoup Tunnel Aft. Angle (Left)	EA
10A01427-030	Angle, Scoop Tunnel	EA
10A01427-031	Angle, Scoop Tunnel	EA
10A01427-033	Angle - Fwd. Spr. Bar (#21 Holes)	EA
10A01427-034	Angle - Fwd. Spr. Bar (#21 Holes)	EA
10A01427-041	Angle,#17 Horizontal Panel	EA
10A01427-042	Angle, #19 Bulk.	EA
10A01428-003	Angle, Trunnion Support, Left, W/B	EA
10A01428-004	Angle, Trunnion Support, Right, W/B	EA
10A01445-001	Pivot - Lower - Scoop	EA
10A01445-002	Pivot - Upper - Scoop	EA
10A01445-003	Sleeve Pivot Scoop	EA
10A01526-003	Support Bracket, Scoop Tube	EA
10A01526-004	Deflector Scoop	EA
10A01542-001	Bushing Pivot	EA
10A01591-001	Bracket, scoop retract.	EA
10A01592-002	Web Scoop	EA
10A01592-003	Cover Scoop	EA
10A01592-004	Flange, Float Deck	EA
10A01592-005	Flange, FLOat Deck	EA
10A02000-236	Strut, Fwd (Right)	EA
10A02000-236	Strut, Fwd (Right)	EA
10A02000-237	Strut, Fwd (Left)	EA
10A02030-009	Mount Kickers (Left)	EA
10A02030-010	Mount Kicker (Right)	EA
10A02035-001	Fitting - Lower - Forward Strut	EA
10A02056-016	Fitting - Upper - Strut RT.	EA
10A02056-017	Fitting - Upper - Strut LT.	EA
10A02150-182	Bottom Skin, Main Strut (Right)	EA
10A02150-183	Bottom Skin, Main Strut (Left)	EA
10A02150-184	Top Skin, Main Strut (Right)	EA
10A02150-185	Top Skin, Main Strut (Left)	EA
10A02150-192	Fairing, Main Strut Trailing Edge	EA
10A02150-193	Fairing, Main Strut Trailing Edge	EA
10A02150-194	Trailing Edge Strip	EA
10A02150-195	Trailing Edge Strip	EA
10A02150-196	Trailing Edge Strip Right	EA
10A02150-197	Trailing Edge Strip Left	EA
10A02158-267	Fairing left side top	EA
10A02163-099	Angle Tube - Weld On - Fairing	EA
10A02163-100	Angle Tube - Weld On - Fairing	EA
10A02163-101	Angle Tube - Weld On - Fairing	EA
10A02163-126	Angle, Fairing Attach	EA
10A02178-001	Strut - Kicker, Fwd. L.H.	EA
10A02178-002	Strut - Kicker, Fwd. R.H.	EA
10A02201-004	Mount - Scoop Tube - Pylon	EA
10A02201-005	Mount - Scoop Tube - Pylon	EA
10A02208-003	Fitting, Upper Fwd	EA

Part Number	Part Description	Unit of Measure
10A02208-004	Fitting, Upper	EA
10A02216-003	Clamp - Upper - Forward Fly wire	EA
10A02216-004	Clamp - Lower - Forward Fly wire	EA
10A02350-021	Step-Fwd, Lt, AT802	EA
10A02350-022	Step-Fwd, Rt, AT802	EA
10A02367-004	Pulley Bracket, Main Strut	EA
10A02491-003	Bracket, Fwd	EA
10A02491-004	58.41Bracket, Aft	EA
10A02571-003	Wire Pull - Fwd. Lwr - Left	EA
10A02571-004	Wire Pull - Fwd. Lwr - Right	EA
10A03335-007	Spreader Bar, Forward	EA
10A06000-034	Assy, Pivot Block/Pin sell ass'y 10A06000-039 only	EA
10A06000-035	Nose Spring,Fork and Wheel Assembly	EA
10A06000-036	Bearing Assembly Upper	EA
10A06000-037	Bearing Assembly Lower	EA
10A06000-039	Pivot Block Complete	EA
10A06090-004	Spacer, Pivot Pin Do not sell	EA
10A06299-001	Pivot Block/sell assy 10A06000-034 ONLY	EA
10A06462-020	Washer, Nose Pivot	EA
10A06477-002	Pivot Pin sell ass'y 10A01000-039 only	EA
10A06512-004	Ball Retainer, Nose Pivot	EA
10A07595-001	Slide Block Trolley	EA
10A08000-164	Cable, Steering	EA
10A08000-165	Cable, Balance	EA
10A08000-166	Cable, Retract	EA
10A08000-167	Retract Handle Lock Assembly	EA
10A08000-168	Cable, Steering	EA
10A08000-169	Cable, Retract	EA
10A08000-170	Cable, Retract	EA
10A08033-004	Guide, Retract Pulley Bracket	EA
10A08158-284	Cover - Retract Cable	EA
10A08183-007	Pulley Bracket Guide	EA
10A08193-008	Lock Pivot Retract	EA
10A08200-008	Shim, Pulley Mount	EA
10A08205-009	Shim, Pulley Mount	EA
10A08225-003	Pulley Bracket	EA
10A08225-004	Pulley Bracket	EA
10A08251-004	Pulley Bracket Guide (Right)	EA
10A08251-005	Pulley Bracket Guide (Left)	EA
10A08280-006	Spacer, Pulley Bracket	EA
10A08339-072	Cable Stop Steering Retract	EA
10A08339-073	Cable Stop Steering Retract	EA
10A08357-079	Pulley Bracket, Float Deck (Short)	EA
10A08357-088	Bracket - Pulley Attach	EA
10A08357-089	Bracket - Pulley Attach	EA
10A08410-008	Pulley Bracket, Medium (Right)	EA
10A08410-009	Pulley Bracket, Medium (Left)	EA
10A08410-010	Pulley Bracket, Tall (Right)	EA
10A08410-011	Pulley Bracket, Tall (Left)	EA
10A08426-012	Stop-Water Rudder Blade	EA
10A08427-032	Bracket - Guide Cable	EA
10A08566-009	Gasket - Retract Cable	EA
10A08602-011	Water Rudder - Up Stop	EA

Part Number	Part Description	Unit of Measure
10A08605-003	Guide, Cable	EA
10A09000-292	Piston Rod Assembly	EA
10A09000-293	Probe Jack Cylinder Assembly	EA
10A09000-294	Hydraulic Pump Assembly	EA
10A09000-296	Accumulator Plate Assembly	EA
10A09000-314	Bracket Assembly, Pump Mount	EA
10A09024-002	Probe, Cylinder	EA
10A09024-003	Plug, End, Probe Jack	EA
10A09024-004	Plug, Fwd, Probe Jack	EA
10A09150-188	Cover - Fwd Console Gear Selector	EA
10A09150-189	Support - Aft. - Console - Selector	EA
10A09155-055	Mount Plate, Accumulator	EA
10A09185-007	Manifold - Hyd.	EA
10A09185-009	Manifold, Middle,3/8 Fem Pipe	EA
10A09207-009	Manifold, Hydraulic	EA
10A09261-008	Probe, Stop	EA
10A09340-186	Stiffener - Hand Pump Mount	EA
10A09340-187	Stiffener - Hand Pump Mount	EA
10A09359-245	Angle, Accumulator Mount	EA
10A11000-029	Wire Harness, 14 Pin	EA
10A11000-030	3 Wire Pump Harness	EA
10A12000-060	Pulley Cluster Assembly	EA
10A12000-061	Pulley Bracket Assembly	EA
10A12000-062	Spring Attach Bracket Assembly	EA
10A12000-063	Ass'm Rite Angl Prob(obselete)	EA
10A12000-064	Cable Vent Assembly	EA
10A12000-065	Cable Vent Assembly	EA
10A12000-066	Kit-Foam Tank (Without Tank)	EA
10A12000-067	Valve - Tank Flapper Assy.	EA
10A12000-069	Vent Retainer Assy.	EA
10A12000-070	Weldment, Finlet Mount, Forward	EA
10A12000-072	Assy, Fairing, RH, Aft, Ventral Fin, AT802	EA
10A12000-073	Assy, Fairing, LH, Aft, Ventral Fin, AT802	EA
10A12000-074	Assy, Fairing, RH, Fwd, Ventral Fin, AT802	EA
10A12000-075	Assy, Fairing, LH, Fwd, Ventral Fin, AT802	EA
10A12000-077	Angle Assembly, Lower Mount	EA
10A12000-078	Vent Install, Hopper	EA
10A12001-074	Strap, Spar	EA
10A12002-245	Doubler, Center	EA
10A12004-196	Skin, Ventral Fin Rear	EA
10A12005-399	Rib, Top Ventral Fin /Rear	EA
10A12005-400	Rib, Bottom Rear Ventral Fin	EA
10A12005-408	Flange Extension, Vertical Fin	EA
10A12005-409	Flange Extension, Ventral Fin	EA
10A12005-412	Doubler Aft Finlet	EA
10A12005-413	Cover, Forward Slot	EA
10A12005-414	Trailing Edge, Rib	EA
10A12005-415	Skin, Finlet Aft	EA
10A12005-416	Rib, Forward	EA
10A12005-417	Skin, Finlet Forward	EA
10A12005-418	Support, Forward Rib	EA
10A12005-419	Rib, Aft Ventral fin	EA
10A12005-422	Stiffener, Vent Bowl	EA

Part Number	Part Description	Unit of Measure
10A12011-029	Bracket, Pulley Outside Leg	EA
10A12011-031	Plate, Pulley Wheel	EA
10A12019-017	Pulley Wheel, Small	EA
10A12019-018	Pulley Wheel, Large	EA
10A12062-016	Fitting, Aft Ventral Fin	EA
10A12150-190	Extender - Elevator Servo Tab	EA
10A12150-191	Bracket, Compass Mount	EA
10A12150-200	Reinforcement Strip Vent Deflector	EA
10A12154-017	Clip Foam Tank Wiring	EA
10A12154-018	Gusset - Flap Arm	EA
10A12156-177	Attach Point, Raer Ventral Fin	EA
10A12156-181	Spacer, Ventral Fin	EA
10A12156-182	Gusset, Ventral Fin	EA
10A12156-184	Plate - Pulley Support	EA
10A12158-275	Cover, Main Attach Fitting, RT, AT802	EA
10A12158-276	Cover, Fill Tube R.H.	EA
10A12158-277	Cover, Main Attach Fitting, LH, AT802	EA
10A12158-278	Fairing - Aft. - Tail Section	EA
10A12158-279	Fairing - Aft. - Tail Section	EA
10A12158-280	Fairing, RH, Fwd, Tail, AT802	EA
10A12158-281	Fairing, LH, Fwd, Tail, AT802	EA
10A12158-282	Clip, Fairing, Fwd, AT802	EA
10A12158-283	Plate - Aft. Fairing	EA
10A12160-045	Cover, Access	EA
10A12162-068	Bracket, Pulley Fuselage	EA
10A12162-069	Bracket, Pulley Fuselage	EA
10A12162-070	Bracket, Pulley Fuselage	EA
10A12162-071	Bracket, Pulley Main Strut Top	EA
10A12162-072	Pulley Bracket Main Strut Top Single	EA
10A12162-082	Side, Pulley Bracket	EA
10A12162-083	Side, Pulley Bracket	EA
10A12162-086	Plate - Pulley Bracket Attach	EA
10A12163-118	Housing, Gear Selector Console	EA
10A12163-121	Bracket, Reinforcement - Vent Door	EA
10A12163-123	Stiffener, Filler Flap Valve	EA
10A12163-126	Bracket - Vent Tube Attach	EA
10A12163-127	Bracket - Vent Tube Attach	EA
10A12163-128	Stand Off , Foam Breather Lower	EA
10A12163-129	Stand Off , Foam Breather Upper	EA
10A12182-002	Clamp Rite Angle Probe Obsolete	EA
10A12193-006	Spacer, Ventral Fin	EA
10A12200-009	Spacer - Pulley Bracket	EA
10A12214-006	Clamp - Hyd. Pump	EA
10A12214-007	Clamp - Brace - Steering	EA
10A12216-005	Clamp - Pulley Support	EA
10A12234-004	Bracket, Aft Mount Ventral Fin	EA
10A12251-006	Bracket , Upper, Float, Guide	EA
10A12264-005	Bracket - Float - Guide	EA
10A12264-005	Bracket - Float - Guide	EA
10A12270-008	Spacer Float	EA
10A12277-003	Coupler, Foam Tank	EA
10A12339-074	Support, Bulkhead	EA
10A12339-075	Brace - Steering	EA

Part Number	Part Description	Unit of Measure
10A12340-183	Angle, Cover Ventral Fin	EA
10A12348-032	Panel; Aux. Circuit Breaker	EA
10A12357-083	Angle Pump Mount	EA
10A12357-084	Bracket, Spring Attach	EA
10A12357-085	Bracket, Spring Attach	EA
10A12357-086	Angle - Fuselage - Steering	EA
10A12357-087	Angle Pump Mount Bottom	EA
10A12402-006	Tube Right Angle Probe obsolete	EA
10A12417-003	Drain Tube - Foam Tank	EA
10A12487-009	Cable Hook	EA
10A12521-003	Ring	EA
10A12521-004	Leg - Long buy Assembly	EA
10A12521-005	Leg - Short Buy assembly	EA
10A12523-007	Spacer - Hopper Door Retainer	EA
10A12532-003	Flange, Inlet Tube - L.H. Side	EA
10A12532-004	Flange, Inlet Tube - L.H. Side	EA
10A12532-005	Flange, Inlet Tube - Right Side	EA
10A12532-006	Flange, Inlet Tube - Right Side	EA
10A12536-015	Pad Clamp Hopper Door	EA
10A12566-010	Gasket, Fill Tube Clamp	EA
10A12572-003	Plate	EA
10A12599-013	Dome	EA
10A12652-001	Adapter, Foam Tank Float	EA
10A12652-003	Guide Vent Door Cable	EA
10A12665-001	Shield Hopper Fill Control	EA
10A12666-001	Tube-Vent Aft Tank	EA
10A12696-001	Hose Coupling 5"	EA
10A12697-001	Hose Coupling 4"	EA
10A12702-034	Rod, Vent Door	EA
10A12702-035	Rod, Vent Door Spring	EA
10A12745-002	Hinge, Hopper Vent Fill	EA
10A16468-003	Tube Mount Lift	EA
10A17599-014	Glare Shield, Dash	EA
10A18000-004	Assy, Cap, Ferry, Small	EA
10A18000-005	Assy, Cap, Ferry, Large	EA
10a3647-41	Unknown	EA
11131-1	Clamp, Yellow, 1/2 Cylinder Arch, Bracket on top with 1/8" DIA hole	EA
1213552-2	V Brace Support (Cessna) G1000	EA
12DU12	Bushing, 3/4" DIA, 3/4" Length	EA
13836	Bearing, Cup, 2-3/8" DIA, non-chrome, 214-00100	EA
13889	Bearing, Cone, 1-1/2" DIA, non-chrome, 214-00200	EA
13A01000-185	Bulkhead Assy. Stn. #1	EA
13A01000-186	Bulkhead Assy. Stn. #2	EA
13A01000-187	Bulkhead Assy. Stn. #3	EA
13A01000-188	Bulkhead Assy. Stn. #4	EA
13A01000-189	Bulkhead Assy. Stn. #5	EA
13A01000-191	Bulkhead Assy. Stn. #7	EA
13A01000-193	Bulkhead Assy. Stn. #9	EA
13A01000-196	Bulkhead Assy. Stn. #12 & 13	EA
13A01000-199	Bulkhead Assy. Stn. #16	EA
13A01000-200	Bulkhead Assy. Stn. #17	EA
13A01000-210	Cover Assy. Inspection-Small	EA
13A01000-211	Cover Assy. Inspection-Large	EA

Part Number	Part Description	Unit of Measure
13A01000-216	Panel Assy. Spreader Bar Fwd. Rt.	EA
13A01000-217	Panel Assy. Spreader Bar Fwd. Lt.	EA
13A01000-226	Wheel Well Half Assy. Upper Rt.	EA
13A01000-227	Wheel Well Half Assy. Upper Lt.	EA
13A01000-459	Cover, #14 Bulkhead Conversion	EA
13A01001-035	Strap-Carrythru	EA
13A01082-001	Fitting, Ft. Strut Float	EA
13A01150-004	Bulkhead Stn. #3 Rt. Flute	EA
13A01150-005	Bulkhead Stn. #3 Lt. Flute	EA
13A01150-010	Bulkhead Stn. #5 Fwd. Rt. Flute	EA
13A01150-011	Bulkhead Stn. #5 Fwd. Lt. Flute	EA
13A01150-012	Bulkhead Stn. #5 Aft. Rt. Flute	EA
13A01150-013	Bulkhead Stn. #5 Aft. Lt. Flute	EA
13A01150-016	Flute, BH 6, Aft, Right	EA
13A01150-017	Flute, BH 6, Aft, Left	EA
13A01150-018	Bulkhead Stn. #7 Fwd. Rt. Flute	EA
13A01150-022	Bulkhead Stn. #8 Fwd. Rt. Flute	EA
13A01150-023	Bulkhead Stn. #8 Fwd. Lt. Flute	EA
13A01150-024	Bulkhead Stn. #8 Aft. Rt. Flute	EA
13A01150-025	Bulkhead Stn. #8 Aft. Lt. Flute	EA
13A01150-026	Bulkhead Stn. #9 Fwd. Rt. Flute	EA
13A01150-028	Bulkhead Stn. #9 Aft. Rt. Flute	EA
13A01150-029	Bulkhead Stn. #9 Aft. Lt. Flute	EA
13A01150-030	Bulkhead Stn. #10 Fwd. Rt. Flute	EA
13A01150-031	Bulkhead Stn. #10 Fwd. Lt. Flute	EA
13A01150-034	Bulkhead Stn. #11 Rt. Flute	EA
13A01150-035	Bulkhead Stn. #11 Lt. Flute	EA
13A01150-036	Skin, Side Inboard Fwd. Rt.	EA
13A01150-037	Skin, Side Inboard Fwd. Lt.	EA
13A01150-040	Skin, Side, Aft,Rt	EA
13A01150-041	Skin, Top Fwd. Lt.	EA
13A01150-044	Bulkhead Stn. #2 Rt. Side Panel	EA
13A01150-045	Bulkhead Stn. #2 Lt. Side Panel	EA
13A01150-046	Bulkhead Stn. #3 Rt. Side Panel	EA
13A01150-047	Bulkhead Stn. #3 Lt. Side Panel	EA
13A01150-048	Bulkhead Stn. #4 Panel	EA
13A01150-050	Bulkhead Stn. #5 Rt. Panel	EA
13A01150-054	Bulkhead Stn. #7 Rt. Side Panel	EA
13A01150-055	Bulkhead Stn. #7 Mid Panel	EA
13A01150-056	Panel, Side, RH, BH 8	EA
13A01150-057	Panel, Side, Lt., BH 8	EA
13A01150-058	Panel, Mid, BH 8	EA
13A01150-059	Bulkhead Stn. #9 Panel	EA
13A01150-060	Bulkhead Stn. #10 Rt. Side Panel	EA
13A01150-061	Bulkhead Stn. #10 Lt. Side Panel	EA
13A01150-064	Panel, Side, Right, BH 12, 13, 15	EA
13A01150-065	Panel, Side, Left, BH 12, 13, 15	EA
13A01150-066	Panel, Center, BH 12, 13, 15	EA
13A01150-068	Bulkhead Stn. #19 Panel	EA
13A01150-069	Bulkhead Stn. #20 Panel	EA
13A01150-072	Bulkhead Stn. #22 Panel	EA
13A01150-073	Bulkhead Stn. #23 Panel	EA
13A01150-074	Bulkhead Stn. #24 Panel	EA

Part Number	Part Description	Unit of Measure
13A01150-075	Bulkhead Stn. #16 Panel	EA
13A01150-091	Cover Stn. #18	EA
13A01150-094	Top-Tunnel Fwd.	EA
13A01150-099	Wheel Well Side, Lt.	EA
13A01150-100	Wheel Well Side, Rt.	EA
13A01150-101	Wheel Well Half-Horiz. Lt.	EA
13A01150-102	Wheel Well Half-Horiz. Rt.	EA
13A01150-103	Wheel Well Half-Vert. Lt.	EA
13A01150-104	Wheel Well Half-Vert. Rt.	EA
13A01150-122	Skin, Top Aft. Rt.	EA
13A01150-123	Skin, Side Aft. Lt.	EA
13A01150-130	Cover, Wheel Well	EA
13A01150-201	Cover, #14 Bulkhead Conversion	EA
13A01150-204	Shim - Lower - #16 Bulkhead	EA
13A01150-205	Shim - Upper - #16 Bulkhead	EA
13A01153-013	Skin, Btm. Upper Lt.	EA
13A01153-014	Skin, Btm. Upper Rt.	EA
13A01155-006	Shim, Hard Point Aft. Middle	EA
13A01155-025	Shim, Hardpoint-Aft.	EA
13A01155-064	Angle, Sister Keel Attach	EA
13A01155-065	Angle, Sister Keel Attach	EA
13A01156-084	Bulkhead Stn. #1	EA
13A01156-085	Plate - #1 Bulk Doubler	EA
13A01156-090	Hard Point, Aft. Middle Rt.	EA
13A01156-091	Hard point, Aft. Middle Lt.	EA
13A01156-099	Spacer, Carry Thru Strap	EA
13A01156-107	Doubler, Top Skin-Step Lt.	EA
13A01156-114	Spacer-Carry Thru.Strap #14 B	EA
13A01156-115	Spacer-Carry Thru.Strap #15 B	EA
13A01156-119	Hard Point-Fwd Tie Down	EA
13A01156-120	Hard Point Fwd Tie Down	EA
13A01156-124	Cover, Wheel Well Reinforcement	EA
13A01157-005	Spacer-Sister Keel Attach Angle	EA
13A01157-007	Shim-Front Tie Down Hard Point	EA
13A01158-144	Skin, Btm. Aft. Rt.	EA
13A01158-146	Top-Tunnel, Rr.	EA
13A01158-147	Cover, Inspection-Tunnel	EA
13A01160-001	Panel, Main Strut Leg	EA
13A01160-002	Panel, Main Strut Leg	EA
13A01160-004	Panel-Ft. Spr. Bar Spt.	EA
13A01160-005	Panel-Rear Drag Strut	EA
13A01160-008	Panel, Main Strut Leg	EA
13A01160-009	Panel, Main Strut leg	EA
13A01160-010	Panel - Horiz. #17 Bulk	EA
13A01160-012	Doubler, Stn. #18	EA
13A01160-017	Spacer Carry Thru Strap #17 B	EA
13A01160-018	Spacer Carry Thru Strap #17 B	EA
13A01161-002	Fitting, Rr. Float Attach	EA
13A01162-007	Cover, Bulkhead #14	EA
13A01162-009	Skin, Btm. Upper Aft.	EA
13A01162-010	Cover, Inspection-Small	EA
13A01162-011	Cover, Inspection-Large	EA
13A01162-013	Angle, Carry Thru Outer Lt.	EA

Part Number	Part Description	Unit of Measure
13A01162-014	Angle, Carry Thru Outer Rt.	EA
13A01162-015	Skin, Btm. Aft. Fwd. LT.	EA
13A01162-024	Skin, Btm. Aft. Fwd. RT.	EA
13A01162-052	Baggage Lip	EA
13A01163-009	Panel-#17 Bulk	EA
13A01163-011	Skin, Top Center Lt.	EA
13A01163-012	Skin, Top Center Rt.	EA
13A01163-013	Skin, Side Inboard Mid Lt.	EA
13A01163-014	Skin, Side Inboard Mid Rt.	EA
13A01163-016	Skin, Side Outboard Mid Rt.	EA
13A01163-017	Skin, Btm. Lower Aft.	EA
13A01163-026	Shim-Sister Keel	EA
13A01163-043	Skin, Btm. Lower Lt.	EA
13A01163-044	Skin, Btm. Lower Rt.	EA
13A01210-003	Fitting, Slide- Forward	EA
13A01233-001	Ballard, (cleat tie down)	EA
13A01273-016	Pin Latch	EA
13A01328-001	Keel, Aft. (Amphib)	EA
13A01340-088	Angle, Tunnel Side	EA
13A01348-009	Angle, Stiffener #14 Bulkhead	EA
13A01357-045	Angle, Horiz. #17 Bulk	EA
13A01357-046	Angle, Bulkhead Stn. #17 OB Rt.	EA
13A01357-049	Cleat, Sister Keel Attach #1 Bulkhead	EA
13A01357-050	Cleat, Sister Keel Attach #1 Bulkhead	EA
13A01357-051	Angle, Sister Keel Attach Lt.	EA
13A01357-052	Angle, Sister Keel Attach Rt.	EA
13A01359-124	Angle, Top Rail Attach	EA
13A01359-125	Angle, Sister Keel Attach Lt.	EA
13A01359-126	Angle, Sister Keel Attach Rt.	EA
13A01359-127	Angle, Sister Keel Attach #2	EA
13A01359-128	Angle, Sister Keel Attach #3	EA
13A01359-129	Angle, Sister Keel Attach #5	EA
13A01359-130	Angle, Sister Keel Attach #7	EA
13A01359-131	Angle, Sister Keel Attach #8	EA
13A01359-133	Angle, Sister Keel Attach #12	EA
13A01359-134	Angle, Cover Reinf. #14 Bulk	EA
13A01359-138	Angle-Stiffener, #19 Bulk, Rt	EA
13A01359-139	Angle-Stiffener, #20 Bulk, Lt	EA
13A01359-140	Angle-Stiffener, #20 Bulk, Rt	EA
13A01359-141	Stiffener-#14 Bulk, Lt.	EA
13A01359-142	Stiffener-#14 Bulk, Rt.	EA
13A01359-143	Stiffener-#21 Bulk, Lt.	EA
13A01359-144	Stiffener-#21 Bulk, Rt.	EA
13A01359-145	Stiffener-#22 Bulk, Lt.	EA
13A01359-146	Stiffener-#22 Bulk, Rt.	EA
13A01359-147	Stiffener-#23 Bulk, Lt.	EA
13A01359-148	Stiffener-#23 Bulk, Rt.	EA
13A01359-149	Stiffener-#24 Bulk, Lt.	EA
13A01359-150	Stiffener,#24 Bulk, Rt.	EA
13A01359-151	Stiffener, Vertical Outboard	EA
13A01359-152	Angle, Sister Keel Attach Rt.	EA
13A01359-153	Angle, Sister Keel Attach Lt.	EA
13A01359-163	Angle, Panel Attach #6 Bulkhead	EA

Part Number	Part Description	Unit of Measure
13A01359-164	Angle, Sister Keel #6 Bulkhead Rt.	EA
13A01359-165	Angle, Sister Keel #6 Bulkhead Lt.	EA
13A01359-166	Angle, Cover #18 Bulkhead	EA
13A01359-167	Middle-Horiz. Stiffener, W.W.	EA
13A01359-168	Angle-Stiffener, Vert.	EA
13A01359-169	Stiffener-Horiz., Upr.	EA
13A01359-170	Stiffener-Horiz., Lwr.	EA
13A01359-171	Angle, Wheel Well Side Lt.	EA
13A01359-172	Angle, Wheel Well Side Rt.	EA
13A01359-173	Angle, Wheel Well Half	EA
13A01359-174	Angle, Wheel Well Bulkhead #17	EA
13A01359-175	Stiffener-Aft. Skin, Aft. Lt.	EA
13A01359-176	Stiffener-Aft. Skin, Aft. Rt.	EA
13A01359-177	Stiffener-Aft. Skin, Fwd. Lt.	EA
13A01359-178	Stiffener-Aft. Skin, Fwd. Rt.	EA
13A01359-179	Angle, Aft. Attach #16	EA
13A01359-180	Horiz. Stiffener #17-Horiz.Pa	EA
13A01359-181	Horiz. Stiffener #17-Horiz.Pa	EA
13A01359-182	Stiffener, Side Skin	EA
13A01359-183	Stiffener, Side Skin	EA
13A01359-184	Stiffener, Side Skin	EA
13A01359-185	Stiffener, Side Skin	EA
13A01359-186	Stiffener, Side Skin	EA
13A01359-187	Stiffener, Wheel Well Fwd. Vert.	EA
13A01359-188	Stiffener, Wheel Well Aft. Vert.	EA
13A01374-001	Channel-Drag Strut, Float	EA
13A01381-001	Stiffener-Lwr., Center #4 Bul	EA
13A01381-002	Stiffener-Center #2 Bulk	EA
13A01381-003	Stiffener-Center #3 Bulk	EA
13A01381-004	Stiffener-Center #5 Bulk	EA
13A01381-005	Stiffener-Center #16 Bulk	EA
13A01381-006	Stiffener-Center #8 Bulk	EA
13A01381-008	Stiffener-Ctr.#7,10,12,13,&15	EA
13A01381-009	Stiffener-Center, Top, #14 Bu	EA
13A01381-010	Stiffener-Center, Middle, #14	EA
13A01381-011	Stiffener-Center, Bottom, #14	EA
13A01381-012	Stiffener, Center Bulk #9 & #	EA
13A01381-013	Stiffener-Ctr., Upr. #6 Bulk	EA
13A01381-014	Stiffener-Ctr., Lwr. #6 Bulk	EA
13A01381-020	Angle, #14 Bulkhead.	EA
13A01382-001	Angle-Stiffener, #4 Bulk Lt.	EA
13A01382-003	Cleat, Top Deck Rail	EA
13A01382-004	Stiffener-#3 Bulk, Rt.	EA
13A01382-005	Stiffener-#3 Bulk, Lt.	EA
13A01382-006	Angle-Top Skin Cross Tie	EA
13A01382-010	Rail-Top Skin, Mid. Aft. Rt.	EA
13A01382-011	Rail-Top Skin, Mid. Aft. Lt.	EA
13A01382-012	Rail-Top Skin, Aft. Rt.	EA
13A01382-013	Rail-Top Skin, Aft. Lt.	EA
13A01382-014	Rail-Top Deck, Fwd., Rt.	EA
13A01382-015	Rail-Top Deck, Fwd., Lt.	EA
13A01383-001	Sister Keel, Inner Aft. Lt.	EA
13A01383-002	Sister Keel, Inner Aft. Rt.	EA

Part Number	Part Description	Unit of Measure
13A01383-003	Sister Keel, Outer Lt.	EA
13A01383-004	Sister Keel, Outer Rt.	EA
13A01384-001	Gunwall, Lt.	EA
13A01384-002	Gunwall, Rt.	EA
13A01385-001	Chine, Fwd. Lt.	EA
13A01385-002	Chine, Fwd. Rt.	EA
13A01386-001	Chine, Aft. Lt.	EA
13A01386-002	Chine, Aft. Rt.	EA
13A01388-001	Wear Strip	EA
13A01426-006	Angle, Slide Tube Right	EA
13A01426-007	Angle, Slide Tube Left	EA
13A01427-007	Arm, Spreader Bar Fwd. Lt.	EA
13A01427-009	Arm-Panel #6 Bulk, Lt.	EA
13A01427-010	Arm-Panel #6 Bulk, Rt.	EA
13A01427-016	Angle, Trunion Horiz. Stiffener	EA
13A01427-017	Arm, Spreader Bar Panel Fwd.	EA
13A01427-018	Arm, Spreader Bar Panel Fwd.	FT
13A01427-019	Arm, Spreader Bar Inbd. Lt.	EA
13A01427-020	Arm, Spreader Bar Inbd. Rt.	EA
13A01427-022	Arm, Bulkhead Stn. #6 Panel	EA
13A01428-001	Angle, Trunion Spt., Lt.	EA
13A01428-002	Angle, Trunion Spt., Rt.	EA
13A01567-009	Cover Seal, 9.63" X 13.56"	EA
13A01567-010	Cover Seal, 13.69" X 17.16"	EA
13A02000-023	Strut Fitting Assy. Center Rear	EA
13A02000-024	Strut Fitting Assy. Center Rear	EA
13A02000-084	Strut Assy. Main Right.	EA
13A02000-094	Strut, Assy, Step, Pilot, DHC6	EA
13A02000-095	Strut Assy. Main Left.	EA
13A02000-096	Strut, Assy, Step, Cargo Dr, Rt, Fwd, DHC6	EA
13A02000-097	Strut, Assy, Step, Cargo Dr Lt, Fwd, DHC6	EA
13A02000-098	Strut, Assy, Step, Cargo Dr, Rt, Aft, DHC6	EA
13A02000-099	Strut, Assy, Step, Cargo Dr Lt, Mid, DHC6	EA
13A02000-101	Strut, Assy, Step, CoPilot, DHC6	EA
13A02000-127	Strut, Assy, Step, Cargo Dr Lt, Aft, DHC6	EA
13A02000-130	Strut, Assy, Fwd Right	EA
13A02000-131	Strut, Assy, Fwd Left	EA
13A02000-132	Strut, Kicker Right	EA
13A02000-133	Strut, Kicker Left	EA
13A02029-001	Fitting, Strut Fuselage Fwd.(Left)	EA
13A02029-002	Fitting, Strut Fuselage Fwd.(Right)	EA
13A02030-006	Fitting, Strut Fwd. Lower	EA
13A02056-006	Fitting, Strut Fwd. Upper Lt.	EA
13A02056-008	Fitting, Strut Mid. Upper Aft. Old Style	EA
13A02056-009	Fitting, Strut Mid. Upper Aft.	EA
13A02056-012	Fitting, Strut Fwd. Upper Rt.	EA
13A02070-004	Fitting & Support	EA
13A02073-002	Drag Strut Rt.	EA
13A02073-003	Drag Strut Lt.	EA
13A02078-002	Shim - Drag Wire Fitting	EA
13A02105-001	Strut - Main	EA
13A02150-084	Rib-Main Strut, Ctr. #1	EA
13A02150-085	Rib-Main Strut, Ctr. #2	EA

Part Number	Part Description	Unit of Measure
13A02150-086	Rib-Main Strut, Ctr. #3	EA
13A02150-087	Rib-Main Strut, Ctr. #4	EA
13A02150-088	Rib-Nose Main Strut, #1	EA
13A02150-089	Rib-Nose Main Strut, #4	EA
13A02150-090	Stiffener-Main Strut, Right.	EA
13A02150-105	Fairing, Skin Bottom Side Lt.	EA
13A02150-106	Fairing, Skin Fwd. Rt.	EA
13A02150-107	Fairing, Trailing Edge Lt.	EA
13A02150-109	Stiffener, Main Strut Left.	EA
13A02150-110	Fairing, Trailing Edge Rt.	EA
13A02150-111	Fairing, Skin Fwd. Lt.	EA
13A02150-112	Fairing, Skin Bottom Side Rt.	EA
13A02163-018	Gusset-#1 Rib, Main Strut, AT802	EA
13A02163-019	Gusset-#2 Rib, Main Strut	EA
13A02163-020	Gusset-#3 Rib, Main Strut	EA
13A02163-021	Gusset-#4 Rib, Main Strut	EA
13A02163-022	Fairing-Leading, Main Strut,Right.	EA
13A02163-027	Fairing-Ft. Section, Lt.	EA
13A02163-037	Doubler, Fuselage Step	EA
13A02356-035	Strut, Mid. Right.. Left. Jury	EA
13A02369-011	Step, Narrow, Pilot, DHC6	EA
13A02369-012	Step, Narrow, Copilot, DHC6	EA
13A02369-013	Step, Narrow, Extended, Cargo Dr LT, Airstair Dr, DHC6	EA
13A02369-014	Step, Narrow, Cargo Dr Rt., DHC6	EA
13A02369-024	Step, Cargo Baggage	EA
13A02454-002	Bushing, Lift Strut Center	EA
13A02454-003	Bushing, Spreader Bar Rear Fitting	EA
13A02469-001	Fitting, Drag Wire Up Front	EA
13A02474-001	Bushing, Main Strut	EA
13A02512-003	Bushing, Strut Mid Rear Upper	EA
13A02518-003	Pin, Main Strut	EA
13A02540-002	Fitting, Ft. Drag Wire	EA
13A03000-020	Spreader Bar Assy. Aft.	EA
13A03000-022	Spreader Bar Fitting Assy.	EA
13A03000-025	Spreader Bar Assy. Fwd. 13000	EA
13A03030-004	Fitting, Spreader Bar Aft.	EA
13A03030-005	Fitting, Spreader Bar Fwd.	EA
13A03280-003	Bushing-Ft. Spr. Bar, Jury St	EA
13A03335-004	Spreader Bar, Fwd.	EA
13A03390-003	Insert, Rr. Spr. Bar	EA
13A03473-001	Strut-Jury, Spreader Bar Fwd	EA
13A04000-055	Main Wheel Assembly	EA
13A04000-057	Axle Assembly	EA
13A04000-059	Shock Strut Assembly	EA
13A04000-067	Brake Line Assy.-#4 Alum. 3	EA
13A04000-068	Hose	EA
13A04000-069	Hose	EA
13A04000-191	Brake Assembly, Lt	EA
13A04000-192	Brake Assemblt, Rt	EA
13A04030-002	Trunnion, Right	EA
13A04030-003	Trunnion, Left	EA
13A04081-001	Drag Brace	EA
13A04098-003	Cap-Shock Strut -Top	EA

Part Number	Part Description	Unit of Measure
13A04098-003	Cap-Shock Strut -Top	EA
13A04098-004	Cap-Shock Strut-Bottom	EA
13A04098-004	Cap-Shock Strut-Bottom	EA
13A04119-001	Outer Cylinder Shock-Strut	EA
13A04231-003	Plug, Drag Tube	EA
13A04261-006	Metering Pin- Shock Strut	EA
13A04261-006	Metering Pin- Shock Strut	EA
13A04289-001	Tube, Main Gear	EA
13A04297-002	Gland Shock-Strut	EA
13A04315-001	Fitting, Axle	EA
13A04510-002	Axle, Main Gear	EA
13A04620-002	Spacer, Teflon	EA
13A05000-012	Assy, Ram, Main 13000 Old Style	EA
13A05064-002	Fitting Slide Tube Aft.	EA
13A05073-004	Cap Slide Tube Aft.	EA
13A05099-001	End, Slide Tube	EA
13A05116-005	Cylinder Main Gear Old Style	EA
13A05120-001	Slide Tube	EA
13A05316-001	Carriage-Main Gear Old Style	EA
13A06000-016	Nose Fork Wheel Spring Assy	EA
13A06000-016	Nose Fork Wheel Spring Assy	EA
13A06000-017	Yoke Assembly, Nose Gear	EA
13A06097-001	Axle, Nose	EA
13A06098-001	Yoke, Nose Sell Ass'y only	EA
13A06098-001	Yoke, Nose Sell Ass'y only	EA
13A06156-108	Deflector, Water Nose Wheel	EA
13A06199-007	Leg, Nose Fork-Lt.	EA
13A06199-008	Leg, Nose Fork Rt.	EA
13A06251-002	Spacer, Nose	EA
13A06314-001	Pivot Block, Nose Gear	EA
13A07000-012	Ass'y, Ram Nose Gear 13000	EA
13A07080-001	Trolley, Nose Gear	EA
13A07104-001	End, Nose Gear Track Left.	EA
13A07104-002	End, Nose Gear Track Right.	EA
13A07116-006	Cylinder Nose Gear Old Style	EA
13A07156-082	Cover Nose Box Top	EA
13A07156-083	Cover Nose Box Bottom	EA
13A07156-086	Spacer, Nose Box	EA
13A07156-087	Spacer, Nose box	EA
13A07160-011	Angle, Nose Box Bottom	EA
13A07185-004	Link Trolley Nose Gear	EA
13A07201-003	End Cap, Nose Box	EA
13A07212-002	Plate, Nose Spring Upr	EA
13A07232-001	Plate, Nose Spring Lwr.	EA
13A07257-003	Rod End, Nose Gear Ram	EA
13A07279-001	Plug - Ram Nose Gear	EA
13A07357-048	Angle, Nose Box Top	EA
13A07373-001	Side, Rail-Left	EA
13A07373-002	Side-Rail-Right	EA
13A07475-001	Axle Trolley	EA
13A07475-002	Axle Trolley Link	EA
13A07476-001	Rod, Nose Box	EA
13A07543-003	Roller, Trolley Bearing	EA

Part Number	Part Description	Unit of Measure
13A07602-006	Spacer, Nose Box	EA
13A07603-004	Slide Block Trolley	EA
13A08000-120	Bungee Cord Assy.	EA
13A09000-130	Hyd. Pump Assy.	EA
13A09000-131	Reservoir Assy.	EA
13A09000-132	Pump Mount Assy.	EA
13A09000-162	Manifold Assy. Rt. & Lt. Fl	EA
13A09150-084	Bracket-Hyd. Tee	EA
13A09156-092	Bracket-Pump Mount	EA
13A09156-110	Gusset Pump Mount	EA
13A09156-121	Gusset Pump Mount, Lt.	EA
13A09158-122	Cover, Hyd. Hand Pump	EA
13A09163-023	Support-Hyd. Hand Pump	EA
13A09341-003	Spacer-Pump Mount	EA
13A09348-012	Angle, Hydraulic Pump Mount	EA
13A09359-162	Angle, Hand Pump Mount	EA
13A09382-016	Angle, Pump Mtg. Upper	EA
13A09382-017	Angle, Pump Mtg. Lower	EA
13A11000-031	Wire Harness, Gear Advisory	EA
13A11000-039	Wire Harness	EA
13A11074-001	Operation Lever-Gear Box	EA
13A12000-008	Weldment, Finlet Mount	EA
13A12000-009	Weldment, Finlet Mount, Lower	EA
13A12000-010	Weldment, Finlet Mount, Upper	EA
13A12000-015	Finlet Assy. Tailplane Lwr.	EA
13A12000-018	Finlet Assy. Tailplane Upr.	EA
13A12000-021	Cover, Nose Wheel Assy.	EA
13A12000-023	Weldment-Finlet Attach, Fwd Spar, DHC-6	EA
13A12000-023	Weldment-Finlet Attach, Fwd Spar, DHC-6	EA
13A12000-024	Weldment-Finlet Attach, Aft Spar, DHC-6	EA
13A12000-054	Bracket Adapter Assy.	EA
13A12000-113	Fairing Assy. Center Lt.	EA
13A12000-114	Fairing Assy. Center Rt.	EA
13A12000-118	Stowage-Steering Cable	EA
13A12000-119	Stowage-Steering Cable	EA
13A12001-034	Clamp-Elev. Feel Spring	EA
13A12001-036	Clamp-Elev. Feel Spring	EA
13A12002-108	Doubler, Fuselage STA 111.0 Rt.	EA
13A12002-118	Doubler, Spar Fwd Tailplane	EA
13A12002-123	Cover, Nose Gear Hole	EA
13A12003-070	Doubler, Fuselage STA	EA
13A12003-075	Strap	EA
13A12004-085	Nut Plate Strip Ferring	EA
13A12004-086	Nut Plate Strip Ferring	EA
13A12004-087	Nut Plate Strip Ferring	EA
13A12004-088	Nut Plate Strip Ferring	EA
13A12005-229	Rib-Finlet, Tailplane, Upr.	EA
13A12005-230	Rib-Finlet, Tailplane, Lwr.	EA
13A12005-231	Rib-Finlet, Tailplane, Fwd.	EA
13A12005-232	Rib-Finlet, Tailplane, Ctr.	EA
13A12005-233	Rib-Finlet, Tailplane, Aft.	EA
13A12005-236	Finlet-Backhalf, Lwr.	EA
13A12005-237	Finlet-Backhalf, Upr.	EA

Part Number	Part Description	Unit of Measure
13A12005-238	Finlet-Fronthalf, Lwr.	EA
13A12005-239	Finlet-Fronthalf, Upr.	EA
13A12005-240	Lug-Attaching	EA
13A12005-242	Cover, Nose Wheel	EA
13A12005-243	Ring, Reinforcement-Cover	EA
13A12005-294	Lug-Attaching	EA
13A12005-298	Patch, Access(Nacelle)	EA
13A12008-126	Plate Anchor-Elev. Feel Sprin	EA
13A12156-093	Strap Stair Door Fwd.	EA
13A12156-094	Strap Stair Door Aft.	EA
13A12162-022	Cover, Step	EA
13A12162-023	Cover, Step	EA
13A12464-002	Plate, Bracket Finlet OBSOLETE	EA
13A12560-006	Tip-Fairing, Tailplane Finlet	EA
13A12564-001	Stall - Bar	EA
13A12599-007	Fairing, Aft. Lt.	EA
13A12599-008	Fairing, Aft. Rt.	EA
13A12599-009	Fairing, Mid. Lt.	EA
13A12599-010	Fairing, Mid. Rt.	EA
13A12599-011	Fairing, Fwd. Lt.	EA
13A12599-012	Fairing, Fwd. Rt.	EA
13A12652-001	Fin Cap-Finlet Spacer	EA
13S01000-069	#17 Bulkhead Assy.	EA
13S01000-244	Wheel Well Skin Assy. Rt.	EA
13S01000-247	Wheel Well Skin Assy. Lt.	EA
13S01000-303	Beaching Gear Lock Pin	EA
13S01002-121	Angle, Wheel Well Cover Support	EA
13S01002-122	Angle, Wheel Well Cover Support	EA
13S01022-001	Beaching Plate	EA
13S01150-120	Cover, Nose Box Bulkhead Stn. #4	EA
13S01150-127	Cover, Bulkhead Stn. #17	EA
13S01150-127	Cover, Bulkhead Stn. #17	EA
13S01150-128	Cover, Nose Bulkhead	EA
13S01150-129	Cover, Access Aft.	EA
13S01150-137	Vent Cover	EA
13S01150-209	#17 Bulkhead	EA
13S01150-210	#16 Bulk Body	EA
13S01150-211	Doubler, Zinc Anode	EA
13S01150-212	Doubler, Zinc Anode	EA
13S01150-213	Washer, Anode	EA
13S01150-214	Cover, #16 Bulkhead	EA
13S01154-020	Spacer, Keel	EA
13S01155-013	Angle, Wheel Well Skin Attach Lower	EA
13S01155-014	Angle, Wheel Well Skin Attach Lower	EA
13S01156-112	Hard Point Beaching Gear	EA
13S01156-113	Hard Point Beaching Gear	EA
13S01156-116	Shear Tie-Main Keel-Sta 16	EA
13S01156-117	Shear Tie-Main Keel-Sta 16	EA
13S01156-187	Gusset, Keel	EA
13S01156-188	Gusset, Keel	EA
13S01156-189	Spacer, Sister Keel	EA
13S01157-008	Spacer Afterbody Keel, Attach	EA
13S01160-019	Beaching Gear Wash	EA

Part Number	Part Description	Unit of Measure
13S01162-016	Angle, Wheel Well Skin Attach	EA
13S01162-017	Angle, Wheel Well Skin Attach	EA
13S01162-092	Skin, Aft, Forward,Left	EA
13S01162-093	Skin, Aft, Forward, Right	EA
13S01162-094	Gusset, Sister Keel	EA
13S01162-095	Gusset, Sister Keel	EA
13S01163-040	Angle, Wheel Well Skin Attach Upper	EA
13S01163-041	Angle, Wheel Well Skin Attach Upper	EA
13S01163-048	Doubler, Side Skin Beaching Gear	EA
13S01163-097	Shim, Cover	EA
13S01163-142	Top Skin, Center - Right	EA
13S01163-143	Angle, Aft. Attach Inner #16 Bulk	EA
13S01163-144	Angle, Aft. Attach Inner #16 Bulk	EA
13S01163-145	Angle, Aft. Attach Outer #16 Bulk	EA
13S01163-146	Angle, Aft. Attach Outer #16 Bulk	EA
13S01163-147	Spacer, Main Keel	EA
13S01204-003	Beaching Gear Wedge	EA
13S01227-002	Beaching Gear Attach	EA
13S01229-003	Gusset, Beaching Gear	EA
13S01229-004	Gusset, Beaching Gear	EA
13S01234-002	Spacer, Main Keel	EA
13S01234-002	Spacer, Main Keel	EA
13S01239-001	Pivot Blocks Beaching Gear	EA
13S01239-002	Yoke Beaching Gear	EA
13S01239-003	Fork Beaching Gear	EA
13S01239-004	Fork Beaching Gear	EA
13S01278-001	Handle	EA
13S01278-003	Spacer	EA
13S01357-067	Stiffener, Beaching Gear	EA
13S01359-189	Stiffener, Wheel Well Skin	EA
13S01359-190	Stiffener, Wheel Well Skin	EA
13S01359-193	Spacer, Nose Bumper Attach	EA
13S01359-253	Angle, #16 Bulkhead	EA
13S01359-254	Angle, #16 Bulkhead	EA
13S01359-255	Angle, Stiffener #16 Bulk	EA
13S01359-256	Angle, Stiffener #16 Bulk	EA
13S01359-257	Angle, #17 Bulkhead	EA
13S01359-258	Angle, #17 Bulkhead	EA
13S01359-259	Angle, Long Straight #16 Bulk	EA
13S01359-260	Angle, Long Straight #16 Bulk	EA
13S01387-004	Keel, Main Straight	EA
13S01409-005	Channel-Beaching Gear	EA
13S01736-001	Stablizing Eye Bolt	EA
13S01736-002	Stablizing Eye Bolt	EA
164-24501	Disc, Brake Chrome	EA
18-4457	Exhaust Protector Valve, 4"	EA
18-6045	Rudder Anode, 1-7/8", 1/8" Screw Connector, 20 LBS	EA
18-6046	Rudder Anode, 2-13/16", 2 Connectors 13/16" DIA, 1 Screw 1/4" DIA	EA
18-6056	Bracket	EA
187002	Spacer, 1/4" DIA	EA
205817-1	Screwlock Connector Shell, 1 Per Float Install	EA
20PS001EB500 W300W	Switch, Pressure obsolete, Male 3/8-24, 2 Wire Prong End	EA

Part Number	Part Description	Unit of Measure
2111	Stopper, Pump Out, Lake & Air, 1-1/4"	EA
21A01000-250	Bulkhead Stn. #14 Assy.	EA
21A01000-252	Bulkhead Stn. #6 Assy.	EA
21A01000-254	Wheel Well Panel Assy. Long Rt.	EA
21A01000-255	Wheel Well Panel Assy. Long Lt.	EA
21A01000-256	Wheel Well Panel Assy. Short Rt.	EA
21A01000-257	Wheel Well Panel Assy. Short Lt.	EA
21A01000-258	Cover Assy. Float Deck (Large)	EA
21A01000-259	Spreader Bar Panel Aft. Assy.	EA
21A01000-261	Bulkhead Stn. #4 Assy.	EA
21A01000-262	Bulkhead Stn. #10 Assy.	EA
21A01000-264	Bulkhead Stn. #8 Right Assy.	EA
21A01000-265	Bulkhead Stn. #3 Assy.	EA
21A01000-266	Bulkhead Stn. #7 Right Assy.	EA
21A01000-268	Cover Baggage Assy.	EA
21A01000-273	Cover Float Deck Assy. (2 Pump-Out Cups)	EA
21A01000-274	Splash Rail, LH Assy.	EA
21A01000-275	Splash Rail, RH Assy.	EA
21A01000-276	Chine to Side Skin Assy. Fwd. Inboard Rt.	EA
21A01000-277	Chine to Side Skin Assy. Fwd. Inboard Lt.	EA
21A01000-278	Chine to Side Skin Assy. Fwd. Outboard Rt.	EA
21A01000-279	Chine to Side Skin Assy. Fwd. Outboard Lt.	EA
21A01000-280	Chine to Side Skin Assy. Aft. Inboard Rt.	EA
21A01000-281	Chine to Side Skin Assy. Aft. Inboard Lt.	EA
21A01000-282	Chine to Side Skin Assy. Aft. Outboard Rt.	EA
21A01000-284	Cover Float Deck Assy. (Small)	EA
21A01000-289	Wheel Well Side Panel Left Assy.	EA
21A01000-290	Wheel Well Side Panel Right Assy.	EA
21A01000-291	Carry Thru Strap Left Assy.	EA
21A01000-294	Wheel Well Build-up Assy. Rt.	EA
21A01000-299	Bracket Top Rudder Assy.	EA
21A01000-299	Bracket Top Rudder Assy.	EA
21A01000-395	Bulkhead Stn. #11 Assy.	EA
21A01000-396	Bulkhead Stn. #12 Assy.	EA
21A01000-397	Bulkhead Stn. #13 Assy.	EA
21A01000-398	Sand Guard Assy.	EA
21A01000-427	Cover Side Access Assy.	EA
21A01002-130	Inspection Cover Support	EA
21A01002-131	Inspection Cover Support, Small	EA
21A01002-133	Wheel Well Panel, Short	EA
21A01002-135	Wheel Well Panel, Long	EA
21A01002-137	Cover - Left	EA
21A01002-138	Cover - Right	EA
21A01003-271	Splash Rail	EA
21A01004-089	Skin, Top Aft.	EA
21A01004-090	Skin, Top Aft.	EA
21A01004-091	Skin, Top Fwd. Left	EA
21A01004-092	Skin, Top Fwd Right	EA
21A01004-093	Skin, Side Outboard Fwd. Lt.	EA
21A01004-094	Skin, Side Outboard Fwd. Rt.	EA
21A01004-096	Skin, Side Inboard Fwd. Rt.	EA
21A01004-098	Skin, Side, Aft, Outboard, Right	EA
21A01004-099	Skin, Side, Aft, Inboard, Left	EA

Part Number	Part Description	Unit of Measure
21A01004-100	Skin, Side, Aft, Inboard, Right	EA
21A01004-101	Side Inspection Cover	EA
21A01004-103	Skin, Aft. Left	EA
21A01004-104	Skin, Aft. Right	EA
21A01004-106	Reinforcements, Baggage Cover End	EA
21A01005-259	Cover, Inspection Large	EA
21A01005-260	Cover, Inspection Small	EA
21A01005-265	Skin, Btm. Fwd.	EA
21A01005-265	Skin, Btm. Fwd.	EA
21A01005-267	Strap, Fwd. Bottom Left	EA
21A01005-268	Strap, Fwd. Bottom Right	EA
21A01005-270	Bottom Gussett	EA
21A01008-142	Keel, Aft.	EA
21A01010-012	Stiffener, Baggage Cover	EA
21A01017-002	Strap, Carry Through Long	EA
21A01017-003	Strap, Carry Through Long	EA
21A01017-004	Strap, Carrythru Long	EA
21A01017-005	Strap, Carrythru Long	EA
21A01017-006	Strap, Carrythru Short	EA
21A01017-007	Strap, Carrythru Short	EA
21A01019-003	Bracket, Top Rudder, Bearing	EA
21A01150-131	Jam, Baggage Door	EA
21A01150-132	Scallops See 21A01000-428 for part sale	EA
21A01150-133	Scallops See 21A01000-429 for part sales	EA
21A01150-135	Mud Flap, Doubler	EA
21A01150-136	Sand Guard	EA
21A01155-063	Splice - Main Keel - Repair	EA
21A01156-125	Spacer, Carry Through	EA
21A01156-126	Reinforcement, Wheel Well Inspection Cover	EA
21A01156-126	Reinforcement, Wheel Well Inspection Cover	EA
21A01156-131	Angle, Carry Thru	EA
21A01156-132	Angle, Carry Thru	EA
21A01158-163	Cover, Inspection	EA
21A01158-164	Bulkhead Stn. #14 Formed	EA
21A01158-166	Bulkhead St. 13 Formed Not to be sold See 21A01000-397	EA
21A01158-167	Bulkhead St. 12 Formed not to be sold See 21A01000-396	EA
21A01158-168	Bulkhead St. 11 Not to be sold See 21a01000-395	EA
21A01158-169	Bulkhead Stn. #10 Formed	EA
21A01158-174	Bulkhead Stn. #4 Formed	EA
21A01158-175	Support, Bulkhead #4, Formed	EA
21A01158-177	Support, Bulkhead #6	EA
21A01158-178	Bulkhead Stn. #5 Formed	EA
21A01158-179	Angle, Aft. Attach	EA
21A01158-180	Angle, Aft. Attach	EA
21A01158-181	Bulkhead Stn. #7 Formed Left	EA
21A01158-182	Bulkhead Stn. #7 Formed Right	EA
21A01158-187	Support, Bulkhead #7 Formed Lt	EA
21A01158-188	Support, Bulkhead #7 Formed Rt	EA
21A01158-189	Bulkhead #6	EA
21A01158-190	Bulkhead Stn. #8 Formed Rt	EA
21A01158-191	Bulkhead Stn. #8 Formed Lt	EA
21A01158-192	Support, Bulkhead #8 Formed Rt	EA
21A01158-193	Support, Bulkhead #8 Formed Lt	EA

Part Number	Part Description	Unit of Measure
21A01160-020	Plate Support, Wheel Well Rt	EA
21A01160-021	Plate Support, Wheel Well Lt	EA
21A01160-022	Plate Support, Wheel Well Wide Rt	EA
21A01160-023	Plate Support, Wheel Well Wide Lt	EA
21A01162-031	Doubler, Top Rail	EA
21A01162-032	Doubler, Top Rail	EA
21A01162-033	Doubler, Top Rail	EA
21A01162-034	Doubler, Top Rail	EA
21A01162-035	Cover, Baggage	EA
21A01163-065	Panel Support, Spreader Bar	EA
21A01163-066	Spreader Bar Panel	EA
21A01163-069	Angle, Splash Guard	EA
21A01203-001	Tie Down Cleat	EA
21A01280-004	Spacer, Cleat Tie Down	EA
21A01322-001	Bottom Stiffener	EA
21A01322-002	Bottom Stiffener	EA
21A01322-003	Bottom Stiffener	EA
21A01322-004	Bottom Stiffener	EA
21A01322-005	Bottom Stiffener	EA
21A01322-006	Bottom Stiffener	EA
21A01324-001	Gunwall Extrusion Lt	EA
21A01324-002	Gunwall Extrusion Rt	EA
21A01326-002	Angle, Baggage Door Jamb Rt	EA
21A01326-003	Angle, Baggage Door Jamb Lt	EA
21A01326-004	Angle Jamb, Baggage Door	EA
21A01326-005	Angle, Bulkhead Stn. #3 Support Lt	EA
21A01326-006	Angle, Bulkhead Stn. #3 Support Rt	EA
21A01326-008	Angle, Bulkhead to Panel #5 Support Rt	EA
21A01326-009	Angle, Side Bar Short Lt	EA
21A01326-010	Angle, Side Bar Short Rt	EA
21A01326-011	Angle, Side Bar Bulkhead #10 Lt	EA
21A01326-013	Angle, Bulkhead to Panel #5 Support Lt	EA
21A01326-014	Angle, Bulkhead to Panel #5 Support Rt	EA
21A01340-103	Angle, Inspection Cover	EA
21A01340-104	Reinforcement, Side Skin Aft.	EA
21A01340-105	Reinforcement, Side Skin Fwd.	EA
21A01340-106	Chine, Aft. Rt.	EA
21A01340-108	Chine, Fwd. Rt.	EA
21A01340-109	Chine, Fwd. Lt.	EA
21A01357-056	Angle, Wide Wheel Well Short	EA
21A01357-057	Angle, Wide Wheel Well Short	EA
21A01357-058	Angle, Wide Wheel Well Long	EA
21A01357-059	Angle, Wide Wheel Well Long	EA
21A01359-195	Angle, Wheel Well	EA
21A01359-196	Angle, Wheel Well	EA
21A01359-197	Angle, Long Wheel Well Long	EA
21A01359-198	Angle, Long Wheel Well Long	EA
21A01359-199	Angle, Long Wheel Well Short	EA
21A01359-200	Angle, Long Wheel Well Short	EA
21A01567-001	Cover Seal, Large	EA
21A01567-002	Cover Seal, Small	EA
21A01567-012	Gasket, Side Access 2100/3000	EA
21A01568-001	Baggage Door, Seal	EA

Part Number	Part Description	Unit of Measure
21A01569-001	Mud Flap	EA
21A01705-003	Bushing, Top Rudder-2100/2350	EA
21A01740-008	Hinge, Baggage Cover 3/4in-2100/2350	EA
21A01741-004	Hinge, Baggage Cover 1.5in-2100/2350	EA
21A02000-145	Strut Assy. Fwd. (172)	EA
21A02000-146	Strut Assy. Aft. (PA-18) & AD	EA
21A02000-147	Fitting-Assy Fuselage-Aft (PA-18/PA-12) Clamp On	EA
21A02000-158	Fuselage Fitting Assy. Aft. Rt. (Scout)	EA
21A02000-159	Fuselage Fitting Assy. Aft. Lt. (Scout)	EA
21A02000-162	Strut Assy. Aft. (PA-12)	EA
21A02000-163	Fitting, Assembly Aft Fuselage (PA-12)	EA
21A02000-167	Strut Assy. MID. (Scout)	EA
21A02000-168	Strut Assy. FWD (Scout)	EA
21A02000-169	Strut Assy. Aft. (PA12 Atlee Dodge)PART SALES ONLY	EA
21A02000-177	Tube Fitting-weldment strut (172)old style	EA
21A02000-178	Tube Fitting-weldment strut (172)old style	EA
21A02000-179	OBSOLETE Use 21A2000-146	EA
21A02000-180	Strut Assy. Fwd. (170)	EA
21A02000-181	Strut Assy. Mid. (170)	EA
21A02000-182	Strut Ass'y Rear (170)	EA
21A02000-217	Tube Fitting-weldment-strut Left(172)	EA
21A02000-220	Tube Fitting-weldment-strut Right(172)	EA
21A02000-223	Strut Assy. Fwd. (Husky)	EA
21A02000-224	Strut Assy. Mid. (Husky)	EA
21A02000-225	Strut Assy. Aft. (Husky)	EA
21A02000-228	Strut Assy. Mid. (172)	EA
21A02000-231	Strut Rear Scout	EA
21A02010-018	Cover, Fuselage Fitting-Rear(Husky/172)	EA
21A02019-004	Plate, Fuselage Base Aft. (PA-18,PA-12)	EA
21A02019-005	Plate, Fuselage Upper Aft. (PA-18,PA-12)	EA
21A02019-006	Plate, Fuselage Lower Aft. (PA-18,PA-12)	EA
21A02020-002	Block Spacer (PA18)	EA
21A02020-004	Wire Pull Fuselage-Rear(170)	EA
21A02020-005	Wire Pull Fuselage-Rear(170)	EA
21A02021-001	Fitting, Fuselage Fwd.Lt(Scout)	EA
21A02021-002	Fitting, Fuselage Fwd.Rt(Scout)	EA
21A02030-007	Fitting-Fuselage-Rear Lt (170)	EA
21A02030-008	Fitting-Fuselage-Rear Rt (170)	EA
21A02032-007	Block Aft. Strut (Scout)	EA
21A02045-018	Fitting, Fuselage Fwd. (Glastar)	EA
21A02053-008	Fitting, Strut Fwd.Upper (172)	EA
21A02055-002	Fitting, Lower Aft. Rt.(Husky)	EA
21A02055-003	Fitting, Lower Aft. Lt. (Husky)	EA
21A02055-004	Fitting, Strut-Fwd-Lwr (PA-18)	EA
21A02055-005	Fitting, Strut Aft. Lower Lt (PA-18)	EA
21A02055-006	Fitting, Strut Aft. Lower Rt (PA-18)	EA
21A02055-007	Fitting, Float Fuselage Upper Lt (PA-18)	EA
21A02055-008	Fitting, Float Fuselage Upper Rt (PA-18)	EA
21A02060-003	Clamp-Fitting-Aft fuselage (PA-12)	EA
21A02060-010	Fitting, Aft Lower (170)	EA
21A02060-011	Fitting, Aft Lower (170)	EA
21A02060-012	Fitting, Fwd. Lower (170)	EA
21A02062-007	Fitting, Lower Strut (Husky)	EA

Part Number	Part Description	Unit of Measure
21A02062-007	Fitting, Lower Strut (Husky)	EA
21A02062-008	Fitting, Upper Rear Strut (Husky)	EA
21A02062-009	Fitting, Swivel Strut-Lwr-Fwd (Glastar,172(21,23)	EA
21A02062-010	Fitting, Swivel Strut-Lwr-Aft (172 (21,23)	EA
21A02062-011	Fitting, Strut Aft. Upper (Glastar)	EA
21A02067-003	Fitting, Strut Main Fuselage Lt.(Husky)	EA
21A02067-004	Fitting, Strut Main Fuselage Rt.(Husky)	EA
21A02067-004	Fitting, Strut Main Fuselage Rt.(Husky)	EA
21A02067-005	Fitting, Float Aft. Left (Scout)	EA
21A02067-006	Fitting, Float Aft. Right (Scout)	EA
21A02071-003	Fitting, Float Fwd. (Scout)	EA
21A02075-002	Fitting, Wire Pull Fuselage (PA-18)	EA
21A02075-002	Fitting, Wire Pull Fuselage (PA-18)	EA
21A02084-001	Bushing, Strut-rear (PA-18,12,172)	EA
21A02092-002	Tube-Float AFT Fuselage Fitting(Glastar)	EA
21A02095-003	Bushing Fuselage fitting (172)	EA
21A02095-004	Bushing, Fitting Strut (172)	EA
21A02154-008	Washer-Spacer-Wire Pull	EA
21A02158-204	Shim, Aft Fitting (Scout)	EA
21A02180-002	Shim - Strut Fitting	EA
21A02206-005	Block-strut fitting-Atlee Dodge	EA
21A02334-023	Strut, Fwd. (PA-18)	EA
21A02334-024	Strut, Mid. (PA-18)	EA
21A02334-033	Strut, Mid. (Glastar)	EA
21A02334-034	Strut, Aft. (Glastar)	EA
21A02334-044	Strut, Fwd. (Glastar)	EA
21A02369-031	Step,Fueling, Left (PA-18, PA-12)	EA
21A02369-032	Step, Boarding, Right (PA-18, PA-12)	EA
21A02369-033	Step, Lt. (170)	EA
21A02369-035	Step (Glastar & 172)	EA
21A02369-038	Step, Rt. (Scout)	EA
21A02369-039	Step, Lt. (Scout)(182)	EA
21A02369-053	Step, Boarding, Right (Husky)	EA
21A02369-054	Step, Rt. (170)	EA
21A02369-055	Step, Fueling, Left (Husky)	EA
21A02455-001	U-Bolt (PA-18,Maule)	EA
21A02456-001	Angle Bolt (PA-18)	EA
21A02462-004	Wire Pull(Glastar,Maule,Husky,Scout,170,PA-18)	EA
21A02462-005	Wire Pull(Glastar,PA-18,206)	EA
21A02462-008	Wire Pull(Maule-23,3,PA-12,)	EA
21A02462-017	Support, Short Leg (Scout)	EA
21A02472-005	Rear Fuse Fitting (Atlee Dodge)old style	EA
21A02487-002	Plate, Saddle (PA-18,Scout)	EA
21A02519-003	Lug-Wire Pull Fwd. (Husky)	EA
21A02519-004	Lug -Wire Pull Aft. (Husky)	EA
21A02519-005	Wire Pull Aft.(Husky,Maule-3,)	EA
21A02519-007	Wire Pull Cross Wire (Scout,PA-12,172-21,23,)	EA
21A02519-008	Wire Pull Cross Wire (172-21,23)	EA
21A02519-009	Wire Pull Cross Wire (172)	EA
21A02535-016	Pad Aft. Fitting (Scout)	EA
21A02584-001	Ring, Support - Fitting - 172	EA
21A03032-006	Fitting-Deck Strut (2100/2350)	EA
21A03115-001	Tube-Spreader Bar Mounting (21/23)	EA

Part Number	Part Description	Unit of Measure
21A03154-007	Cap (2100/2350)	EA
21A03214-003	Spacer (2100/2350)	EA
21A04000-073	Shock Strut Assy, 2100	EA
21A04000-074	Weldment, Shock Strut End, Upper(21/23)	EA
21A04000-075	Weldment, Shock Strut End, Lower (21/23)	EA
21A04000-079	Alum Brake Line (21/23)	EA
21A04000-080	Hyd. Line Assy. Brake Line Float to Plane	EA
21A04000-094	Drag Link, Main Axle Assembly Rt.(2100)	EA
21A04000-095	Drag Link, Main Axle Assembly Lt.(2100)	EA
21A04000-096	Brake Assy. Rt.(2100)	EA
21A04000-097	Brake Assy. Lt.(2100)	EA
21A04162-025	Spacer, Shock Strut (21/23)	EA
21A04263-007	Grease Insert (21/23/3/34)	EA
21A04454-006	Shaft-Axle Shock Strut Upper (21/23)	EA
21A04503-004	Pin Retaining Shock Strut	EA
21A04547-004	Bushing (2100/2350)	EA
21A04585-002	Sleeve-shock strut retainer (21/23)	EA
21A05000-016	Weldment, Arm Retract, Right (21,23)	EA
21A05000-017	Weldment, Arm Retract, Left (21,23)	EA
21A05000-018	Weldment, Arm Retract Drag Link(21/23)	EA
21A05000-019	Bolt, Main Gear	EA
21A05000-021	Assy-Cylinder, Main Gear, RT, 2100/2350	EA
21A05000-022	Arm Gear Indicator Assembly (21/23)	EA
21A05000-030	Assy-Cylinder, Main Gear, LT, 2100/2350	EA
21A05000-035	Cable, 2100 Gear Indicator	EA
21A05003-079	Plate, Main Gear Small (21/23)	EA
21A05114-005	Track, Main Gear (21/23)	EA
21A05114-006	Track, Main Gear (21/23)	EA
21A05260-005	Spacer, Hyd. Cylinder (21/23)	EA
21A05269-002	Arm, Gear Indicator (21/23)	EA
21A05520-003	Roller, Shock Strut Retract (21/23/3/34)	EA
21A05705-002	Clevis-Retract Arm, Main Gear (21/2350)	EA
21A06000-032	Wheel Modification, Nose (Part Sales)	EA
21A06020-001	Fork, Nose Gear (21,23)	EA
21A06160-053	Plate, Pressure	EA
21A06166-001	Bearing Plate, Nose Spring Upper(21,23,3,34)	EA
21A06194-005	Block - Spring	EA
21A06213-006	Tow Hook-Nose Gear(21,23,3,34)	EA
21A06237-001	Bearing Plate, Nose Spring Lower(21,23,3,34)	EA
21A06318-005	Pivot Block, Nose Gear (21,23,3,34)	EA
21A06475-006	Friction Cup	EA
21A06476-003	Pin Anti Rotate Axle	EA
21A06605-002	Nose Wheel Plunger(21,23,3,34)	EA
21A06705-005	Spring, Friction	EA
21A07000-015	Nose Box Assembly, 2100/2350	EA
21A07032-005	Link Trolley, Nose Gear(21,23,3,34)	EA
21A07094-002	Rod End, Nose Gear Ram (21,23,3,34)	EA
21A07187-009	Trolley Nose Gear	EA
21A07237-002	End Cap, Nose Box(21,23,3,34)	EA
21A07349-003	End, Nose Gear Track Left	EA
21A07349-004	End, Nose Gear Track Right	EA
21A07359-194	Angle, Nose Box Top	EA
21A07509-007	Axle Trolley Link(21,23,3,34)	EA

Part Number	Part Description	Unit of Measure
21A08000-123	Assy-Water Rudder Blade, 2100/2350	EA
21A08000-124	Pulley assy.Rudder cable (21,23)	EA
21A08000-125	Pulley Assy.- Cable(21,23,30)	EA
21A08000-126	Pulley Assy.Rudder Cable(21,23)	EA
21A08000-128	Retract Handle Assembly w/Cable(21 only)	EA
21A08000-129	Fairlead Tube Assy. (PA-18/Husky)	EA
21A08000-132	Cable Assy. Balance 2 in	EA
21A08000-133	Cable Assy. Retract 19ft(21 only)	EA
21A08000-134	Cable Assy. Retract 10ft(21 only)	EA
21A08000-135	Cable Assy. Steering 16ft(21 only)	EA
21A08000-136	Cable Assy. Balance 14ft(21 only)	EA
21A08000-137	Cable Assy. Retract 29in (Husky)	EA
21A08000-138	Pulley Assy. Bracket (172)(21,23,3)	EA
21A08000-149	Retract Handle, Assy (170)	EA
21A08000-152	Assy-Water Rudder Post, 2100 Old Style	EA
21A08000-157	Bracket Assy.Rudder Lower(21,23)	EA
21A08000-157	Bracket Assy.Rudder Lower(21,23)	EA
21A08003-100	Bracket Retract Handle(2100 only)	EA
21A08008-150	Pulley Bracket(21,23)	EA
21A08017-006	Blade-Water Rudder, 2100	EA
21A08019-001	Pivot Arm, Left, Water Rudder (21,23)	EA
21A08019-002	Pivot Arm, Right, Water Rudder(21,23)	EA
21A08154-009	Stop-Water Rudder, Steering, Scout,170,PA-12,18,	EA
21A08156-130	Plate-Water Rudder Stop, 21,23	EA
21A08163-068	Bracket, Balance Cable Pulley(21,23)	EA
21A08204-004	Adapter, Rudder Horn(Scout)	EA
21A08230-002	Spacer, Pulley Bracket(21,23,3,34)	EA
21A08274-007	Handle-Round, Retract(21,23,3)	EA
21A08274-009	Cable Holder(3/Maule)	EA
21A08359-201	Rudder, Horn Extension(Husky/172)	EA
21A08487-001	Retainer Clip,Water Rudder Retract(21,23,3)	EA
21A08602-009	Cable Guide-Water Rudder(21,23)	EA
21A08648-002	Bumper-Water Rudder Down, 2100/2350	EA
21A08747-001	Retract Chain (21,23)	EA
21A09000-194	Hand Pump Assy.(21,23,3)	EA
21A09000-195	Hyd. Power Pack Assy. (Husky)(w/o ext bag)	EA
21A09000-196	Hyd. Bracket Assy.(21,23)	EA
21A09000-197	Hyd. Line Assy. Or use 21A09000-201	EA
21A09000-198	Hyd. Line Assy.	EA
21A09000-199	Hyd. Line Assy.	EA
21A09000-201	Hyd. Line Assy.Or use 21A09000-197	EA
21A09000-203	Hyd. Line Assy.	EA
21A09000-209	Hyd. Pump Bracket Assy. (PA18)	EA
21A09000-209	Hyd. Pump Bracket Assy. (PA18)	EA
21A09000-210	Hyd. Power Pack Assy. 12V (PA18/PA12)	EA
21A09000-215	Hyd. Pump Assy. 12V	EA
21A09000-217	Hyd. Pump Bracket Assy. (Scout)	EA
21A09000-239	Hyd. Power Pack Assy. 12V (172/182)	EA
21A09000-240	Manifold Assy.(172)	EA
21A09000-288	Hyd. Power Pack Assy. 12V (Husky)w/ext bag	EA
21A09000-290	Angle, Hyd. Pump Mount Lower (Husky)	EA
21A09002-136	Tower-Hyd pump (Scout)	EA
21A09004-105	Mount, Hyd. Pump (Scout)	EA

Part Number	Part Description	Unit of Measure
21A09005-261	Mounting Plate Hyd. Pump (Husky)	EA
21A09005-262	Clip, Magnetic Indicator	EA
21A09005-264	Support Hyd Pump Attach(172)	EA
21A09008-151	Bracket Fwd. Hyd. Pump(Scout)	EA
21A09008-152	Bracket, Hyd. Pump Rear (Scout)	EA
21A09010-013	Plate Support Hyd. Pump (Husky)	EA
21A09156-129	Bracket-Hand Pump	EA
21A09158-195	Hand Pump Tag Bracket	EA
21A09162-028	Plate Hyd Pump(PA-18)	EA
21A09162-029	Bracket, Hydraulic Pump(PA-18)	EA
21A09162-057	Cover, Bracket, Hyd. Pump	EA
21A09162-059	Angle, Upper Bracket, Hyd Pump	EA
21A09162-061	Plate, Bottom Bracket, Hyd. pump	EA
21A09163-095	Angle, Hyd. Pump Mount Upper (Husky)	EA
21A09163-096	Angle, Hyd. Pump Mount Lower (Husky)	EA
21A09215-002	Clamp, Hydraulic Pump Assy.	EA
21A09274-006	Stand Pipe, Hydraulic Pump	EA
21A09340-132	Angle, Hydraulic Pump Btm.(PA-18)	EA
21A09348-020	Angle, Pump Mount(172)	EA
21A09352-028	Angle, Hydraulic Pump Lower(Husky)	EA
21A09352-030	Angle, MT Hydraulic Pump(Husky)	EA
21A09396-001	Handle, Emergency Pump	EA
21A11000-009	Gear Selector Assy. Round 12V	EA
21A11000-010	Gear Selector Assy. Square 12V	EA
21A11000-010	Gear Selector Assy. Square 12V	EA
21A11000-018	Gear Selector Assy. Square 24V	EA
21A11000-019	Gear Selector Assy. Round 24V	EA
21A11100-013	Hot Wire	EA
21A11158-194	Cover, Control Head(Above Dash)	EA
21A11179-001	Block, Gear Control(21,23,3,34)	EA
21A11179-002	Block Gear Control RECT 6(21,23,3,34)	EA
21A11259-003	Gear Switch Knob(21,23,3,34)	EA
21A11259-003	Gear Switch Knob(21,23,3,34)	EA
21A12000-039	Reinforcement Fuselage Assy. (Husky)	EA
21A12000-040	Reinforcement Fuselage Assy. (Husky)	EA
21A12000-041	Return Spring Assy. Water Rudder(Husky)	EA
21A12004-104	Former-Ventral Fin Fwd.(2100 only)	EA
21A12004-105	Former-Ventral Fin Center(2100 only)	EA
21A12004-106	Former-Ventral Fin Aft(2100 only)	EA
21A12004-146	Gusset(PA-18/G.W.)	EA
21A12004-147	Gusset(PA-18/G.W.)	EA
21A12004-193	Angle,Wing Rib PA-18 GW Increase	EA
21A12008-143	Reinforcement Fuselage(Husky)	EA
21A12008-144	Reinforcement Fuselage(Husky)	EA
21A12008-145	Reinforcement Fuselage(Husky)	EA
21A12008-146	Reinforcement Fuselage(Husky)	EA
21A12008-147	Reinforcement Fuselage(Husky)	EA
21A12008-148	Reinforcement Fuselage(Husky)	EA
21A12008-149	Reinforcement Fuselage(Husky)	EA
21A12008-175	Reinforcement, Fuselage(PA-12)	EA
21A12010-014	Center Belly Pan (Husky)	EA
21A12010-015	Belly Enclosure(Husky)	EA
21A12010-016	Flywire Enclosure (Husky)	EA

Part Number	Part Description	Unit of Measure
21A12010-017	Flywire Enclosure (Husky)	EA
21A12157-015	Spacer, Fuse. Reinforcement Clamp Wide Body PA-18	EA
21A12158-200	Gusset Spar Attach(PA-18/G.W.)	EA
21A12214-004	Pivot Handle(21,23,3,34)	EA
21A12240-001	Doubler Wing	EA
21A12275-002	Engine Spacer(Glastar)	EA
21A12320-001	Cap Wing Spar Reinforcement(PA-18)	EA
21A12359-202	Horn, Water Rudder(PA-18/Scout)	EA
21A12414-005	Handle, Emergency Hand Pump(21,23,3,34)	EA
21A12586-001	Clamp - Fuselage Reinf. - Wide- PA-18	EA
21A16206-004	Brace Fuselage (PA-18)	EA
21A16491-007	Spring Attach,Plate	EA
21A16576-001	Support, Main Gear (PA-18)	EA
21A17158-262	Housing Gear Control(Under Dash)	EA
21S01000-309	Bulkhead Assy. Stn. #8	EA
21S01000-315	Skin Assy. Side Inboard Fwd. Lt.	EA
21S01000-316	Skin Assy. Side Outboard Fwd. Rt.	EA
21S01000-317	Skin Assy. Side Outboard Fwd. Lt.	EA
21S01000-322	Bulkhead Assy. Stn. #10	EA
21S01000-366	Cover Nose Bulkhead, Assy.	EA
21S01000-399	Cover Assy. Inspection (2100)	EA
21S01004-122	Skin, Side Outboard Fwd. Rt.	EA
21S01004-123	Skin, Side Outboard Fwd. Lt.	EA
21S01004-125	Skin, Side Inboard Fwd. Lt.	EA
21S01004-130	Skin, Aft. Rt.	EA
21S01004-131	Skin, Aft. Lt.	EA
21S01004-134	Skin, Top Fwd.	EA
21S01004-135	Skin, Top Fwd.	EA
21S01004-136	Skin, Top Aft.	EA
21S01008-171	Access Cover Straight	EA
21S01008-172	Keel, Aft. Straight	EA
21S01150-134	Cover, Nose Bulkhead	EA
21S01158-203	Angle, Bulkhead #8 Aft.	EA
21S01163-038	Gusset Support Afterbody	EA
21S01340-129	Angle, Bulkhead Stn. #10 Stiffener	EA
21S01567-013	Gasket(21,23)	EA
2203C-1	Check Valve, Keppener, 1/4"	EA
2-2A17-054	Anchor Nut, 1/4"	EA
2326	Clip, Plastic, Pumpout, White, 2pcs, w/4 screws	EA
23A01000-298	Bulkhead Stn. #15 Assy.	EA
23A01000-302	Spreader Bar #6 Assy.	EA
23A01000-327	Skin Btm. Left Assy.	EA
23A01000-327MOD	Bottom Skin Assy.	EA
23A01000-328	Skin Btm. Right Assy.	EA
23A01000-328MOD	Bottom Skin Assy.	EA
23A01000-385	Skin Side Outboard Fwd. Lt. Assy.	EA
23A01000-386	Skin Side Outboard Fwd. Rt. Assy.	EA
23A01000-387	Skin Side Inboard Fwd. Lt. Assy.	EA
23A01000-388	Skin Side Inboard Fwd. Rt. Assy.	EA
23A01000-389	Skin Side Outboard Aft. Lt. Assy.	EA
23A01000-390	Skin Side Outboard Aft. Rt. Assy.	EA

Part Number	Part Description	Unit of Measure
23A01000-391	Skin Side Inboard Aft. Lt. Assy.	EA
23A01000-392	Skin Side Inboard Aft. Rt. Assy.	EA
23A01004-108	Skin, Side Outboard Fwd. Rt.	EA
23A01004-109	Skin, Side Outboard Fwd. Lt.	EA
23A01004-110	Skin, Side Inboard Fwd. Rt.	EA
23A01004-111	Skin, Side Inboard Fwd. Lt.	EA
23A01004-112	Skin, Side Outboard Aft. Rt.	EA
23A01004-113	Skin, Side Outboard Aft. Lt.	EA
23A01004-114	Skin, Side Inboard Aft. Rt.	EA
23A01004-115	Skin, Side Inboard Aft. Lt.	EA
23A01004-116	Skin, Top Fwd. Rt.	EA
23A01004-117	Skin, Top Fwd. Lt.	EA
23A01004-118	Skin, Top Aft. Rt.	EA
23A01004-119	Skin, Top Aft. Lt.	EA
23A01004-120	Skin, Aft. Rt.	EA
23A01004-121	Skin, Aft. Lt.	EA
23A01005-292	Skin, Btm. Fwd.	EA
23A01005-295	Strap Fwd Bottom L	EA
23A01005-296	Strap Fwd Bottom R	EA
23A01008-170	Keel, Aft.	EA
23A01158-196	Bulkhead Stn. #5	EA
23A01158-197	Bulkhead Stn. #6	EA
23A01158-198	Bulkhead Stn. #15	EA
23A01321-002	Keel, Main	EA
23A01324-003	Gunwall, Lt.	EA
23A01324-004	Gunwall, Rt.	EA
23A01326-016	Angle, bulkhead Stn. #5	EA
23A01326-017	Angle, bulkhead Stn. #5	EA
23A01326-018	Angle, bulkhead Stn. #5	EA
23A01326-019	Angle, bulkhead Stn. #5	EA
23A01340-010	Chine, Aft. Rt.	EA
23A01340-011	Chine, Aft. Lt.	EA
23A01340-012	Chine, Fwd. Rt.	EA
23A01340-013	Chine, Fwd. Lt.	EA
23A01340-114	Side Skin Stiffners	EA
23A01340-116	Side Skin Stiffners	EA
23A01340-117	Side Skin Stiffners	EA
23A01340-118	Side Skin Stiffners	EA
23A02000-166	Strut Assy. Aft. (Maule)	EA
23A02000-174	Strut Assy. Fwd. (172 XP)	EA
23A02000-219	Fuselage Fitting Weldment Assy(172XP)	EA
23A02000-221	Strut Assembly,Fwd Maule	EA
23A02000-222	Fuselage Fitting Weldment Assy(172XP)	EA
23A02000-223	Strut Assembly, Center Maule	EA
23A02000-230	Strut Assy. Mid. (172XP)	EA
23A02020-003	Spacer, Fuselage Aft. (Maule) USE RM044	EA
23A02053-010	Fitting, Strut Fwd.Upper(172XP)	EA
23A02055-009	Fitting, Float Aft. Lt. (Maule)	EA
23A02055-010	Fitting, Float Aft. Rt. (Maule)	EA
23A02055-011	Fitting, Fuselage Fwd. Lt.(Maule)	EA
23A02055-012	Fitting, Fuselage Fwd.Rt.(Maule)	EA
23A02060-005	Fitting, Fwd (Maule)	EA
23A02369-036	Step, Rt. (Maule)	EA

Part Number	Part Description	Unit of Measure
23A02369-037	Step, Lt. (Maule)	EA
23A02472-003	Plate, Strut Fitting - 172	EA
23A02472-004	Plate, Strut Fitting - 172	EA
23A02552-003	Tube-Fitting - Strut (Left)	EA
23A02552-004	Tube-Fitting - Strut (Right)	EA
23A04000-109	Torque Plate Assy. Lt. OLD STYLE	EA
23A04000-110	Torque Plate Assy. Rt. OLD STYLE	EA
23A04000-114	Brake Assembly, Upper Old Style	EA
23A04000-115	Brake Assembly, Upper Old Style	EA
23A04000-116	Brake Assembly, Lower Old Style	EA
23A04000-117	Brake Assembly, Lower Old Style	EA
23A04000-118	Brake Line Ass'y	EA
23A04454-009	Bushing, Torque Plate Old Style	EA
23A08000-139	Water Rudder Blade Assy. Old Style	EA
23A08000-140	Cable Assy. Balance (127 3/8")	EA
23A08000-141	Cable Assy. Steering (112")	EA
23A08000-142	Cable Assy. Retract (180 1/16")	EA
23A08000-143	Cable Assy. Retract (132 1/16")	EA
23A08216-002	Stop, Water Rudder	EA
23A08216-002	Stop, Water Rudder	EA
23A08234-003	Stop Water Rudder Up(172)	EA
23A09000-224	Bracket Assy. Hyd. Pump(Maule)	EA
23A09000-225	Hyd. Power Pack Assy. 12V (Maule)	EA
23A09000-276	Hyd. Power Pack Assy. 24V (Maule)	EA
23A09008-153	Plate, Hyd. Pump Bracket(Maule)	EA
23A09215-003	Clamp, Hyd. Pump(Maule)	EA
23A09352-031	Angle, Pump Bracket Top(Maule)	EA
23A09352-032	Angle, Pump Bracket Btm.(Maule)	EA
23A12004-107	Gear Cover (Maule)	EA
23A12163-070	Support, Water Rudder Pulley,(23,3)(Maule)	EA
23S01000-312	Skin Assy. Top Rt.	EA
23S01000-318	Skin Assy. Side Fwd. Inboard Rt.	EA
23S01000-320	Skin Assy. Side Fwd. Outboard Rt.	EA
23S01000-321	Skin Assy. Side Fwd. Ouboard Lt.	EA
23S01004-126	Skin, Side Fwd. Outboard Rt.	EA
23S01004-127	Skin, Side Fwd. Outboard Lt.	EA
23S01004-128	Skin, Side Fwd. Inboard Rt.	EA
23S01004-138	Skin, Top Fwd Rt	EA
23S01004-139	Skin, Top Fwd Lt.	EA
23S01004-140	Skin, Top Aft. Rt.	EA
23S01004-141	Skin, Top Aft. Lt.	EA
23S01008-173	Keel, Aft. Straight	EA
23S01008-173B	Blank, (See Finished Part Number)	EA
23S01321-003	Keel, Main (123")	EA
2452-048	Barrel Nut, 1/4", see 8A02458-004	EA
2552-064RET	Retainer, 1/2" Bottom	EA
2600102-41	Line Assembly, Medium L Shape	EA
2600102-42	Line Assembly, Twice Bent Line	EA
2600102-43	Line Assembly, Twice Bent Line	EA
2600102-44	Line Assembly, Large L Shape	EA
2600102-45	Line Assembly, Straight Line	EA
2600102-47	Line Assembly, Small L Shape	EA

Part Number	Part Description	Unit of Measure
2600102-49	Line Assembly, Small loop J Shape	EA
2600102-67	Line Assembly, Twice Bent Line	EA
2600102-68	Line Assembly, U Shape	EA
2600102-69	Line Assembly, J Shape	EA
2601048-200	Housing Connector Assembly	EA
2601048-200	Housing Connector Assembly	EA
2703225	Magnet, Probe Jack, Dexter, 1-1/4" DIA, 1" Height	EA
301-018-420	Tire, 5.00 x 5 - 10, Nose 8000	EA
30A01000-287	Sand Guard, Wheel Well Left Assy.	EA
30A01000-288	Sand Guard, Wheel Well Right Assy.	EA
30A01000-324	Cover Assembly Baggage	EA
30A01000-329	Bulkhead Nose Assy.	EA
30A01000-330	Bulkhead Stn. #3 Assy.	EA
30A01000-331	Bulkhead Stn. #4 Assy.	EA
30A01000-332	Bulkhead Stn. #6 Assy.	EA
30A01000-333	Bulkhead Stn. #7 Assy.	EA
30A01000-334	Bulkhead Stn. #8 Right Assy.	EA
30A01000-335	Bulkhead Stn. #8 Left Assy.	EA
30A01000-336	Bulkhead Stn. #5 Assy.	EA
30A01000-337	Bulkhead Stn. #9 Left Assy.	EA
30A01000-338	Bulkhead Stn. #9 Right Assy.	EA
30A01000-339	Bulkhead Stn. #10 Assy.	EA
30A01000-340	Bulkhead Stn. #11 Assy.	EA
30A01000-342	Bulkhead Stn. #13 Assy.	EA
30A01000-345	Wheel Well Panel Assy. Short Lt.	EA
30A01000-346	Wheel Well Panel Assy. Long Rt.	EA
30A01000-347	Wheel Well Panel Assy. Long Lt.	EA
30A01000-348	Wheel Well Panel Assy. Rt.	EA
30A01000-349	Wheel Well Panel Assy. Lt.	EA
30A01000-350	Wheel Well Panel Assy. Short Rt.	EA
30A01000-351	Wheel Well Build-Up Lt. Assy.	EA
30A01000-352	Wheel Well Build-Up Rt. Assy.	EA
30A01000-354	Panel Spreader Bar Fwd. Assy.	EA
30A01000-358	Step Boarding Float Assy.	EA
30A01000-360	Cover Inspection Assy. (With Pump-Out Cup)	EA
30A01000-361	Carry Thru Strap Assy. (Right)	EA
30A01000-362	Carry Thru Strap Left Assy.	EA
30A01000-363	Skin Top Left Assy.	EA
30A01000-364	Skin Top Right Assy.	EA
30A01000-367	Skin Assy. Side Fwd. Lt. (3000)(3450)	EA
30A01000-368	Skin Assy. Side Fwd. Rt. (3000)(3450)	EA
30A01000-377	Skin Assy. Side Outboard Mid Lt.	EA
30A01000-378	Skin Assy. Side Outboard Mid Rt.	EA
30A01000-379	Skin Assy. Side Inboard Mid. Lt.	EA
30A01000-380	Skin Assy. Side Inboard Mid Rt.	EA
30A01000-381	Skin Assy. Side Outboard Aft. Lt.	EA
30A01000-382	Skin Assy. Side Outboard Aft. Rt.	EA
30A01000-383	Skin Assy. Side Inboard Aft. Lt.	EA
30A01000-384	Skin Assy. Side Inboard Aft. Rt.	EA
30A01002-194	Wheel Well Panel, Short	EA
30A01002-197	Wheel Well Panel, Long	EA
30A01002-202	Cover, Gear Indicator R	EA
30A01002-203	Cover, Gear Indicator L	EA

Part Number	Part Description	Unit of Measure
30A01004-144	Baggage Stiffener, Center & Rear	EA
30A01004-145	Baggage Stiffener, Front	EA
30A01148-001	Skin, Top Fwd. Lt.	EA
30A01148-003	Skin, Top Aft. Lt.	EA
30A01148-004	Skin, Top Aft. Rt.	EA
30A01148-005	Skin, Side Fwd. Lt.	EA
30A01148-006	Skin, Side Fwd. Rt.	EA
30A01148-007	Skin, Side Inboard Mid Lt.&RT.	EA
30A01148-009	Skin, Side Inboard Aft. Lt.&RT.	EA
30A01148-011	Skin, Side Outboard Mid Lt.&RT.	EA
30A01148-013	Skin, Side Outboard Aft. Lt.&RT.	EA
30A01148-037	Skin, Btm. Aft.	EA
30A01148-038	Skin, Btm. Aft.	EA
30A01150-141	Doubler, Mud Flap	EA
30A01150-149	Terminal Mount	EA
30A01151-102	Skin, Btm. Fwd. Rt.	EA
30A01151-103	Skin, Btm. Fwd. Lt.	EA
30A01155-031	Spreader Bar Panel, Fwd.	EA
30A01155-032	Spreader Bar Panel, Bulk #5 & #10	EA
30A01155-033	Bracket, Bulk #14 Pulley Attach	EA
30A01155-034	Bracket, Bulk #14 Pulley Attach	EA
30A01155-035	Wheel Well Doubler	EA
30A01155-035S	Wheel Well Doubler, Short	EA
30A01155-036	Wheel Well Doubler	EA
30A01155-036S	Wheel Well Doubler, Short	EA
30A01155-037	Wheel Well Doubler Rear	EA
30A01155-037S	Wheel Well Doubler, Short	EA
30A01155-038	Wheel Well Doubler Rear	EA
30A01155-038S	Wheel Well Doubler, Short	EA
30A01155-058	Aft. Keel Repair 3000/3450	EA
30A01155-059	Fwd. Chine Repair 3000/3450	EA
30A01155-060	Main Keel Repair 3000/3450	EA
30A01155-061	Aft. Chine Repair 3000/3450	EA
30A01155-062	Gunwall Repair 3000/3450	EA
30A01156-125	Angle, Attach #10 Spreader Bar Panel	EA
30A01156-138	Carry Thru Strap, Short	EA
30A01156-139	Carry Thru Strap, Long	EA
30A01156-140	Carry Thru Strap Long	EA
30A01156-141	Carry Thru Strap Long	EA
30A01156-142	Carry Thru Strap, Long	EA
30A01156-143	Carry Thru Strap, Short	EA
30A01156-144	Wheel Well Inspection Cover Reinforcement	EA
30A01156-145	Angle Carry Thru Attach	EA
30A01156-146	Shim, Bulkhead Stn. #14	EA
30A01156-147	Shim, Bulkhead Stn. #14	EA
30A01156-148	Shim, Bulkhead Stn. #14	EA
30A01156-150	Angle, Carry Thru Attach	EA
30A01156-154	Shim, Wheel Well Doubler, Rear	EA
30A01156-155	Doubler, Bulkhead #11	EA

Part Number	Part Description	Unit of Measure
30A01156-157	Doubler, Chine #3 Bulkhead	EA
30A01158-201	Angle, Attach Aft	EA
30A01158-202	Angle, Attach Aft	EA
30A01158-204	Bulkhead Stn. #11	EA
30A01158-205	Bulkhead Stn. #12	EA
30A01158-206	Bulkhead Stn. #13	EA
30A01158-207	Bulkhead Stn. #14	EA
30A01158-208	Bulkhead Stn. #3	EA
30A01158-209	Bulkhead Stn. #4	EA
30A01158-210	Bulkhead Stn. #4	EA
30A01158-211	Bulkhead Stn. #5	EA
30A01158-212	Bulkhead Stn. #5	EA
30A01158-213	Bulkhead Stn. #6	EA
30A01158-214	Bulkhead Stn. #6	EA
30A01158-215	Bulkhead - #7, Left	EA
30A01158-216	Bulkhead - #7, RH	EA
30A01158-217	Bulkhead Stn. #8 IB Side	EA
30A01158-219	Bulkhead Stn. #9 OB	EA
30A01158-220	Bulkhead Stn. #9 OB	EA
30A01158-221	Bulkhead Stn. #10	EA
30A01158-222	Bulkhead Support, Stn. #4	EA
30A01158-223	Bulkhead Support, Stn. #5	EA
30A01158-224	Bulkhead Support, Stn. #6	EA
30A01158-225	Bulkhead Support, Stn. #7	EA
30A01158-226	Bulkhead Support, Stn. #8	EA
30A01158-227	Bulkhead Support, Stn. #8	EA
30A01158-229	Bulkhead Stn. #8 OB Side	EA
30A01158-230	Bulkhead Support, Stn. #9	EA
30A01158-231	Bulkhead Support, Stn. #9	EA
30A01158-232	Bulkhead Stn. #9 IB	EA
30A01158-233	Bulkhead Stn. #9 IB	EA
30A01158-234	Wheel Well Panel, Rt.	EA
30A01158-235	Wheel Well Panel, Lt.	EA
30A01158-236	Angle Attach Aft Bottom Rt.	EA
30A01158-237	Angle Attach Aft Bottom Lt.	EA
30A01158-253	Doubler, Side Skin	EA
30A01158-254	Doubler, Side Skin	EA
30A01160-035	Spacer, Carry Thru	EA
30A01162-041	Cover, Baggage	EA
30A01162-042	Baggage Lip	EA
30A01162-045	Doubler, Gunwall Top Fwd. Lt.	EA
30A01162-046	Doubler, Gunwall Top Fwd. Rt.	EA
30A01162-047	Doubler, Top Rear Lt.	EA
30A01162-048	Doubler, Top Rear Rt.	EA
30A01163-072	Angle, Shim, Bulk #3	EA
30A01163-073	Reinforcement, Boarding Step	EA
30A01163-076	Doubler, Tie Down	EA
30A01163-077	Doubler, Tie Down	EA
30A01213-007	Ballard, (cleat tie down)	EA
30A01324-005	Gunwall, Inboard left.	EA
30A01324-006	Gunwall, Rt.	EA
30A01326-020	Angle Nose Box, Bulk #3	EA
30A01326-021	Angle Nose Box, Bulk #3	EA

Part Number	Part Description	Unit of Measure
30A01326-022	Angle, Cover Support	EA
30A01326-023	Angle, Cover Support Small	EA
30A01326-024	Angle, Top Rail Fwd. Rt.	EA
30A01326-025	Angle, Top Rail Fwd. Lt.	EA
30A01326-026	Angle, Top Rail Baggage Rt.	EA
30A01326-027	Angle, Top Rail Baggage Lt.	EA
30A01326-028	Angle, Top Rail Aft. Rt.	EA
30A01326-029	Angle, Top Rail Aft. Lt.	EA
30A01326-030	Angle, Baggage Support	EA
30A01326-032	Reinforcement, Top Skin	EA
30A01326-036	Angle - #7 Bulkhead	EA
30A01326-037	Angle - #7 Bulkhead	EA
30A01340-133	Stiffener, Side Skin	EA
30A01340-134	Stiffener, Side Skin	EA
30A01340-135	Stiffener, Side	EA
30A01340-136	Stiffener Side	EA
30A01340-137	Stiffener Side	EA
30A01340-138	Stiffener Side	EA
30A01340-139	Stiffener Side	EA
30A01340-140	Stiffener Side	EA
30A01340-141	Stiffener Side	EA
30A01340-142	Stiffener Side	EA
30A01340-143	Stiffener Side	EA
30A01340-144	Stiffener Side	EA
30A01340-147	Stiffener, Side	EA
30A01340-152	Stiffener, Side Skin	EA
30A01340-153	Stiffener, Side Skin	EA
30A01340-154	3000/3450 Aft Chine Stiffener	EA
30A01340-175	Angle, Top Skin Reinforcement	EA
30A01340-176	Angle, Top Skin Reinforcement	EA
30A01340-177	Angle, Top Skin Reinforcement	EA
30A01342-009	Sister Keel, Outer	EA
30A01342-010	Sister Keel, Outer	EA
30A01352-033	Angle, Spreader Bar Panel Aft.	EA
30A01352-034	Angle, Spreader Bar Panel Aft.	EA
30A01352-035	Angle, Bulkhead Side #10	EA
30A01352-036	Angle, Bulkhead Side #10	EA
30A01352-037	Angle, Bulkhead Side #5	EA
30A01352-038	Angle, Bulkhead Side #5	EA
30A01352-039	Angle, Spreader Bar Panel Fwd.	EA
30A01352-040	Angle, Spreader Bar Panel Fwd.	EA
30A01357-065	Angle, Wheel Well Short	EA
30A01357-066	Angle, Wheel Well Short	EA
30A01357-067	Angle, Wheel Well Long	EA
30A01357-068	Angle, Wheel Well Long	EA
30A01359-205	Angle, Wheel Well Short	EA
30A01359-206	Angle, Wheel Well Short	EA
30A01359-208	Angle, Wheel Well Long	EA
30A01359-209	Angle, Bulkhead Stn. #14 Upper	EA
30A01359-210	Angle, Bulkhead Stn. #14 Lower	EA
30A01359-211	Angle, Bulkhead Stn. #3	EA
30A01359-212	Angle, Bulkhead Stn. #3	EA
30A01359-213	Angle, Bulkhead Stn. #3	EA

Part Number	Part Description	Unit of Measure
30A01359-214	Angle, Bulkhead Stn. #3	EA
30A01359-216	Angle, Bulkhead Stn. #11 & #12	EA
30A01359-217	Angle, Bulkhead Stn. #11 & #12	EA
30A01359-218	Angle, Bulkhead Stn. #13	EA
30A01359-219	Angle, Bulkhead #13	EA
30A01359-221	Angle, Bulkhead Stn. #5	EA
30A01359-222	Angle, Bulkhead Stn. #5	EA
30A01359-223	Angle, Bulkhead Stn. #4	EA
30A01359-224	Angle, Bulkhead Stn. #4	EA
30A01359-225	Angle, Attach Nose Bumper	EA
30A01359-228	Angle, Wheel Well Panel	EA
30A01359-229	Angle, Wheel Well Panel	EA
30A01361-037	Sister Keel, Inner Fwd. Lt.	EA
30A01361-038	Sister Keel, Inner Fwd. Rt.	EA
30A01361-039	Sister Keel, Inner Aft. Lt.	EA
30A01361-040	Sister Keel, Inner Aft. Rt.	EA
30A01377-001	Keel, Main Fwd.	EA
30A01394-001	Chine, Fwd. Lt.	EA
30A01394-002	Chine, Fwd. Rt.	EA
30A01395-001	Chine, Aft. Lt.	EA
30A01395-002	Chine, Aft. Rt.	EA
30A01425-001	Keel, Aft.	EA
30A01569-002	Mud Flap	EA
30A01740-007	Hinge, Baggage Cover 3/4in	EA
30A01741-006	Hinge, Baggage Cover 1.5in	EA
30A02000-183	Fitting, Aft Fuselage Assy. Lt. (Maule)(23,3)	EA
30A02000-184	Fitting, Aft Fuselage Assy. Rt. (Maule)(23,3)	EA
30A02000-185	Strut Assy. Fwd. (Maule)	EA
30A02000-186	Strut Assy. Diagonal (Maule)	EA
30A02000-187	Strut Assy. Aft. (Maule)	EA
30A02000-194	Strut Assy. Fwd. (182)	EA
30A02000-195	Strut Assy. Mid. (182)	EA
30A02000-196	Strut Assy. Aft. (182)	EA
30A02000-213	Strut, Ass'y Fwd.Left (180/185)	EA
30A02000-234	Strut assy. fwd. Right (180/185)	EA
30A02019-014	Plate, Fuselage Aft. (Maule)(23,3)	EA
30A02019-015	Plate, Fuselage Aft. (Maule)(23,3)	EA
30A02019-016	Plate, Bottom Rear Fuselage (Maule)(23,3)	EA
30A02019-017	Plate, Bottom Rear Fuselage (Maule)(23,3)	EA
30A02019-018	Plate, Bottom Rear Fuselage (Maule)(23,3)	EA
30A02019-019	Plate, Bottom Rear Fuselage (Maule)(23,3)	EA
30A02084-002	Bushing, Strut (182)	EA
30A02084-004	Bushing,Strut (3,34)(5/16 dia)	EA
30A02084-005	Bushing,Strut (3/8 dia)	EA
30A02084-006	Bushing,Strut (7/16 dia)	EA
30A02156-166	Spacer, Rear Fuselage Clamp	EA
30A02162-043	Spacer, Tube (182)	EA
30A02163-071	Spacer, Tube (182)	EA
30A02191-003	Fitting Lower Front Strut (182) (12B3-7146)	EA
30A02192-008	Bracket Fwd strut Support(182)	EA
30A02194-003	Fitting Upper Front Strut (182)LT.	EA
30A02194-004	Fitting Upper Front Strut (182)RT.	EA
30A02195-007	Clamp, Rear Fuselage Fitting(23,3)(Maule)	EA

Part Number	Part Description	Unit of Measure
30A02196-003	Fitting Fwd Upper (Maule)LT.	EA
30A02196-004	Fitting Fwd Upper (Maule)RT>	EA
30A02204-006	Fitting, Upper Rear (182)	EA
30A02204-007	Fitting, Lower Front Dia (182)LT.	EA
30A02204-008	Fitting, Lower Front Dia (182)RT>	EA
30A02204-009	Fitting Fwd Lower (Maule)	EA
30A02204-010	Fitting-Strut, Upper Aft (Maule)RT.	EA
30A02204-011	Fitting-Strut, Upper Aft (Maule)LT.	EA
30A02204-017	Fitting, Fwd. Lower (180,185)	EA
30A02207-005	Fitting Rear Lower(182) (12B3-7145)	EA
30A02207-006	Fitting Rear Lower (Maule)RT.	EA
30A02207-007	Fitting Rear Lower (Maule)LT.	EA
30A02219-003	Fitting Float Deck	EA
30A02251-003	Fitting Main Gear (182)	EA
30A02369-045	Step, Rt. (182)	EA
30A02369-056	Step Rt. (180)	EA
30A02369-057	Step Lt. (180)	EA
30A02451-001	Exhaust Shield, Fwd Strut(182 Lycoming Only)	EA
30A02462-016	Wire Pull(180,182,185-3,34)	EA
30A02462-017	Wire Pull	EA
30A02602-010	Nylon Spacer-Step (Maule)	EA
30A02713-003	Fitting Tube Upper Fwd 182	EA
30A03000-031	Spreader Bar Assy. (All Except 182)(3,34)	EA
30A03000-032	Spreader Bar Assy. Fwd (182)(3,34)	EA
30A03000-033	Spreader Bar Assy. Aft. (182)(3,34)	EA
30A03154-010	Plate Reinforcement Tube Spr Bar	EA
30A03162-051	Shim, Spreader Bar(3,34)	EA
30A03237-003	Block-Tube, Spreader Bar	EA
30A03319-001	Tube-Spreader Bar	EA
30A03319-002	Tube-Spreader Bar	EA
30A03462-007	Wire Pull Aft-Spr Bar(182)	EA
30A03462-009	Wire Pull Fwd-Spr Bar(182)	EA
30A04000-093	Shock Strut, Upper(3,34)	EA
30A04000-100	Shock Strut Assy, 3000	EA
30A04000-120	Shock Strut, Lower(3,34)	EA
30A04162-036	Spacer, Shock Strut(3,34)Obselete	EA
30A04454-007	Shaft, Main Gear Assy	EA
30A04459-002	Sleeve, Shock Strut Retainer(3,34)	EA
30A04475-006	Bushing, Lower Shock Strut(3,34)	EA
30A04476-004	Pin, Retaining,Shock Strut(3,34)	EA
30A04523-002	Bushing Torque Plate	EA
30A04574-001	Coupling, Main Gear(3,34) Buy 30A05000-038	EA
30A05000-025	Main Gear Retract Assy. Lt.	EA
30A05000-026	Assy-Cylinder, Main Gear, RT, 3000/3450	EA
30A05000-027	Gear Indicator Arm Assy.(3,34)	EA
30A05000-028	Main Gear Retract Assy. Rt.	EA
30A05000-030	Assy-Cylinder, Main Gear, LT, 3000/3450	EA
30A05000-036	Gear Indicator Cable 3000/3450	EA
30A05000-038	Coupling Assembly(3,34)	EA
30A05000-039	Retract Arm Assembly Lt.	EA
30A05000-040	Retract Arm Assembly RT.	EA
30A05000-041	Drag Link Retract Arm Assembly	EA
30A05000-042	Arm Retract Drag Link	EA

Part Number	Part Description	Unit of Measure
30A05003-085	Plate Main Gear Separating(3,34)	EA
30A05114-007	Track, Main Gear Left	EA
30A05114-008	Track, Main Gear Right	EA
30A05214-007	Holder - Magnet - Prox. Switch	EA
30A05252-001	Spacer, Hydraulic Cylinder (MAIN)(3,34)	EA
30A05269-003	Arm, Gear Indicator(3,34)	EA
30A05460-001	Clevis-Retract Arm, Main Gear, (3,3450)	EA
30A05558-001	Bolt, Mod Drag Link (3,34) Buy 30A05000-038	EA
30A05702-016	Bolt, Modified(3,34)	EA
30A05702-020	Bolt	EA
30A05702-024	Bolt	EA
30A05748-001	Torque Plate, Left Old Style	EA
30A05748-002	Torque Plate, Right Old Style	EA
30A06000-024	Assy, Fork, Nose Gear, 3000/3450	EA
30A06000-025	Nose Wheel Assy.(3,34) (Steel Bearings)	EA
30A06000-026	Nose Fork & Wheel Assy.	EA
30A06522-004	Shaft, Pivot, Nose Gear, 3000/3450	EA
30A06702-016	Bolt, Modified Pivot(21,23,3,34)	EA
30A06702-017	Pin, Pivot Shft, Fork, Nose Gear, 3000/3450	EA
30A07000-017	Nose Box Assembly, 3000/3450	EA
30A07000-017	Nose Box Assembly, 3000/3450	EA
30A07567-011	Gasket Cover Nose Box(21,23,3,34)	EA
30A08000-146	Arm, Steering- Fuselage (182)	EA
30A08000-147	Pulley Bracket Assembly, 182	EA
30A08000-148	Bracket, Pulley Assembly 182	EA
30A08000-153	Cable Assy. Balance Rt.	EA
30A08000-154	Cable Assy. Balance Lt.	EA
30A08000-155	Cable Assy. Steering	EA
30A08000-156	Cable Assy. Retract	EA
30A08000-163	Cable(Maule-Turbo)	EA
30A08001-048	Rudder Cable Extension (Maule)	EA
30A08005-304	Bracket	EA
30A08150-142	Angle, Pulley Support	EA
30A08150-150	Bracket, Aileron Interconnect (182)	EA
30A08152-007	Cable Guard Pulley Bracket (182)	EA
30A08154-015	Handle, Water Rudder Retract (Maule)	EA
30A08455-002	U-Bolt, Steering (Maule)	EA
30A08459-001	Bushing, Steering Arm Fuselage(182)	EA
30A08465-003	Shackle, Centering Spring-2007B	EA
30A08604-004	Block Cable Spacer	EA
30A09008-167	Mounting Plate, Rear Hyd. Pump (182)	EA
30A09352-041	Angle, Bottom Pump Mount(23,3)(Maule)	EA
30A12000-044	Ventral Fin Assy. (182)	EA
30A12000-047	Support, Fwd Strut(182)	EA
30A12000-049	Pulley Bracket, Assy. Retract (Maule)	EA
30A12000-050	Handpump Plate Assy. (Maule)	EA
30A12005-302	Doubler, Fuselage (182)	EA
30A12005-303	Doubler, Fuselage (182)	EA
30A12005-304	Cover, Fairing-Fwd Landing Gear(182)	EA
30A12005-305	Cover, Main Gear (182)	EA
30A12010-020	Reinforcement, Aft Ventral Fin(182)	EA
30A12010-028	Skin, Aft Ventral Fin(182)	EA
30A12148-045	Cover, Spring Gear (Maule)	EA

Part Number	Part Description	Unit of Measure
30A12150-152	Plate, Handpump(Maule)	EA
30A12156-156	Cover, Arm Steering (182)	EA
30A12160-037	Plate, Anchor V-brace(182)	EA
30A12163-078	Angle Bracket, Small(Maule)	EA
30A12163-079	Angle Bracket, Large(Maule)	EA
30A12193-004	Lug Shimmy Dampener(182)	EA
30A12206-003	Doubler, Firewall(182)	EA
30A12274-008	Bushing, Bracket (Maule)	EA
30A12340-148	Stiffener, Side Fuselage Aft (182)	EA
30A12340-149	Stiffener, Side Fuselage Aft (182)	EA
30A12340-150	Stiffener, Side Fuselage Fwd (182)	EA
30A12340-151	Stiffener, Side Fuselage Fwd (182)	EA
30A12340-152	Clip, Stiffener Attach(182)	EA
30A12376-001	Bracket Shimmy Dampener (182)	EA
30A12566-008	Baffle-Seal, (182)	EA
30A12599-003	Cap,Ventral (182)	EA
30A13005-306	Rib-Top Rudder (182)	EA
30A13005-377	Gusset, Reinforcement Rudder (182)	EA
30A13016-011	Rudder Extension, (182)	EA
30A13581-003	Weight, Balancing Top Rudder (182)	EA
30A13581-004	Weight, Balancing Top Rudder (182)	EA
30A16000-006	Cable, Aileron 3000 (182)	EA
30A16000-007	Cable, 3000 Aileron (182)	EA
30A16004-187	Cover, Main Gear Leg (Maule)	EA
30A16599-002	Tailcone (182)	EA
30S01000-400	Side Skin Assembly Mid. Inbrd RH	EA
30S01005-392	Cover, Top Skin	EA
30S01148-033	Skin, Side Mid . Inbrd	EA
30S01148-035	Skin, Side Mid . Outbrd	EA
30S01148-046	Skin, Top Fwd Rt.	EA
30S01148-047	Skin, Top Fwd Lt.	EA
30S01155-046	Spacer, Step Gusset	EA
30S01158-263	Cover, Nose Bulkhead	EA
30S01158-264	Cover, Bulkhead Stn. #3	EA
30S01163-085	Gusset,Step	EA
30S01163-086	Gusset,Step	EA
30S01326-034	Angle, Nose Bumper	EA
30S01326-035	Top Skin Stiffener	EA
30S01340-180	Stiffener #10 Bulkhead	EA
30S01361-043	Keel, Sister Aft	EA
30S01361-044	Keel, Sister Aft	EA
30S01425-003	Keel, Afterbody Straight	EA
3143-14	Float Fitting (PA-12) Atlee Dodge	EA
3143-17	Float Fitting (PA-12) Atlee Dodge	EA
32-1	Caliper Assembly	EA
32-3	Caliper Assembly	EA
33050	Wix-Fuel Filter---Used To Make 6A09706-001---	EA
34A01000-355	Bulkhead Stn. #16 Assy.	EA
34A01000-356	Bulkhead Stn. #15 Assy.	EA
34A01000-357	Bulkhead Stn. #8 Assy.	EA
34A01000-366	Skin Top Right Assy.	EA
34A01000-369	Skin Assy. Side Outboard Mid Lt	EA
34A01000-370	Skin Assy. Side Outboard Mid Rt	EA

Part Number	Part Description	Unit of Measure
34A01000-371	Skin Assy. Side Inboard Mid Lt.	EA
34A01000-372	Skin Assy. Side Inboard Mid Rt.	EA
34A01000-373	Skin Assy. Side Outboard Aft. Lt.	EA
34A01000-374	Skin Assy. Side Outboard Aft. Rt.	EA
34A01000-375	Skin Assy. Side Inboard Aft. Lt.	EA
34A01000-376	Skin Assy. Side Inboard Aft. Rt.	EA
34A01005-383	Baggage Reinforcement	EA
34A01005-384	Baggage Reinforcement	EA
34A01005-385	Baggage Reinforcement	EA
34A01008-116	Baggage Floor	EA
34A01148-015	Skin, Top Fwd. Lt.	EA
34A01148-016	Skin, Top Fwd. Rt.	EA
34A01148-017	Skin, Top Aft. Lt.	EA
34A01148-018	Skin, Top Aft. Rt.	EA
34A01148-019	Skin, Side Inboard Mid	EA
34A01148-021	Skin, Side Inboard Aft.	EA
34A01148-023	Skin, Side Outboard Mid	EA
34A01148-025	Skin, Side Outboard Aft.	EA
34A01148-039	Skin, Btm. Aft.	EA
34A01148-040	Skin, Btm. Aft.	EA
34A01150-145	Splice, Bottom Skin	EA
34A01150-147	Doubler, Bottom Skin Aft.	EA
34A01150-148	Doubler, Bottom Skin Aft.	EA
34A01158-238	Bulkhead Stn. #16	EA
34A01158-239	Bulkhead Stn. #8 Lt.	EA
34A01158-240	Bulkhead Stn. #8 Rt.	EA
34A01158-241	Bulkhead Support Stn. #8	EA
34A01158-242	Bulkhead Stn. #15	EA
34A01162-049	Doubler, Gunwall Outboard Fwd. Lt.	EA
34A01162-050	Doubler, Gunwall Outboard Fwd. Rt.	EA
34A01162-054	Doubler, Gunwall Inboard Aft Rt.	EA
34A01162-055	Doubler, Gunwall Inboard Aft Lt.	EA
34A01163-091	Shim, Bulkhead #16	EA
34A01163-092	Shim, Bulkhead #16	EA
34A01163-093	Shim, Bulkhead #16	EA
34A01324-007	Gunwall, Inbrd. Lt	EA
34A01324-008	Gunwall, Inbrd. Rt	EA
34A01324-009	Gunwall, Outbrd. Lt	EA
34A01324-010	Gunwall, Outbrd. Rt	EA
34A01326-031	Rail, Top Deck	EA
34A01326-032	Rail, Top Deck	EA
34A01326-033	Rail, Top Aft. Lt.	EA
34A01326-034	Rail, Top Aft. Rt.	EA
34A01340-173	Angle, Reinforcement Baggage	EA
34A01340-174	Angle, Reinforcement	EA
34A01342-011	Sister Keel, Outer Lt.	EA
34A01342-012	Sister Keel, Outer Rt.	EA
34A01359-215	Angle, Bulkhead Stn. #15 Lt.	EA
34A01359-220	Angle, Bulkhead Stn. #15 Rt.	EA
34A01361-041	Sister Keel, Inner Fwd. Lt.	EA
34A01361-042	Sister Keel, Inner Fwd. Rt.	EA
34A01361-043	Sister Keel, Inner Aft. Lt.	EA
34A01361-044	Sister Keel, Inner Aft. Rt.	EA

Part Number	Part Description	Unit of Measure
34A01377-002	Keel, Main Fwd.	EA
34A01394-145	Chine, Fwd. Lt.	EA
34A01394-146	Chine, Fwd. Rt.	EA
34A01395-003	Chine, Aft. Left	EA
34A01395-004	Chine, Aft. Right	EA
34A01425-002	Keel, Aft.	EA
34A02000-197	Strut Assy. Fwd Left. (206)	EA
34A02000-198	Strut Assy. Mid. (206)	EA
34A02000-199	Strut Assy. Aft. (206)	EA
34A02000-204	Strut Assy. Fwd Right. (185)	EA
34A02000-205	Strut Assy. Mid. (180/185}	EA
34A02000-206	Strut Assy. Aft. Right. (180/185}	EA
34A02000-207	Strut Assy. Aft. Left. (180/185}	EA
34A02000-212	Strut Step Assy-Cargo, C-206/3450	EA
34A02000-218	Strut Assy. Fwd. (206) Right	EA
34A02000-229	Strut Assy. Fwd (185) Left	EA
34A02084-007	Bushing - Strut - (.50 Dia. Bolt)	EA
34A02089-007	Bushing, Strut--OBSOLETE---	EA
34A02204-012	Fitting, Fwd Lower Right(206)	EA
34A02204-013	Fitting, Fwd. Lower Left(206)	EA
34A02204-014	Fitting, Aft. Lower (206)	EA
34A02204-015	Fitting, Fwd. Lower (185)	EA
34A02204-016	Fitting, Aft. Upper (185)	EA
34A02207-006	Fitting, Aft. Lower Right(185)	EA
34A02207-007	Fitting, Aft. Lower Left(185)	EA
34A02229-005	Fitting, Fwd. Upper (206)	EA
34A02369-048	Step, Rt. (206)	EA
34A02369-050	Step, Rt. (185)	EA
34A02369-051	Step, Lt. (185)	EA
34A02496-003	Wire Pull(206,185-3,34,180)	EA
34A02661-001	Seal, Gear Cover	EA
34A02705-004	Bolt, Modified (Firewall)	EA
34A04000-101	Shock Strut Assy, 3450	EA
34A07509-008	Axle Trolley	EA
34A08000-158	Cable Assy. Balance Rt.	EA
34A08000-159	Cable Assy. Balance Lt.	EA
34A08000-160	Cable Assy. Steering	EA
34A08000-161	Cable Assy. Retract	EA
34A08205-007	Stop-Water Rudder Lock, RT, C-182	EA
34A08205-008	Stop, Water Rudder Lock Rt.(182)	EA
34A09000-244	Fuselage Mount Assy. Hyd. Pump (206)	EA
34A09000-261	Hand Pump & Retract Handle Assy.(206)	EA
34A09000-266	Hyd. Power Pack Assy. 12V (180/185)	EA
34A09000-267	Hand Pump Assy. (180/185)	EA
34A09000-281	Hyd. Power Pack Assy. 24V (180/185)	EA
34A09000-315	Mount Assy. Retract Handle 206	EA
34A09005-291	Bracket, Hyd. Pump (185)	EA
34A09156-166	Bracket, Hand Pump (185)	EA
34A09162-053	Plate, Aft Fuselage Hyd. Pump Mount (206)	EA
34A09163-125	Mount - Retract Handle - 206	EA
34A09163-126	Mount; Bulkhead Retract Handle	EA
34A09352-041	Angle, Pump Mount Upper (206)	EA
34A09352-042	Angle, Pump Mount Lwr. (206)	EA

Part Number	Part Description	Unit of Measure
34A09357-074	Angle, Pump (185)	EA
34A11000-023	Wire Harness, 3450 Power Pack	EA
34A11000-026	Harness,Rudder Beacon Extension 182/206	EA
34A12000-053	Actuator Assembly (C206)	EA
34A12155-045	Button, Static Port (206H)	EA
34A12446-001	Sleeve - Connector (206)Cessna#1242021-2	EA
34A13581-006	Rudder Weight, 206 Seaplane	EA
34A16214-005	Hoisting Block (206) (12A3-7364)	EA
34S01000-461	Skin Assembly, 3450 Str. Mid Outbrd.	EA
34S01000-462	Skin Assembly, 3450 Str. Inbrd. Mid.	EA
34S01000-463	Skin Assembly, 3450 Str. Inbrd. Mid.	EA
34S01148-029	Skin, Side Mid (INB.)	EA
34S01148-031	Skin, Side Mid (OB)	EA
34S01148-043	Skin, Top Aft. Lt.	EA
34S01148-044	Skin, Top Aft. Rt.	EA
34S01158-258	Angle, Skin Attach Aft. Rt.	EA
34S01158-259	Angle, Skin Attach Aft. Lt.	EA
34S01361-045	Keel, Sister, Aft Straight Lt.	EA
34S01361-046	Keel, Sister, Aft Straight Rt.	EA
34S01425-002	Keel, Aft. Straight	EA
3-4V50X-S	Reducer, Fitting Main Wheel, 135 Degree Taper, Male Screw 7/16-20, Valve 3/8" Hole	EA
350689-1	Mate-N-Lok Socket, Crimp Connector, 24-18G	EA
350690-1	Mate-N-Lok Pin, Connector, 24-18G	EA
361473	Pump Block, Adapter Wipline	EA
361473R	Pump Block, Adapter Wipline, Reconditioned	EA
361484	Ball & Seat, Hand Pump, 3/16" DIA	EA
361507	Sight Gauge Tube Assembly, Sight Gauge Tube 3.8 connected to 2 - 90 Degree taper Valves 1/8" Hole	EA
361517	Body, Hand Pump, 7-1/2" Length	EA
361518	Port Cap, 4 Pin -2 at 1/8" - 2 at 1/4", 5/8-18 Female	EA
361519	Rod, Mountung, 1/2" Female, 4 PIN	EA
361520	Knob, Hand Pump, 1/2-20 Thread	EA
361521	Ram, Hand Pump, 1/4" Male, 1/8" Female	EA
361522	Piston, Hand Pump, 3/16" DIA	EA
361615	Washer, Pilot, 1/4 DIA	EA
361726	Pump Spacer 108	EA
361730	Coupling 180	EA
361843	Section Tube, ext. 256, Short Tube	EA
364106	Spool, 5/8" DIA, 4 grooves at 1/16", 2 Blockends 1/8" x 7/16"	EA
3A01000-004	Pulley Bracket, Assy.	EA
3A01000-005	Weldment- Step Pocket	EA
3A01000-006	Cover Assembly Baggage	EA
3A01000-021	Cover Assy. Small	EA
3A01000-022	Cover Assy. Medium	EA
3A01000-269	Reinforcement Assy. (8" x 10")	EA
3A01000-270	Reinforcement Assy. (10" x 12")	EA
3A01002-007	Gusset, Baggage Compartment Lt.	EA
3A01002-008	Gusset, Baggage Compartment Rt.	EA
3A01002-021	Cover, Wheel Well	EA
3A01002-022	Cover, Inspection Spreader Bar	EA
3A01002-023	Plate, Reinforcement Spreader Bar	EA
3A01002-024	Doubler, Step Sides Outside Aft.	EA

Part Number	Part Description	Unit of Measure
3A01002-025	Strip, Reinforcement	EA
3A01003-001	Gusset, Pulley Bracket	EA
3A01003-002	Angle, Carry Thru Strap	EA
3A01003-003	Angle, Carry Thru Stap	EA
3A01003-004	Doubler, Skin Inside Aft.	EA
3A01005-008	Skin, Side Inboard Rt.	EA
3A01005-009	Skin, Side Inboard Lt.	EA
3A01008-002	Cover, Main Gear Retract	EA
3A01008-004	Doubler, Inspection Cover Reinforcement	EA
3A01058-001	Handle	EA
3A01151-010	Bracket Pulley	EA
3A01151-027	Bracket-Pulley	EA
3A01151-045	Reinforcement, Baggage Cover	EA
3A01153-001	Bendment, Bottom, Step, Pocket	EA
3A01153-002	Bendment-Step, Pocket	EA
3A01156-001	Bulkhead Str. #1	EA
3A01156-006	Reinforcement, Wheel Well Cover	EA
3A01156-048	Hard Point, Fwd.	EA
3A01156-049	Hard Point, Aft.	EA
3A01158-003	Clamp, Pump Out Tube	EA
3A01158-003	Clamp, Pump Out Tube	EA
3A01158-005	Ring, Pump Out Cup Reinforcement	EA
3A01158-048	Skin, Top Rt.	EA
3A01158-093	Bracket, Canoe Paddle	EA
3A01163-007	Cover, Baggage	EA
3A01200-001	Strip-Wear	EA
3A01206-001	Retainer, Baggage Lock	EA
3A01273-002	Knob Insert--Old Style w/slot	EA
3A01273-004	Baggage Bay Cover Latch Insert	EA
3A01340-013	Angle, Cover Small Reinforcement	EA
3A01340-014	Angle, Cover Med. Reinforcement	EA
3A01352-001	Angle, Baggage Cover Reinforcement	EA
3A01352-002	Angle, Baggage Cover Reinforcement	EA
3A01352-003	Angle, Baggage Cover Reinforcement	EA
3A01436-001	Clamp-Upr LT FL OB/Right FL I	EA
3A01436-002	Clamp-Upr RT FL OB/Left FL IB	EA
3A01436-003	Clamp-Lwr LT FL OB/Right FL I	EA
3A01436-004	Clamp-Lwr RT FL OB/Left FL IB	EA
3A01437-001	Pivot, Water Rudder	EA
3A01503-001	Clip, Paddle	EA
3A01567-008	Cover Seal 10" X 12" (Fits Med. & Small)	EA
3A01601-001	Handle, Stopper	EA
3A01646-003	Spacer, Fly Wire	EA
3A01650-002	Cup, Pump Out	EA
3A01702-004	Bolt, Baggage Bay Cover (Modified)	EA
3A02000-004	Fitting Fuselage Assy, Rt.(206)	EA
3A02000-005	Fitting Fuselage Assy, Lt.(185)	EA
3A02000-006	Fitting Fuselage Assy, Rt.(185)	EA
3A02000-007	Wire Pull Assy. Lt.(185/206)	EA
3A02000-008	Wire Pull Assy. Rt.(185/206)	EA
3A02000-017	Fitting, Fuselage Attach Assy. Aft. Lt.(185)	EA
3A02000-018	Fitting, Fuselage Attach Assy. Aft. Rt.	EA
3A02005-030	Cover, Strut Right. (206)	EA

Part Number	Part Description	Unit of Measure
3A02005-031	Cover, Strut Left. (206)	EA
3A02005-032	Cover, Strut (185)	EA
3A02005-171	Cover, Strut (185)	EA
3A02045-001	Fitting, Strut Lower Aft. Left.(206)	EA
3A02045-002	Fitting, Strut Lower Aft Right.(206)	EA
3A02045-003	Fitting, Strut Lower Diagonal Leftt.(206)	EA
3A02045-004	Fitting, Strut Lower Diagonal Right.(206)	EA
3A02045-005	Fitting, Strut Lower Fwd. Left.(206)	EA
3A02045-006	Fitting, Strut Lower Fwd. Right.(206)	EA
3A02045-007	Fitting, Strut Upper Fwd.(206)	EA
3A02045-008	Fitting, Strut Lower Aft. Right.(185)	EA
3A02045-009	Fitting, Strut Lower Aft. Left.(185)	EA
3A02045-010	Fitting, Strut Lower Diagonal Right.(185)	EA
3A02045-011	Fitting, Strut Lower Diagonal Left.(185)	EA
3A02045-012	Fitting, Strut Lower Fwd. Right.(185)	EA
3A02045-013	Fitting, Strut Lower Fwd. Left.(185)	EA
3A02055-001	Link, Strut Upper Fwd.	EA
3A02057-001	Fitting, Fwd. Strut Joining	EA
3A02063-001	Link, Fwd. Strut Joining	EA
3A02064-001	Fitting, Aft Diagonal Upper(206)	EA
3A02065-001	Fitting, Brace Wire Lt.(185)	EA
3A02065-002	Fitting, Brace Wire Rt.(185)	EA
3A02066-001	Fitting, Fwd. Diagonal Upper(185)	EA
3A02344-002	Fitting, Fuselage Aft. Rt.(185)	EA
3A02350-003	Step, Lt. (206)	EA
3A02356-003	Strut, Diagonal Left. (206)	EA
3A02356-004	Strut, Diagonal Right. (206)	EA
3A02356-005	Strut, Aft. Left. (206)	EA
3A02356-006	Strut, Aft. Right. (206)	EA
3A02369-034	Step, (185)	EA
3A02520-001	Bushing	EA
3A02524-001	Brace, Wire Pull	EA
3A02524-002	Brace, Wire Pull	EA
3A02524-003	Wire Pull	EA
3A02527-003	Bushing Swivel, Aft.(185/206)	EA
3A03000-002	Spreader Bar Assy. Aft.with rigging	EA
3A03000-003	Pulley Bracket Assy. Outboard Lt.	EA
3A03000-004	Pulley Bracket Assy. Outboard Rt.	EA
3A03000-005	Pulley Bracket Assy. Inboard Lt.	EA
3A03000-006	Pulley Bracket Assy. Inboard Rt.	EA
3A03002-029	Skin, Spreader Bar Fwd.	EA
3A03002-030	Skin, Spreader Bar Aft.	EA
3A03005-020	Cover, Inspection Spreader Bar Aft.	EA
3A03005-021	Cover, Inspection Spreader Bar Fwd.	EA
3A03005-029	Guidance, Balance Cable Spreader Bar	EA
3A03005-170	Cable Guide, Spreader Bar	EA
3A03006-001	Doubler, Spreader Bar Trailing Edge	EA
3A03151-076	Bracket-Pulley Inboard Rt.	EA
3A03156-008	Cover, Lock Strip Spreader Bar Insp.	EA
3A03197-001	Block, Spreader Bar Attach (185)	EA
3A03197-002	Block, Spreader Bar Attach (C206)	EA
3A03269-001	Cable, Guide	EA
3A03272-001	Spacer, Strut to Float	EA

Part Number	Part Description	Unit of Measure
3A03341-001	Spreader Bar, Fwd.	EA
3A03341-002	Spreader Bar, Aft.	EA
3A04000-005	Brake Line Assy. Fitting	EA
3A04000-006	Brake Line Assy. -22in	EA
3A04000-010	Brake Line Assy. -8in	EA
3A04000-011	Brake Line Assy. -10.5in	EA
3A04039-001	Trunnion	EA
3A04086-001	Axle	EA
3A04089-003	Cap, Accumulator End	EA
3A04089-004	Cap, Stem and End	EA
3A04090-001	Base, Shock Strut Cylinder	EA
3A04090-003	Piston Shock-Strut (3A04091-002)	EA
3A04091-001	Shock Strut Cylinder, Top	EA
3A04093-001	Spacer, Wheel Bearing Inner	EA
3A04118-001	Body, Accumulator	EA
3A04152-001	Spacer, Stainless Brake Disc	EA
3A04189-001	Support, Axle Mount	EA
3A04189-002	Mount, Axle	EA
3A04258-001	Fitting, Brake Line	EA
3A04258-008	Metering Pin-Shock Strut	EA
3A04268-003	Axle Nut	EA
3A04273-001	Metering Tube Shock-Strut	EA
3A04518-002	Nut, Barrel	EA
3A04528-001	Body-Cylinder	EA
3A04529-001	Inner Cylinder Shock-Strut 3730	EA
3A04561-002	Film-Brake Caliper Surface Protector	EA
3A04580-003	Packing-Felt Wiper	EA
3A04616-001	Spacer-Grease Main Wheel	EA
3A04619-002	Bushing	EA
3A04620-001	Spacer, Teflon (.005x3.125"ID x4-1/2" OD)	EA
3A04702-001	Bolt-Modified Anchor Bolt	EA
3A04711-001	Brake Mount Lt. Modified	EA
3A04711-002	Brake Mount Rt. Modified	EA
3A04713-001	Retainer-Shock, Modified USE SUB	EA
3A04713-001A	Retainer, Shock, Fits A-E Code	EA
3A05000-002	Assy-Cylinder	EA
3A05000-003	Retractor Brace Assy.	EA
3A05000-004	Plunger Assy. (Power)	EA
3A05000-005	Magnet Holder Assy.	EA
3A05003-014	Channel	EA
3A05005-022	Tow Lug	EA
3A05033-001	Latch, Main Gear Retracted	EA
3A05038-001	Stop, Drag Brace Up	EA
3A05038-002	Stop, Drag Brace Down	EA
3A05059-001	Drag Brace	EA
3A05060-001	Latch, Main Gear Extended	EA
3A05061-002	Guide, Up Latch Release	EA
3A05089-001	End-Upper Main Power Cylinder	EA
3A05089-002	End-Lower Main Power	EA
3A05267-001	Spacer, Retract Wall	EA
3A05267-002	Spacer, Sleeve	EA
3A05518-001	Link, Plunger Shaft	EA
3A05521-001	Shaft, Up Latch Release	EA

Part Number	Part Description	Unit of Measure
3A05521-002	Pin, Small Down Latch	EA
3A05523-001	Pin, Large Down Latch	EA
3A05526-001	Plate, Striker Down Latch	EA
3A05527-001	Shaft-Plunger	EA
3A05603-003	Mounting Block	EA
3A05619-001	Spacer-Nylon	EA
3A06000-002	Nose Fork Shaft Assy.	EA
3A06000-003	Up Stop Wedge Assy.	EA
3A06000-004	Visual Up Indicator Assy.	EA
3A06031-001	Block-Pivot	EA
3A06037-001	Cover, Nose Gear Centering	EA
3A06041-002	Tow Lug	EA
3A06209-001	Wedge-Up Stop, Lt.	EA
3A06209-003	Wedge-Up Stop, Rt.	EA
3A06259-001	Spacer, Dust Cover Nose Wheel	EA
3A06259-002	Dust Cover	EA
3A06476-001	Pin-Anti Axle Rotate	EA
3A06511-001	Spring, Nose Gear	EA
3A06512-001	Piston Centering	EA
3A06513-001	Indicator Screw, Nose Gear Up	EA
3A06522-001	Pivot, Fork Nose Gear	EA
3A06525-002	Spring, Centering	EA
3A06602-001	Washer-Thrust	EA
3A06702-002	Bolt, Nose Wheel Axle; Modified	EA
3A07000-002	Plunger Assy.	EA
3A07005-178	Clip, Switch Nose Gear	EA
3A07032-001	Trolley-Coupling	EA
3A07048-001	Trolley Nose Gear	EA
3A07089-005	End, Cylinder Rear	EA
3A07094-001	Rod End, Nose Gear Ram	EA
3A07158-040	Cover, Inspection Hole Nose Box	EA
3A07274-001	Plug-Ram	EA
3A07349-001	Track-Nose Gear, Lt.	EA
3A07349-002	Track-Nose Gear Rt.	EA
3A07359-006	Angle, Mounting	EA
3A07440-001	End-Cylinder, Front	EA
3A07509-001	Axle Trolley Long Shaft	EA
3A07509-002	Axle, Trolley Short Shaft	EA
3A07530-001	Roller, Trolley Bearing	EA
3A07530-002	Bearing, Trolley (old style , steel)	EA
3A07543-002	Piston	EA
3A07543-002	Piston	EA
3A07604-001	Slide Block Trolley	EA
3A07620-002	Spacer-Gasket	EA
3A08000-001	Cable Assy. Steering Belly 185	EA
3A08000-002	Cable Assy. Steering Belly 206	EA
3A08000-006	Water Rudder Retract Assy. (185 HD)	EA
3A08000-007	Assembly-Channel	EA
3A08000-045	Cable Assy. Retract, Belly 2	EA
3A08000-046	Cable Assy. Steering	EA
3A08000-047	Cable Assy. Retract	EA
3A08000-048	Cable Assy. Balance	EA
3A08000-049	Cable Assy. Steering, Float	EA

Part Number	Part Description	Unit of Measure
3A08000-050	Cable Assy. Retract, Float	EA
3A08000-051	Cable Assy. Retract, Belly 1	EA
3A08000-096	Water Rudder Pivot Assy.	EA
3A08001-002	Water Rudder Blade	EA
3A08003-015	Base, Lt.	EA
3A08003-016	Base, Rt.	EA
3A08003-017	Frame	EA
3A08003-018	Cable Guide, Holder	EA
3A08061-003	Water Rudder Retract, Spacer (185)	EA
3A08151-046	Water Rudder Retract, Bracket	EA
3A08267-003	Spacer-Belly Bracket, Short	EA
3A08267-003	Spacer-Belly Bracket, Short	EA
3A08267-004	Spacer-Belly Bracket, Long	EA
3A08357-033	Bracket, Pulley	EA
3A08357-034	Bracket, Retract Side	EA
3A08414-001	Handle, Retract (185)	EA
3A08415-001	Latch, Retract	EA
3A08415-002	Channel-Large	EA
3A08416-001	Spacer Short	EA
3A08416-002	Spacer Long	EA
3A08419-001	Channel-Small	EA
3A08502-001	Spacer-Roller	EA
3A08502-002	Spacer-Front--Non-current Part	EA
3A08509-005	Water Rudder Steering Arm	EA
3A08514-001	Post-Water Rudder, Main	EA
3A08515-002	Tube-Water Rudder Retract, Hinge	EA
3A08526-002	Water Rudder Pivot, Hinge	EA
3A08601-003	Roller-Cabler Rudder	EA
3A08605-001	Cable Guide	EA
3A08606-001	Roller-Cable Retract Lower	EA
3A08613-001	Spacer Retract Handle	EA
3A08650-001	Water Rudder Boot	EA
3A08702-005	Pin -Spring (OBS.)	EA
3A08702-006	Screw Pivot, Modified	EA
3A09003-011	Bracket, Upper Mount (185)	EA
3A09005-023	Bracket, Hyd. Pump Mount (C206)	EA
3A09190-001	Plate, Mounting-Hand Pump	EA
3A09191-001	Panel, Round (185-206)	EA
3A09191-002	Block, Landing Gear Control Square	EA
3A09271-001	Spacer-Pump (185)was 3A09270-001	EA
3A09274-003	Spacer, Hydraulic Pump	EA
3A09357-032	Bracket, Hydraulic Pump Mount Lwr.	EA
3A09702-012	Bolt, Modified	EA
3A10000-002	Solenoid Diode Assy.	EA
3A12456-006	Tie Rod, Round Type II	EA
3A12467-015	Bracket, Upper Lt.	EA
3A12467-016	Bracket, Upper Rt.	EA
3A12467-017	Bracket, Lower	EA
3G608	Wrench, allen, 3/32 short arm hex key, 1/8"	EA
3S01014-001	Spacer	EA
3S01158-050	Skin, Top Rt.	EA
3S01158-051	Skin, Top Lt.	EA
40000	Clamp, Assembly, Main Wheel, 3000, 6000, 8000	EA

Part Number	Part Description	Unit of Measure
400787	Parts, Hand Pump, Male 1/4-28	EA
401065	Steel Ball 1/4 in	EA
405673	O Ring, 1-3/4" DIA	EA
405952	O Ring, 5/8" DIA	EA
405990	O Ring, 3/8" DIA, 904-90	EA
406187	Reservior Bolts, 3/16" DIA	EA
406484	O Ring, 1/2" DIA	EA
409055	Spring, 3/16" DIA, 7/8" Long	EA
409406	O Ring, 7/8"	EA
409912	Rod Seal, V-Cup 3/4:1, 0.325 vick	EA
410410	Washer, Lock 3/8" DIA, 10 High Collar	EA
410411	Washer, Lock, 1/4" DIA	EA
410462	Spring, cprsn, 0.3 X 0.620	EA
410512	Seal, Oil, 3/16" DIA	EA
410958	Seal, Reservoir, 3-1/4" DIA	EA
411165	Motor, 24V	EA
412169	Decal, "CAUTION, excessive Mechanical	EA
4405-343	Pump, Auto, 24V, Foam Tank, w/ Filter, AT802	EA
46235K25	Level Indicator, Float Switch	EA
473237	Seal, National Oil, 1-3/4" DIA	EA
4A01000-301	Water Rudder Casting Assy.	EA
4A01004-048	Baggage Stiffner, Horizontal	EA
4A01004-049	Baggage Stiffner, Vertical	EA
4A01004-050	Skin, Side Inboard Rt.	EA
4A01004-051	Skin, Side Inboard Lt.	EA
4A01004-052	Skin, Side Outboard Rt.	EA
4A01004-053	Skin, Side Outboard Lt.	EA
4A01004-063	Skin, Side Outboard Aft. Lt.	EA
4A01004-064	Skin, Side Outboard Aft. Rt.	EA
4A01004-065	Skin, Side Inboard Aft. Lt.	EA
4A01004-066	Skin, Side Inboard Aft. Rt.	EA
4A01004-067	Baggage Stiffener, Center & Rear	EA
4A01004-074	Skin, Aft. Rt.	EA
4A01004-074	Skin, Aft. Rt.	EA
4A01004-075	Skin, Aft. Lt.	EA
4A01005-228	Doubler, Bulkhead #4 & 6	EA
4A01008-107	Doubler, Hydraulic	EA
4A01150-121	Shim-Side Stiffener	EA
4A01156-060	Wheel Well Cover Reinforcement	EA
4A01156-071	Bracket Pulley, Spreader Bar Panel Aft.	EA
4A01156-072	Bracket Pulley, Spreader Bar Panel Aft.	EA
4A01158-088	Skin, Top Rt.	EA
4A01162-001	Cover, Baggage	EA
4A01163-028	Spacer, Gunwall	EA
4A01163-029	Spacer, Side Stiffener	EA
4A01740-005	Hinge, Baggage Cover 3/4in	EA
4A01741-003	Hinge, Baggage Cover 1.5in	EA
4A02000-071	Fitting Assy. Drag Wire Lt.	EA
4A02000-072	Fitting Assy. Drag Wire Rt.	EA
4A02000-073	Fitting Assy. Drag Wire Lt.	EA
4A02000-074	Fitting Assy. Drag Wire Rt.	EA
4A02000-232	Fitting Assy. Aft. Rt.(185)	EA
4A02005-208	Doubler, Fuselage Float Rt.	EA

Part Number	Part Description	Unit of Measure
4A02062-004	Tongue, Strut Aft. Upper Fuselage (206)	EA
4A02062-005	Fitting, Fuselage Upr. Lt.(185)	EA
4A02078-001	Fitting, Ft. Float Fuselage (206)	EA
4A02079-003	Fitting, Tie Rod Fuselage Aft Left(185)	EA
4A02079-004	Fitting, Tie Rod Fuselage Aft Right(185)	EA
4A02192-003	Angle, Float Fitting Fwd. Lt. (206)	EA
4A02192-004	Angle, Float Fitting Fwd. Rt. (206)	EA
4A02192-005	Fitting, Firewall Soloy(206)	EA
4A02192-006	Fitting, Firewall Soloy(206)	EA
4A02229-002	Fitting, Sturt Lower Aft. (185)	EA
4A02333-006	Strut, Aft. Right. (206)	EA
4A02333-007	Strut, Fwd. Left. (185)	EA
4A02333-008	Strut, Fwd. Right. (185)	EA
4A02333-009	Strut, Mid. Left. (185)	EA
4A02333-010	Strut, Mid. Right. (185)	EA
4A02333-011	Strut, Aft. Left. (185)	EA
4A02333-012	Strut, Aft. Right. (185)	EA
4A02369-006	Step, Rt. (206)	EA
4A02369-007	Step, Lt. (206)	EA
4A02369-008	Step, Rt. (185)	EA
4A02369-009	Step, Lt. (206/3450, 185/4000)	EA
4A02478-001	Lug, Drag Wire (185)	EA
4A02491-001	Fitting, Drag Wire Lower Fwd.	EA
4A02494-001	Lug	EA
4A02496-001	Fitting, Drag Wire Upper Fwd.	EA
4A02496-002	Lug, Drag Wire Aft. (185) (206)	EA
4A02520-003	Bushing, Drag Wire Upper Aft.	EA
4A02602-005	Spacer-Step (185)	EA
4A04000-044	Brake Line Assy.-#4 Alum.	EA
4A04000-046	Brake Line Assy.-#3 Alum.	EA
4A04000-048	Brake Line Assy.-#4 Aeroquip	EA
4A04000-050	Hose Assy-Float Deck to Fus	EA
4A04710-001	Bolt Modified, Shock Strut	EA
4A04713-002	Retainer, 4000, 3730 F-K Code	EA
4A05000-014	Trunnion Assy., Rt.	EA
4A08000-065	Bracket Pulley, Gunwall Lt.	EA
4A08000-066	Bracket Pulley, Gunwall Rt.	EA
4A08000-072	Retract & Steering Cable-FL, Assy	EA
4A08000-075	Cable Assy. Retract Fuselage	EA
4A08000-080	Pulley Bracket #12 Bulk	EA
4A08000-087	Water Rudder Retract Assy. (185)	EA
4A08000-088	Cable Assy. Retract, Belly	EA
4A08000-089	Cable Assy. Steering Belly	EA
4A08000-094	Water Rudder Blade Assy. (185)(206)(Maule)	EA
4A08000-095	Water Rudder Blade Assy. Soloy	EA
4A08000-097	Assy-Water Rudder Post	EA
4A08001-027	Doubler, Water Rudder	EA
4A08151-093	Bracket Pulley	EA
4A08153-009	Clamp, Cable Guide Fwd. (185)	EA
4A08153-010	Clamp, Cable Guide Aft. (185)	EA
4A08197-008	Arm, Water Rudder Rt.	EA
4A08197-009	Arm, Water Rudder Lt.	EA
4A08205-003	Stop, Water Rudder Lock(206)	EA

Part Number	Part Description	Unit of Measure
4A08205-004	Stop, Water Rudder Lock (Soloy)	EA
4A08209-003	Bracket-Pulley Mtg. Bar	EA
4A08340-032	Angle, Pulley Support	EA
4A08414-003	Handle, Water Rudder Retract	EA
4A08506-002	Swivel, Retract Cable Handle	EA
4A08514-002	Post-Water Rudder, Main	EA
4A08722-001	Washer-Doubler, Modified AN96	EA
4A09000-110	Manifold Assy. Rt	EA
4A09000-114	Reservoir Mod. Assy.	EA
4A09000-231	Mainfold Fuselage	EA
4A09003-068	Bracket, Hyd. Hand Pump Rt.	EA
4A09003-069	Bracket, Hyd. Hand Pump Lt.	EA
4A09008-099	Plate, Fuselage Hyd. Pump Aft.	EA
4A09008-100	Channel-Aft Fuselage Pump Long Rt.	EA
4A09008-101	Channel-Aft Fuselage Pump Short Rt.	EA
4A09008-102	Plate, Fuselage Hyd. Pump Top Aft.	EA
4A09008-122	Channel-Pump Mount Short Lt.	EA
4A09008-123	Channel-Pump Mount Long Lt.	EA
4A09273-008	Sleeve-Drain Plug, Tapped	EA
4A09348-008	Angle, Fuselage Hyd. Pump Aft.	EA
4A09392-001	Tube, Return Hyd. Pump	EA
4A09392-002	Spacer, Retract Handle Bracket	EA
4A09393-001	Tube, Pick Up Hyd. Pump	EA
4A11000-003	Gear Warning Plug Assy.	EA
4A11000-008	Wiring Harness Assy. Selector	EA
4A11000-011	Wire Harness Assy. Selector	EA
4A11000-012	Wire Harness Assy.	EA
4A11000-014	Wiring Harness, Gear Advisory	EA
4A11000-100	Gear Selector Assy.	EA
4A12000-004	Ventral Fin Assy. (185)	EA
4A12000-034	Glare Shield Brace Assy. Rt.	EA
4A12000-035	Glare Shield Brace Assy. Lt.	EA
4A12000-048	Ventral Fin Assy. (206)	EA
4A12000-053	Assy. Brkt. Fly Wire Attach	EA
4A12000-054	Assy. Brkt. Fly Wire Attach	EA
4A12001-031	Handle, Saloy Ventral Fin	EA
4A12001-042	Strap, Firewall (206)	EA
4A12002-102	Handle Doubler- Saloy Vtrl Fi	EA
4A12002-111	Extension-Cowl, Seaplane	EA
4A12002-112	Extension-Cowl, Seaplane	EA
4A12002-115	Doubler, Firewall (206)	EA
4A12002-116	Spacer, Firewall (206)	EA
4A12002-191	Handle Doubler- Saloy Vtrl Fi	EA
4A12004-070	Section, Ft.-Vtrl Fin, Saloy	EA
4A12004-071	Section, Rr.-Ventral Fin, Sal	EA
4A12005-211	Reinf. A Vent.Fin,Saloy	EA
4A12005-214	Reinf. D Vent.Fin,Saloy	EA
4A12005-215	Reinf. E Vent.Fin,Saloy	EA
4A12005-221	Skin, Ventral Fin (185)	EA
4A12005-222	Channel-Ventral Fin Fwd. (185)	EA
4A12005-224	Channel, Ventral Fin Aft. (185)	EA
4A12005-225	Cover, Nose Gear Tunnel Aft.	EA
4A12005-226	Cover, Nose Gear Tunnel Fwd.	EA

Part Number	Part Description	Unit of Measure
4A12005-257	Plate	EA
4A12005-297	Support Ventral Fin Aft	EA
4A12008-098	Fence-Aileron (206)	EA
4A12008-110	Plate, Attach-Vntrl Fin, Salo	EA
4A12008-118	Spacer-Static Port, Soloy	EA
4A12010-019	Support, Ventral Fin Mid.	EA
4A12010-021	Rib Former-Front	EA
4A12010-022	Reinforcement-FWD Short Ven Fin	EA
4A12010-023	Reinforcement-Middle Ven Fin	EA
4A12010-024	Reinforcement-Aft Ven Fin (206)	EA
4A12010-025	Reinforcement-FWD-Long Ven Fin	EA
4A12010-027	Skin, Mid Ventral	EA
4A12010-029	Skin, Aft. Ventral	EA
4A12050-001	Spacer, Ventral Fin	EA
4A12163-052	Brace Glare Shield	EA
4A12163-053	Brace Glare Sheild	EA
4A12163-054	Angle Brace, Glare Shield	EA
4A12163-055	Angle Brace, Glare Shield	EA
4A12163-056	Angle Brace, Glare Shield	EA
4A12163-057	Angle Brace, Glare Shield	EA
4A12163-058	Gusset, Bracket Glareshield	EA
4A12206-002	Spacer, 550 Engine Exhaust (206)	EA
4A12624-001	Spacer-Manifold-Hyd.Sys.206	EA
4A16156-007	Spacer, Door Hinge RH Door Lower	EA
4S01158-090	Skin, Top Lt.	EA
4S01158-091	Skin, Top Rt.	EA
4S01158-098	Doubler, Sister Keel Bulkhead Stn #8	EA
515-0012	Socket	EA
515-0074	Dialight Socket, 3/8" DIA	EA
5372K373	Fitting, Elbow, Barbed, Nylon, 1/2"	EA
5801	Switch, Hamlin 2 Wire	EA
5801	Switch, Hamlin 2 Wire	EA
633383	Pump, 108-32-SD-V **Parker Hydrolics	EA
638591	Seal Kit (Emergency Hand Pump-2100s)	EA
640661	Pump, Hydraulic 12 volt	EA
641066	Seal, O-Ring Cylinder Base, 5"DIA	EA
642423	Seal Kit 108 For 636603	EA
69-21-001-W	AOA Lead 10' (Rite Angle TM IIIb)	EA
69-94-001	Vane Sensor, Rite Angle TM	EA
6A01000-028	Bulkhead Stn. #1 Assy.	EA
6A01000-029	Bulkhead Stn. #2 Assy.	EA
6A01000-036	Bulkhead Stn. #9 Right Assy.	EA
6A01000-037	Bulkhead Stn. #9 Left Assy.	EA
6A01000-039	Bulkhead Stn. #11Assy.	EA
6A01000-040	Bulkhead Stn. #11A Assy.	EA
6A01000-045	Bulkhead Stn. #13 Left Assy.	EA
6A01000-050	Bulkhead Stn. #17 Assy.	EA
6A01000-052	Panel Assy. Spreader Bar Fwd. Rt.	EA
6A01000-053	Panel Assy. Spreader Bar Fwd. Lt.	EA
6A01000-054	Panel Assy. Spreader Bar Rear Fwd. Rt.	EA
6A01000-055	Panel Assy. Spreader Bar Rear Fwd. Lt.	EA
6A01000-056	Panel Assy. Spreader Bar Rear Aft. Rt.	EA
6A01000-057	Panel Assy. Spreader Bar Rear Aft. Lt.	EA

Part Number	Part Description	Unit of Measure
6A01000-062	Panel Assy. Drag Brace Right	EA
6A01000-063	Panel Assy. Drag Brace Left	EA
6A01000-064	Tunnel Assy.	EA
6A01000-065	Main Panel Wheel Well Assy.	EA
6A01000-066	Main Panel Wheel Well Assy.	EA
6A01000-071	Cover Float Deck Assy. 17.5in	EA
6A01000-072	Cover Float Deck Assy. 8.75in	EA
6A01000-123	Cover Baggage Assy.	EA
6A01000-176	Bulkhead Stn. #14 Right Assy.	EA
6A01000-404	Flute Bottom Station #7 Assy.	EA
6A01000-456	Inspection Cover, Assy.	EA
6A01002-031	Bulkhead Stn. #13 Body	EA
6A01002-033	Bulkhead Stn. #14 Lt. Body	EA
6A01002-034	Bulkhead Stn. #15 Body	EA
6A01002-035	Bulkhead Stn. #16 Body	EA
6A01002-036	Bulkhead Stn. #17 Body	EA
6A01002-038	Gusset Step	EA
6A01003-020	Spacer, Step Strut Bracket Top Skin	EA
6A01004-021	Stiffener, Baggage Cover, Front	EA
6A01004-022	Stiffener, Cover Baggage	EA
6A01004-022	Stiffener, Cover Baggage	EA
6A01004-068	Stiffener, Baggage Ctr. & Rr.	EA
6A01005-035	Bulkhead Stn. #3 Top	EA
6A01005-036	Bulkhead Stn. #4 Rt. Side	EA
6A01005-037	Bulkhead Stn. #4 Lt. Side	EA
6A01005-038	Bulkhead Stn. #5 Top	EA
6A01005-039	Bulkhead Stn. #6 Lt. Side	EA
6A01005-040	Bulkhead Stn. #6 Rt. Side	EA
6A01005-042	Bulkhead Stn. #7 Rt. Side	EA
6A01005-043	Bulkhead Stn. #8 Lt. Side	EA
6A01005-044	Bulkhead Stn. #8 Rt. Side	EA
6A01005-046	Bulkhead Stn. #10 Rt. Side	EA
6A01005-047	Bulkhead Stn. #10 Lt. Side	EA
6A01005-048	Bulkhead Stn. #11 Top	EA
6A01005-049	Bulkhead Stn. #11B Lt. Side	EA
6A01005-050	Bulkhead Stn. #11B Rt. Side	EA
6A01005-051	Angle, Outside Aft. Lt.	EA
6A01005-052	Angle, Outside Aft. Rt.	EA
6A01005-053	Tunnel	EA
6A01005-054	Cover, Tunnel	EA
6A01005-055	Panel, Wheel Well Vert. Lt.	EA
6A01005-056	Panel, Wheel Well Vert. Rt.	EA
6A01005-057	Panel, Wheel Well Main Lt.	EA
6A01005-058	Panel, Wheel Well Main Rt.	EA
6A01005-061	Cover, Wheel Well Spreader Bar	EA
6A01005-062	Tunnel, Top Fwd.	EA
6A01005-063	Tunnel, Top Aft.	EA
6A01005-180	Bulkhead Stn. #7 Rt. Side	EA
6A01005-181	Bulkhead Stn. #7 Lt. Side	EA
6A01005-217	Bulkhead Stn. #11A Top	EA
6A01005-218	Bulkhead Stn. #12 Top	EA
6A01008-006	Bulkhead Stn. #13 Rt. Body	EA
6A01008-009	Angle, Wheel Weel Stn. #13	EA

Part Number	Part Description	Unit of Measure
6A01008-010	Angle, Carry Thru Strap Rt. I/S	EA
6A01008-011	Angle, Carry Thru Strap Lt. I/S	EA
6A01008-012	Angle, Carry Thru Strap Rt.	EA
6A01008-015	Angle, Carry Thru Strap Lt.	EA
6A01008-016	Angle, Carry Thru Strap Rt. O/S	EA
6A01008-017	Angle, Carry Thru Strap Lt. O/S	EA
6A01008-018	Panel-Reinforcement	EA
6A01008-021	Doubler, Top Skin Fwd.	EA
6A01008-022	Doubler, Top Skin Aft.	EA
6A01008-058	Cover, Access Spreader Bar	EA
6A01008-070	Angle,Strap-Angle, Carry Thru (In/Out)	EA
6A01008-074	Splash Guard	EA
6A01008-119	Bulkhead Stn. #13 Lt. Body	EA
6A01008-133	Baggage Floor Half Aft. Lt.	EA
6A01008-134	Baggage Floor Half Aft. Rt.	EA
6A01008-139	Baggage Floor Half Fwd.	EA
6A01011-001	Shim, Carry Thru Strap	EA
6A01151-047	Stiffener, Side	EA
6A01151-048	Stiffener, Side	EA
6A01151-049	Stiffener, Side	EA
6A01151-050	Stiffener, Side	EA
6A01151-051	Skin, Btm. Lt.	EA
6A01151-096	Stiffener-Side	EA
6A01155-001	Panel, Drag Brace Lt.	EA
6A01155-002	Panel, Drag Brace Rt.	EA
6A01156-009	Bulkhead Stn. #1	EA
6A01156-010	Spacer, Stn. #18 To Top Skin	EA
6A01156-013	Inspection Cover Reinforcement, Wheel Well, Small	EA
6A01156-014	Inspection Cover Reinforcement, Wheel Well, Large	EA
6A01156-015	Spacer, Cleat Attach	EA
6A01156-016	Plate, Cleat Attach	EA
6A01156-018	Bracket, Top Skin Step Strut	EA
6A01156-019	Doubler, Side	EA
6A01156-020	Doubler, Top	EA
6A01156-021	Spacer, Stn. #18 Lwr.	EA
6A01156-052	Spacer, Skin Side	EA
6A01156-054	Angle, Attach Rt. Top Rail Stn. #9	EA
6A01156-055	Angle, Attach Lt. Top Rail Stn. #9	EA
6A01156-058	Bracket, Canoe Paddle Stop, R/H	EA
6A01156-059	Bracket, Canoe Paddle Stop, L/H	EA
6A01156-069	Doubler, Cable #15 Bulk	EA
6A01156-070	Doubler, Cable #17 Bulk	EA
6A01156-102	Shim-Stiffener, Top Skin Rr.	EA
6A01156-105	Spacer-Stiffener, Top Skin Mi	EA
6A01156-114	Doubler Cover	EA
6A01156-123	Access Cover Reinforcement	EA
6A01158-006	Bulkhead Stn. #2 Btm.	EA
6A01158-007	Bulkhead Stn. #3 Btm.	EA
6A01158-008	Bulkhead Stn. #4 Btm.	EA
6A01158-009	Bulkhead Stn. #5 Btm.	EA
6A01158-010	Bulkhead Stn. #6 Btm.	EA
6A01158-011	Bulkhead Stn. #7 Fwd. Btm.	EA
6A01158-012	Bulkhead Stn. #7 Aft. Btm.	EA

Part Number	Part Description	Unit of Measure
6A01158-013	Bulkhead Stn. #8-1 Fwd. Btm.	EA
6A01158-016	Bulkhead Stn. #9 Aft. Btm.	EA
6A01158-017	Bulkhead Stn. #10 Btm.	EA
6A01158-018	Bulkhead Stn. #11 & 11A Fwd. Btm.	EA
6A01158-030	Skin, Side Inboard Rt.	EA
6A01158-031	Skin, Side Inboard Lt.	EA
6A01158-033	Skin, Side Outboard Lt.	EA
6A01158-036	Skin, Top Rt.	EA
6A01158-037	Skin, Top Lt.	EA
6A01158-134	Skin, Aft. Rt.	EA
6A01158-135	Skin, Aft. Lt.	EA
6A01158-151	Cover, Weel Well Inst. Lg.	EA
6A01158-152	Cover, Wheel Well Inst.SM.	EA
6A01162-002	Cover, Baggage	EA
6A01162-005	Lip, Baggage Lt.	EA
6A01162-012	Lip, Baggage Rt.	EA
6A01163-004	Cover, Inspection	EA
6A01163-042	Cover Forward Assy	EA
6A01163-124	Inspection Cover	EA
6A01183-001	Angle, Drag Brace Attach Lt.	EA
6A01183-002	Angle, Drag Brace Attach Rt.	EA
6A01213-003	Ballard, (cleat, tie-down)	EA
6A01338-002	Spreader Bar Panel; Fwd. Front Rt.	EA
6A01338-003	Spreader Bar Panel; Aft. Front Lt.	EA
6A01338-004	Spreader Bar Panel; Aft. Front Rt.	EA
6A01338-005	Spreader Bar Panel; Fwd. Rear Lt.	EA
6A01338-006	Spreader Bar Panel; Fwd. Rear Rt.	EA
6A01338-009	Spreader Bar Panel; Aft. Rear Lt.	EA
6A01338-010	Spreader Bar Panel; Aft. Rear Rt.	EA
6A01339-028	Angle, Slide Tube Right	EA
6A01339-029	Angle, Slide Tube Left	EA
6A01339-030	Stiffener, Top Skin Fwd.	EA
6A01339-032	Stiffener, Top Skin Aft.	EA
6A01339-047	Angle, Stewart	EA
6A01340-015	Angle, Tunnel	EA
6A01340-017	Angle, Tunnel Attach Fwd. Lt.	EA
6A01340-018	Angle, Tunnel Attach Fwd. Rt.	EA
6A01347-003	Keel, Aft.	EA
6A01348-001	Angle, Top Skin Lt.	EA
6A01348-002	Angle, Top Skin Rt.	EA
6A01348-015	Angle, Top Rail Fwd.	EA
6A01348-016	Angle, Top Rail Fwd.	EA
6A01348-017	Angle, Top Rail Mid.	EA
6A01348-018	Angle, Top Rail Mid.	EA
6A01348-120	Angle, Top Skin	EA
6A01351-004	Chine, Fwd. Rt.	EA
6A01352-004	Angle, Top Skin Reinforcement	EA
6A01352-005	Angle, Top Skin	EA
6A01352-006	Angle, Top Skin Baggage	EA
6A01353-004	Stiffener-Side Skin, Rt.	EA
6A01353-005	Stiffener-Side Skin, Lt.	EA
6A01354-003	Keel, Main	EA
6A01357-002	Angle, Side Stn. #9 Rt.	EA

Part Number	Part Description	Unit of Measure
6A01357-003	Angle, Spreader Bar Panel Fwd. Lt.	EA
6A01357-004	Angle, Spreader Bar Panel Fwd. Rt.	EA
6A01357-005	Angle, Spreader Bar Panel Aft. Lt.	EA
6A01357-006	Angle, Spreader Bar Panel Aft. Rt.	EA
6A01357-007	Angle, Spreader Bar Panel Aft. Lt.	EA
6A01357-008	Angle, Spreader Bar Panel Aft. Rt.	EA
6A01359-001	Angle, Sister Keel Attach Stn. #	EA
6A01359-002	Angle, Main Keel Attach	EA
6A01359-003	Angle, Main Keel Attach	EA
6A01359-004	Angle Attach	EA
6A01359-004	Angle Attach	EA
6A01359-007	Angle, Keel Attach Stn. #2 Lt.	EA
6A01359-008	Angle, Keel Attach Stn. #2 Rt.	EA
6A01359-009	Angle, Sister Keel Attach Stn. #2	EA
6A01359-010	Angle, Keel Attach Stn. #3 Rt.	EA
6A01359-011	Angle, Keel Attach Stn. #3 Lt.	EA
6A01359-012	Angle, Sister Keel Attach Stn. #3	EA
6A01359-013	Angle, Sister Keel Attach Stn. #3	EA
6A01359-014	Angle, Nose Box Attach Stn. #3 Rt.	EA
6A01359-015	Angle, Nose Box Attach Stn. #3 Lt.	EA
6A01359-017	Angle, Keel Attach Stn. #4 Lt.	EA
6A01359-018	Angle, Keel Attach Stn. #5 Rt.	EA
6A01359-019	Angle, Keel Attach Stn. #5 Lt.	EA
6A01359-020	Angle, Sister Keel Attach Stn. #5	EA
6A01359-021	Angle, Sister Keel Attach Stn. #5	EA
6A01359-022	Angle, Vert. Stn. #7 Rt.	EA
6A01359-023	Angle, Vert. Stn. #7 Lt.	EA
6A01359-024	Angle, Keel Attach Stn. #9 Rt.	EA
6A01359-025	Angle, Keel Attach Stn. #9 Lt.	EA
6A01359-026	Angle, Sister Keel Attach Stn. #9	EA
6A01359-027	Angle, Sister Keel Attach Stn. #9	EA
6A01359-032	Angle, Sister Keel Attach Stn. #11	EA
6A01359-033	Angle, Sister Keel Attach Stn. #11	EA
6A01359-034	Angle, Horiz. Tunnel Attach	EA
6A01359-035	Angle, Keel Attach Stn. #11B Lt.	EA
6A01359-036	Angle, Keel Attach Stn. #11B Rt.	EA
6A01359-037	Angle, Horiz. Stn. #11B	EA
6A01359-038	Angle, Horiz. Top Stn. #12	EA
6A01359-039	Angle, Horiz. Lower Stn. #12	EA
6A01359-041	Angle, Sister Keel Attach Stn. #1	EA
6A01359-042	Angle, Horiz. Stn. #13	EA
6A01359-044	Angle, Reinforcement Stn. #18	EA
6A01359-045	Angle, Spreader Bar Panel Aft. Lt.	EA
6A01359-046	Angle, Spreader Bar Panel Rt.	EA
6A01359-047	Angle, Drag Brace Panel Lt.	EA
6A01359-048	Angle, Drag Brace Panel Rt.	EA
6A01359-049	Angle Support, Wheel Well Lt.	EA
6A01359-050	Angle Support, Wheel Well Rt.	EA
6A01359-051	Angle, Nose Bumper Attach	EA
6A01359-087	Angle, Vert. Stn #13 Lt.	EA
6A01359-088	Angle, Vert. Stn. #13 Rt.	EA
6A01359-092	Angle, Vert. Bend Stn. #7 Rt.	EA
6A01359-093	Angle, Vert Bend Stn. #7 Lt.	EA

Part Number	Part Description	Unit of Measure
6A01359-113	Angle, Nose Bumper Btm.	EA
6A01361-001	Angle, Reinforcement Stn. #18 Lt.	EA
6A01361-002	Angle, Reinforcement Stn. #18 Rt.	EA
6A01361-003	Angle, Sister Keel Attach Aft.	EA
6A01361-004	Sister Keel, Inner Fwd. Rt.	EA
6A01361-005	Sister Keel, Inner Fwd. Lt.	EA
6A01361-006	Sister Keel, Afterbody, inner	EA
6A01361-007	Sister Keel, Afterbody, inner	EA
6A01361-008	Sister Keel, Outer Aft. Rt.	EA
6A01361-009	Sister Keel, Outer Aft. Lt.	EA
6A01361-012	Stiffener, Top Skin Middle	EA
6A01361-025	Angle, Support Stn. #7	EA
6A01361-036	Angle, Sister Keel	EA
6A01363-003	Chine, Aft. Lt.	EA
6A01363-004	Chine, Aft. Rt.	EA
6A01427-001	Angle, Trunion Attach Stn. #12 Lt.	EA
6A01427-002	Angle, Trunion Attach Stn. #12 Rt.	EA
6A01567-003	Cover Seal, 8.75" X 12"	EA
6A01567-004	Cover Seal, 12" X 17.50"	EA
6A01567-005	Cover Seal, 6.5" X 13.75"	EA
6A01740-006	Hinge, Baggage Cover 3/4in	EA
6A01741-001	Hinge, Baggage Cover 1.5in	EA
6A02000-023	Strut, Assy, Aft, Left	EA
6A02000-024	Strut, Assy, Aft, Right	EA
6A02000-031	Strut, Assy, Fwd, Left. (MKIII)	EA
6A02000-033	Strut, Assy, Mid, Left	EA
6A02000-076	Strut, Assy, Aft, Right, 6000 lb	EA
6A02000-125	Strut, Step Fitting Assy.	EA
6A02000-126	Strut Step Fitting Assy.	EA
6A02032-004	Fitting, Strut Fwd. 6000lb.	EA
6A02032-004	Fitting, Strut Fwd. 6000lb.	EA
6A02039-001	Fitting, Edo Strut	EA
6A02040-004	Fitting, Edo Strut	EA
6A02046-004	Fitting, Drag Wire Aft. Lower	EA
6A02048-002	Clevis Cross Wire Fwd. Rt. 6000Lb	EA
6A02048-003	Wire Pull Aft. Rt. 6000lb	EA
6A02056-001	Clevis-Brace Wire Rr. Lt. Upr	EA
6A02056-003	Clevis-Brace Wire, Ft. Lt.	EA
6A02056-004	Clevis-Brace Wire, Ft. Rt.	EA
6A02056-005	Wire Pull Aft. Lt. 6000lb.	EA
6A02056-006	Clevis Cross Wire Fwd. Lt. 6000Lb	EA
6A02059-002	Clevis-Brace Wire, Rr. Rt.	EA
6A02063-002	Fitting, Drag Wire Fwd. Lower	EA
6A02187-001	Fitting, Strut Rear Upper	EA
6A02187-002	Fitting, Strut, Fwd Lower, RH	EA
6A02187-003	Fitting, Strut, Fwd Lower, Left	EA
6A02187-004	Joint, Strut Lower Aft. Rt.	EA
6A02187-005	Joint, Strut Lower Aft. Lt.	EA
6A02187-006	Fitting, Strut Upper Mid.	EA
6A02187-006	Fitting, Strut Upper Mid.	EA
6A02187-008	Fitting, Strut Upper Aft. 6000Lb	EA
6A02198-001	Fitting, Strut Aft.	EA
6A02198-002	Fitting, Strut Upper Fwd.	EA

Part Number	Part Description	Unit of Measure
6A02198-003	Fitting, Strut	EA
6A02198-003	Fitting, Strut	EA
6A02198-004	Fitting, Strut Fwd. Upper	EA
6A02204-002	Fitting, Strut Fwd. Upper	EA
6A02204-002	Fitting, Strut Fwd. Upper	EA
6A02231-001	Lug-Lwr Rr. Step Lt.	EA
6A02231-002	Lug-Lwr Rr. Step Rt.	EA
6A02262-001	Bushing, Strut Fwd. Upper	EA
6A02262-002	Bushing, Strut Rod End Fwd.	EA
6A02273-003	Bushing, Strut	EA
6A02273-006	Spacer, Step Strut	EA
6A02334-001	Strut-Step Left.	EA
6A02334-002	Strut-Step Right.	EA
6A02362-007	Fitting, Float to Strut	EA
6A02368-001	Step, Fwd. Btm. Lt.	EA
6A02368-002	Step, Fwd. Btm. Rt.	EA
6A02368-003	Step, Fwd. Lt. (Turbo)	EA
6A02368-004	Step, Fwd. Rt. (Turbo)	EA
6A02368-005	Step, Top Fwd. Lt.	EA
6A02368-006	Step, Top Fwd. Rt.	EA
6A02368-007	Step, Aft. Lt.	EA
6A02368-008	Step, Aft. Rt.	EA
6A02369-058	Step - Top - Alaskan Door Mod.	EA
6A02369-059	Step - Bottom - Alaskan Door Mod.	EA
6A02426-002	Bracket, Step Strut Right.	EA
6A02606-003	Spacer, Strut Step Top	EA
6A02607-001	Spacer, Strut Step Bottom	EA
6A03000-007	Spreader Bar Assy. Aft.	EA
6A03000-024	Spreader Bar Assy. Fwd.	EA
6A03005-179	Strip Filler - Fairing	EA
6A03158-028	Fairing, Spreader Bar Aft.	EA
6A03158-029	Fairing, Spreader Bar Fwd.	EA
6A03702-009	Bolt, Spreader Bar Modified	EA
6A04000-016	Axle Assy.	EA
6A04000-023	Hyd. Line Assy. Brake 83in	EA
6A04000-024	Hyd. Line Assy. Brake 34in	EA
6A04000-025	Hyd. Line Assy. Brake 20.75in	EA
6A04000-026	Hyd. Line Assy. Brake 14in	EA
6A04000-027	Hyd. Line Assy. Brake 5.25in	EA
6A04000-054	Trunnion, Main Gear	EA
6A04000-084	Brake Line, Internal	EA
6A04000-104	Brake Assy. Rt.	EA
6A04000-105	Brake Assy. Lt.	EA
6A04008-024	Brake Line Clip	EA
6A04093-002	Spacer, Main Wheel Axle	EA
6A04256-004	Piston Shock- Strut Old Style	EA
6A04258-004	Fitting, Brake Line	EA
6A04263-002	Grease Insert-Main Axle	EA
6A04263-003	Grease Insert-Main Axle	EA
6A04263-004	Grease Insert-Main Axle	EA
6A04270-001	Metering Tube Shock-Strut	EA
6A04271-003	Cap	EA
6A04275-001	Nut Check	EA

Part Number	Part Description	Unit of Measure
6A04276-001	Nut Check	EA
6A04296-001	Gland Shock-Strut	EA
6A04297-001	Tube, Drag Brace	EA
6A04307-001	Fitting, Axle	EA
6A04311-001	Drag Brace	EA
6A04407-001	Outer Cylinder Shock-Strut	EA
6A04510-001	Axle, Main Gear	EA
6A04538-001	Inner Cylinder Shock Strut 6100	EA
6A04561-001	Film-Brake Caliper Surface Pr	EA
6A04616-002	Grease Retainer	EA
6A04743-001	Wiper-Shock Strut, Modified(Hallite)#888-1810	EA
6A05000-006	Assy, Ram, Main Gear 6000 Old Style	EA
6A05000-007	Cylinder End Cap Assy. Old Style With Fitting & O ring	EA
6A05000-037	Carriage with bushings Old Style	EA
6A05001-007	Shim-Cylinder	EA
6A05010-001	Shim-Cylinder	EA
6A05041-001	Lock-Main, Fwd, (61,8,10,13)	EA
6A05042-001	Lock-Main, Aft., (61,8,10,13)	EA
6A05087-001	Lock-Set Screw- Hollow	EA
6A05116-001	Cylinder-Main Gear Old Style	EA
6A05156-026	Shim, Cylinder	EA
6A05158-019	Cover, Carriage	EA
6A05181-001	Support, Ring Cylinder	EA
6A05193-001	Catch, Lock Hook	EA
6A05196-001	Cap, Slide Tube Aft.	EA
6A05199-001	Sell 6A05000-008 Flange-Cylinder Main Gear	EA
6A05208-001	Fitting, Slide Tube Aft.	EA
6A05259-002	End, Slide Tube	EA
6A05268-001	Cap, Cylinder End Sell 6a05000-007	EA
6A05309-001	Sell 6A05000-037 Old Style 5/2002	EA
6A05402-003	Slide Tube	EA
6A05533-001	Spring, Lock	EA
6A05533-001	Spring, Lock	EA
6A05580-004	Wiper, Main	EA
6A05702-008	PIN, Modified	EA
6A06000-006	Yoke Assy.	EA
6A06000-011	Nose Fork and Pivot Assy. Complete	EA
6A06196-002	Plate, Nose Spring Attach Lower	EA
6A06199-003	Leg, Nose Wheel Fork, Left	EA
6A06199-004	Leg, Nose Wheel Fork, Right	EA
6A06202-001	Block, Tow	EA
6A06256-006	Yoke, Nose Wheel	EA
6A06265-001	Axle, Nose Wheel	EA
6A06268-002	Spacer, Nose Axle	EA
6A06312-001	Pivot Block, Nose Gear	EA
6A06501-001	Pin, Castor Nose Gear	EA
6A06512-002	Piston, Centering	EA
6A06616-003	Grease Retainer	EA
6A07000-008	Ass'y, Ram Nose Gear 6100/8000	EA
6A07000-008	Ass'y, Ram Nose Gear 6100/8000	EA
6A07116-002	Cylinder Nose Gear Old Style	EA
6A07156-022	Cover, Nose Box Btm.	EA
6A07156-023	Cover, Nose Box Top	EA

Part Number	Part Description	Unit of Measure
6A07158-129	Spacer, Nose Cylinder	EA
6A07184-001	Plate, Nose Spring Attach	EA
6A07199-002	Trolley Nose Gear	EA
6A07204-001	Link Trolley Nose Gear	EA
6A07210-001	End Cap Nose Box	EA
6A07263-001	Rod End, Nose Gear Ram	EA
6A07264-002	Flange, Nose Sell 6A07000-005 Old Style	EA
6A07264-003	Spacer, Flange Cylinder Nose Gear	EA
6A07337-001	End, Nose Gear Track Left.	EA
6A07337-002	End, Nose Gear Track Right.	EA
6A07357-036	Angle, Nose Box Bottom	EA
6A07364-001	Track, Side Nose Box Lt.	EA
6A07364-002	Track, Side Nose Box Rt.	EA
6A07427-003	Angle, Nose Box Top	EA
6A07534-001	Axle Trolley	EA
6A07534-002	Axle Trolley Link	EA
6A07544-001	Roller, Trolley Bearing	EA
6A07580-005	Wiper, Nose	EA
6A07603-001	Slide Block Trolley	EA
6A08000-008	Cable Assy. Balance Spreader Bar	EA
6A08000-009	Cable Assy. Retract Fuselage	EA
6A08000-010	Cable Assy. Retract Fuselage	EA
6A08000-011	Cable Assy. Balance	EA
6A08000-012	Cable Assy. Steering	EA
6A08000-013	Cable Assy. Retract	EA
6A08000-014	Cable Assy. Steering	EA
6A08000-015	Cable Assy. Retract Handle	EA
6A08000-016	Pulley Bracket Assy. Rt.	EA
6A08000-017	Pulley Bracket Assy. Lt.	EA
6A08000-018	Blade & Arm Assy.	EA
6A08000-019	Pulley Bracket Assy. Steering	EA
6A08000-021	Pulley Bracket Assy. Belly	EA
6A08000-061	Cable Assy. Retract Handle Turbo	EA
6A08000-090	Pulley Bracket Assy. Belly T	EA
6A08001-005	Water Rudder Blade	EA
6A08005-087	Bracket, Pulley Belly Fwd. O/S	EA
6A08005-088	Bracket, Pulley Belly Fwd. I/S	EA
6A08005-089	Bracket, Pulley Lower	EA
6A08005-090	Bracket, Pulley Upper	EA
6A08005-091	Bracket, Pulley Fuselage	EA
6A08151-053	Bracket, Pulley Cable Aft.	EA
6A08153-003	Bracket, Pulley	EA
6A08153-004	Bracket, Fuselage Pulley	EA
6A08153-005	Bracket, Fuselage Cable Aft.	EA
6A08153-011	Pulley Bracket-Belly, Turbo Be	EA
6A08153-012	Pulley Bracket-Channel Turbo	EA
6A08156-017	Bracket, Water Rudder Pulley, Aft.	EA
6A08183-005	Stop, Water Rudder	EA
6A08193-002	Pivot, Pulley Cable	EA
6A08209-002	Bracket, Mounting Bar Pulley	EA
6A08336-001	Bracket, Pulley	EA
6A08336-002	Bracket, Pulley	EA
6A08355-001	Bracket, Pulley	EA

Part Number	Part Description	Unit of Measure
6A08355-002	Bracket, Pulley	EA
6A08365-001	Bracket, Pulley	EA
6A08365-002	Bracket, Pulley	EA
6A08414-002	Handle, Retract	EA
6A08601-002	Roller-Rudder Post Cable	EA
6A08613-003	Spacer-Retract Handle	EA
6A09000-027	Manifold Assy. Lt.	EA
6A09000-028	Manifold Assy. Rt.	EA
6A09000-069	Hyd. Line Assy. Float to Float	EA
6A09000-128	Fuse Holder Assy. Rt.	EA
6A09000-129	Fuse Holder Assy. Lt.	EA
6A09000-151	Angle Assy. Pump Brkt., Top	EA
6A09000-152	Angle Assy. Pump Brkt., Btm	EA
6A09000-157-28V	Gear Selector Valve Assy. 24Volt	EA
6A09003-029	Bracket, Pump Mount Top	EA
6A09008-112	Channel-Pump Mount	EA
6A09008-113	Plate, Pump Mount	EA
6A09008-114	Channel-Pump Mount	EA
6A09046-001	Manifold Hydraulic	EA
6A09183-003	Spacer, Hydraulic Pump	EA
6A09207-001	Manifold	EA
6A09258-003	Body Check Valve	EA
6A09348-003	Angle, Attach Hydraulic Pump	EA
6A09357-040	Angle Bracket, Horizontal	EA
6A09359-055	Angle, Pump Mount Plate Top	EA
6A09398-001	Tube, Breather Pump	EA
6A09706-001	Filter Pump Breather, Modified	EA
6A09713-001	Spring-Selector, Modified	EA
6A10000-004	Wire Harness Assy.	EA
6A10000-005	Wire Harness Assy.	EA
6A11000-015	Control Console Assembly	EA
6A11003-024	Panel, Retract Handle Attach Rt.	EA
6A11003-025	Panel, Retract Handle Attach Lt.	EA
6A11003-026	Doubler, Console Body Inside	EA
6A11005-084	Cover, Console Back	EA
6A11005-085	Body, Hydraulic Gear Console	EA
6A11005-235	Placard Brkt.-Emer. Hyd. Hand	EA
6A11032-002	Arm Gear, Selector	EA
6A11156-024	Cover, Top, Hydraulic Gear Console	EA
6A11190-001	Plate, Gear Selector Mount	EA
6A11261-005	Fitting, Console	EA
6A11274-002	Washer-Selector Knob	EA
6A11278-001	Bushing, Gear Selector	EA
6A11339-033	Angle, Console Attach Lt.	EA
6A11339-034	Angle, Console Attach Rt.	EA
6A11506-001	Handle, Gear Selector	EA
6A11603-002	Knob, Gear Selector	EA
6A11704-001	Ball-Gear Selector, Modified	EA
6A11705-001	Fitting-Hand Pump	EA
6A12000-006	Flow Energizer Assy.	EA
6A12004-058	Skin, Vertical Fin	EA
6A12005-155	Cover, Tail Cone	EA

Part Number	Part Description	Unit of Measure
6A12005-156	Channel-Horizontal-Support	EA
6A12005-157	Channel-Vert. Support Long	EA
6A12005-158	Channel-Vert. Support Short	EA
6A12005-159	Doubler, Rib Stabilizer	EA
6A12156-039	Spacer, Ventral Fin Trailing Edge	EA
6A12156-040	Spacer, Ventral Fin Trailing Edge	EA
6A12156-041	Spacer, Ventral Fin Nose	EA
6A12156-164	Bracket-Flow Energizer	EA
6A12156-165	Bracket-Flow Energizer	EA
6A12157-002	Finlet, Stabilizer	EA
6A12340-063	Angle-Mtg., Flow Energizer, Upper Lt.	EA
6A12340-064	Angle-Mtg., Flow Energizer, Lower Rt.	EA
6A12340-131	Angle-Mtg., Flow Energizer, Lower Lt.	EA
6A13000-004	Bracket Finlet Assembly	EA
6A13000-005	Finlet Assembly, Bottom	EA
6A13000-006	Finlet Assembly, Top	EA
6A13002-217	Reinforcement, Wing	EA
6A13004-182	Bulkhead Support, Upper	EA
6A13163-074	Bracket, Finlet	EA
6A13487-005	Spar, Butt Plate Rear	EA
6A13581-005	Cap, Aileron	EA
6A15061-001	Spacer, Front Seat, Short	EA
6A15215-001	Bracket,Sling Seat	EA
6A16000-018	Fitting, Fuselage	EA
6A16539-004	Bushing, Fuselage	EA
6P01158-157	Cover-#3 Bulkhead Cover Openi	EA
6P02000-104	Strut Assy, Ctr. R	EA
6P02000-107	Strut, Ass'y Frt. L.	EA
6P02027-001	Fitting-Strut Ctr Lwr L	EA
6P02027-002	Fitting-Strut, Ctr. Lwr. R	EA
6P02028-001	Fitting-Aft. Drag Wire, Lwr.	EA
6P02046-005	Fitting-Fwd. Drag Wire, Lwr.	EA
6P02056-010	Fitting-Ft. Strut, Lwr. Right.	EA
6P02056-011	Fitting-Ft. Strut Lwr. Left.	EA
6P02059-006	Fitting-Ft. Strut, Upr.	EA
6P02063-003	Fitting-Aft. Drag Wire, Lwr.	EA
6P02066-002	Fitting-Link, Strut Upr. Rr.	EA
6P02066-003	Fitting-Link, Strut Ctr. Upr.	EA
6P02106-001	Bracket Support, Ft. Strut, L	EA
6P02106-002	Bracket Support, Ft. Strut, R	EA
6P02107-001	Fitting-Rr. Ft. Strut Attach,	EA
6P02107-002	Fitting-Rr. Ft. Strut Attach,	EA
6P02108-001	Fitting-Ctr. Ft. Strut Attach	EA
6P02109-001	Bracket-Support Rr. Strut Lt.	EA
6P02109-002	Bracket-Support Rr. Strut Rt.	EA
6P02369-015	Step Pilatus	EA
6P02369-016	Step Pilatus	EA
6P02369-017	Step Pilatus	EA
6P02369-018	Step Pilatus	EA
6P02458-001	Lug-Drag Wire Rr.	EA
6P02471-001	Lug-Drag Wire Ft.	EA
6P02602-007	Spacer-Step Pilatus	EA
6P02602-008	Spacer-Step-Pilatus	EA

Part Number	Part Description	Unit of Measure
6P04000-070	Assembly Hydraulic 17 IN.	EA
6P04000-071	Assembly Hydraulic 18 In	EA
6P04261-007	Metering Pin - shock Strut	EA
6P08000-100	Pivot Block Assembly, Water Rudder	EA
6P08000-101	Pulley Bracket Assembly-Water Rudder	EA
6P08000-102	Assy.-Bracket-Water Rud. Retract	EA
6P08000-104	Assy.-Retract Cable	EA
6P08000-105	Assy. Steering Cable	EA
6P08155-015	Bracket-Pully-Water Rud. Stee	EA
6P08205-005	Stop-Water Rudder	EA
6P08317-001	Pivot Block-Water Rudder Steering	EA
6P08414-004	Handle-Water Rudder, Retract	EA
6P08454-001	Bushing-Water Rudder Stearing	EA
6P08454-002	Bushing, Water Rudder Post	EA
6P08535-005	Arm-Water Rudder Post	EA
6P09000-163	Angle, Ass'y Pump Mount	EA
6P09000-165	Ass'y-Bracket Hyd. Pump Mou	EA
6P09000-166	Assy.- Gear Selection Head	EA
6P09000-167	Assy.-Hyd. Hose- Manifold	EA
6P09000-168	Assy.Hyd Hose-Contrl Valve	EA
6P09000-169	Assy.Hyd Hose-Hand Pump P.	EA
6P09000-170	Assy.Hyd Hose-Hand Pump R.	EA
6P09000-171	Assy.Hyd Hose-Control Valve	EA
6P09163-039	Bracket-Hydraulic Pump Mount	EA
6P12000-012	Access Hole Ass'y-Skin Supp	EA
6P12000-013	Access Hole Ass'y-Skin Supp	EA
6P12000-019	Ass'y Ventral Fin	EA
6P12000-020	Flow Energizer	EA
6P12150-118	Vortex Generator	EA
6P12156-111	Angle, Support Div Spring-Atta	EA
6P12158-149	Cover-Access Hole	EA
6P12158-150	Cover-Access Hole	EA
6P12158-153	Aileron Fence-Lower	EA
6P12158-154	Aileron Fence-Lower	EA
6P12158-155	Aileron Fence-Top	EA
6P12158-156	Fence Top	EA
6P12162-018	Angle, Elevator Div. Spring Attach	EA
6P12163-030	Doubler, Bulkhead Fuselage Rt.	EA
6P12163-031	Doubler, Bulkhead Fuselage Lt.	EA
6P12163-033	Doubler, Skin Support Fwd. Lt.	EA
6P12163-034	Doubler, Skin Support Aft.	EA
6P12163-035	Doubler, Bulkhead Fuselage Lt.	EA
6P12163-036	Doubler, Bulkhead Fuselage Rt.	EA
6P12163-038	Doubler, Skin Support Fwd. Rt.	EA
6P12340-090	Angle, Skin Support	EA
6P12340-093	Angle, Flow Energizer Lower Lt.	EA
6P12340-094	Angle, Flow Energizer Lower Rt.	EA
6P12353-006	Stiffener-Skin Support-Bell	EA
6P12502-003	Bushing-Elev. Stop	EA
6P12562-002	Vortex Generator	EA
6P12563-001	Spring-Elev. Down	EA
6S01000-059	Panel Assy. Spreader Bar Aft.	EA
6S01000-061	Panel Assy. Spreader Bar Aft.	EA

Part Number	Part Description	Unit of Measure
6S01001-004	Spacer, Sister Keel-Bulkhead	EA
6S01002-032	Bulkhead Stn. #13 Body	EA
6S01002-040	Cover, Nose Box	EA
6S01003-019	Doubler, Top Skin	EA
6S01003-044	Spacer, Top Skin Aft. Spreader Bar Pan	EA
6S01005-082	Angle, Skin Attach	EA
6S01005-083	Angle, Skin Attach Upper Lt.	EA
6S01005-219	Bulkhead Stn. #12 Top	EA
6S01008-019	Angle, Skin Attach Lower Lt.	EA
6S01008-020	Angle, Skin Attach Lower Rt.	EA
6S01155-003	Channel Support	EA
6S01156-012	Spacer, Carry Thru Strap	EA
6S01158-034	Skin, Side Outboard Rt.	EA
6S01158-035	Skin, Side Outboard Lt.	EA
6S01158-039	Skin, Top Lt.	EA
6S01158-099	Doubler, Sister Keel Bulk. Stn. #16	EA
6S01158-111	Bulkhead Stn. #11B Str. Ft. Btm.	EA
6S01158-112	Bulkhead Stn. #11B Aft. Btm.	EA
6S01158-115	Bulkhead Stn. #12 Fwd. Btm.	EA
6S01158-116	Bulkhead Stn. #12 Aft. Btm.	EA
6S01158-132	Skin, Aft. Rt.	EA
6S01158-133	Skin, Aft. Lt.	EA
6S01163-008	Cover, Inspection	EA
6S01163-008	Cover, Inspection	EA
6S01338-007	Spreader Bar Panel; Fwd. Rear Lt.	EA
6S01338-008	Spreader Bar Panel; Fwd. Rear Rt.	EA
6S01338-011	Spreader Bar Panel; Aft. Rear Lt.	EA
6S01338-012	Spreader Bar Panel; Aft. Rear Rt.	EA
6S01347-004	Keel, Aft.	EA
6S01354-004	Keel, Main	EA
6S01359-043	Angle, Stn. #13	EA
6S01359-052	Angle, Nose Bumper Attach Top	EA
6S01359-086	Angle, Horiz. Stn. #12	EA
6S01361-010	Sister Keel, Aft. Rt.	EA
6S02362-008	Fitting, Float to Strut	EA
6S08003-027	Panel, Side Retract Mount Lt.	EA
6S08003-028	Panel, Side Retract Mount Rt.	EA
6S08200-004	Spacer, Retact Handle Mount	EA
6S08200-005	Spacer, Retract Handle Mount F	EA
6S08359-053	Bracket, Pulley Lt.	EA
6S08359-054	Bracket, Pulley Rt.	EA
775260	Assy, Reservoir And Sight Glass	EA
775446	Tank, Hyd Pump 4000,10000,13000	EA
7G3.0	Gasket, Scoop Tube Assy	EA
81153S	Spring, Centering, 1-1/2" DIA, 6" Spring length	EA
814104A-1475-A	Retainer Coupler	EA
888 1310	Wiper, 1-5/8"IDx2"OD (4000shock)	EA
888 1910	Wiper, 3"IDx3-1/2"OD (10000/13000 shock)	EA
8880410	Wiper, 3/4"IDx1-1/8"OD (6100-13000)	EA
8880510	Wiper, 7/8"IDx1=1/4"OD (6100-13000 nose)	EA
8A01000-076	Bulkhead Stn. #1 Assy.	EA
8A01000-077	Bulkhead Stn. #2 Assy.	EA

Part Number	Part Description	Unit of Measure
8A01000-078	Bulkhead Stn. #3 Assy.	EA
8A01000-079	Bulkhead Stn. #4 Assy.	EA
8A01000-080	Bulkhead Stn. #5 Assy.	EA
8A01000-081	Bulkhead Stn. #6 Assy.	EA
8A01000-082	Bulkhead Stn. #7 Assy.	EA
8A01000-083	Bulkhead Stn. #8 Left Assy.	EA
8A01000-084	Panel Spreader Assy. Bar Fwd. Rt.	EA
8A01000-085	Panel Assy. Spreader Bar Fwd. Lt.	EA
8A01000-086	Bulkhead Stn. #9 Assy.	EA
8A01000-087	Bulkhead Stn. #10 Assy.	EA
8A01000-088	Bulkhead Stn. #11 Assy.	EA
8A01000-089	Bulkhead Stn. #12 & 13 Assy.	EA
8A01000-090	Bulkhead Stn. #14 Assy.	EA
8A01000-091	Bulkhead Stn. #15 Assy.	EA
8A01000-092	Bulkhead Stn. #16 Assy.	EA
8A01000-093	Bulkhead Stn. #17 Left Assy.	EA
8A01000-094	Bulkhead Stn. #18 Assy.	EA
8A01000-095	Bulkhead Stn. #19 Left Assy.	EA
8A01000-096	Bulkhead Stn. #20 Right Assy.	EA
8A01000-097	Bulkhead Stn. #21 Left Assy.	EA
8A01000-098	Bulkhead Stn. #22 Right Assy.	EA
8A01000-099	Bulkhead Stn. #23 Assy.	EA
8A01000-100	Panel Assy. Spreader Bar Fwd. Rt.	EA
8A01000-101	Panel Assy. Spreader Bar	EA
8A01000-102	Panel Assy. Spreader Bar Rear Aft.	EA
8A01000-103	Panel Assy. Spreader Bar Rear Aft.	EA
8A01000-104	Strut Panel Assy. Mid. Right.	EA
8A01000-105	Strut Panel Assy. Mid. Left.	EA
8A01000-106	Strut Panel Assy. Aft. Right.	EA
8A01000-107	Strut Panel Assy. Aft. Left.	EA
8A01000-108	Brace Panel, Stn #17 Upr Assy.	EA
8A01000-109	Brace Panel, Stn #17 Lwr Assy.	EA
8A01000-110	Tunnel Assy.	EA
8A01000-111	Wheel Well Half Left Assy.	EA
8A01000-112	Wheel Well Half Right Assy.	EA
8A01000-113	Cover Reinforcement Assy. Inspection	EA
8A01000-114	Cover Float Deck Assy.	EA
8A01000-122	Cover Float Deck Assy.	EA
8A01000-126	Cover Baggage Assy.	EA
8A01000-127	Angle, Side-Wheel Well Attach	EA
8A01000-128	Angle, Side-Wheel Well Attach	EA
8A01000-129	Skin Top Left Assy.	EA
8A01000-130	Skin Top Right Assy.	EA
8A01000-179	Bulkhead Stn. #20 Left Assy.	EA
8A01000-180	Bulkhead Stn. #8 Right Assy.	EA
8A01000-181	Bulkhead Stn. #22 Left Assy.	EA
8A01000-212	Bulkhead Stn. #19 Right Assy.	EA
8A01000-213	Bulkhead Stn. #18 Left Assy.	EA
8A01000-214	Bulkhead Stn. #21 Right Assy.	EA
8A01000-228	Bulkhead Stn. #17 Right Assy.	EA
8A01001-006	Strap, Carry Thru	EA
8A01001-008	Doubler, Top Skin Inboard Rt.	EA
8A01001-009	Doubler, Top Skin Inboard Lt.	EA

Part Number	Part Description	Unit of Measure
8A01001-010	Doubler, Top Skin Outboard Rt.	EA
8A01001-011	Doubler, Top Skin Outboard Lt.	EA
8A01002-041	Bulkhead Stn. #17 Lower Panel	EA
8A01002-042	Bulkhead Stn. #18 Rt. Body	EA
8A01002-043	Bulkhead Stn. #19 Body	EA
8A01002-044	Bulkhead Stn. #20 Rt. Body	EA
8A01002-045	Bulkhead Stn. #21 Lt. body	EA
8A01002-046	Bulkhead Stn. #22 Rt. Body	EA
8A01002-048	Splice, Skin Bottom	EA
8A01002-049	Gusset, Bulkhead Stn. #23 Lt.	EA
8A01002-095	Doubler, Skin Bottom Lt.	EA
8A01002-096	Doubler, Skin Bottom Rt.	EA
8A01002-100	Doubler, Step Side	EA
8A01002-103	Bulkhead Stn. #20 Lt. Body	EA
8A01002-104	Bulkhead Stn. #19 Body RT.	EA
8A01002-105	Bulkhead Stn. #22 Lt. Body	EA
8A01002-106	Bulkhead Stn. #21 Rt. Body	EA
8A01002-107	Bulkhead Stn. #18 Lt. Body	EA
8A01003-031	Bracket, Bulkhead Stn. #22 Lt.	EA
8A01003-078	Bracket, Hyd. Manifold	EA
8A01004-023	Stiffener, Baggage Cover Vert.	EA
8A01004-024	Stiffener, Baggage Cover Horz.	EA
8A01004-069	Stiffener, Baggage Center & Rear	EA
8A01005-092	Bulkhead Stn. #2 Rt. Side	EA
8A01005-093	Bulkhead Stn. #2 Lt. Side	EA
8A01005-094	Bulkhead Stn. #3 Top	EA
8A01005-095	Bulkhead Stn. #4 Lt. Side	EA
8A01005-096	Bulkhead Stn. #4 Rt. Side	EA
8A01005-097	Bulkhead Stn. #5 Top	EA
8A01005-098	Bulkhead Stn. #6 Rt. Side	EA
8A01005-099	Bulkhead Stn. #6 Lt. Side	EA
8A01005-100	Bulkhead Stn. #7 Rt. Side	EA
8A01005-101	Bulkhead Stn. #7 Lt. Side	EA
8A01005-103	Bulkhead Stn. #9 Lt. Side	EA
8A01005-104	Bulkhead Stn. #9 Rt. Side	EA
8A01005-105	Bulkhead Stn. #10 Lt. Side	EA
8A01005-106	Bulkhead Stn. #10 Rt. Side	EA
8A01005-107	Bulkhead Stn. #11 Top	EA
8A01005-108	Bulkhead Stn. #12 Rt. Side	EA
8A01005-109	Bulkhead Stn. #12 Lt. Side	EA
8A01005-110	Bulkhead Stn. #15 Rt. Side	EA
8A01005-111	Bulkhead Stn. #15 Lt. Side	EA
8A01005-112	Bulkhead Stn. #16 Top	EA
8A01005-114	Tunnel, Top	EA
8A01005-115	Wheel Well Half, Lt.	EA
8A01005-116	Wheel Well Half, Rt.	EA
8A01005-176	Wheel Well Side, Rt.	EA
8A01008-025	Bulkhead Stn. #17 Lt. Top	EA
8A01008-028	Angle, Carry Thru Strap Rt.	EA
8A01008-029	Angle, Carry Thru Strap Lt.	EA
8A01008-030	Angle, Carry Thru Strap Rt.	EA
8A01008-031	Angle, Carry Thru Strap Lt.	EA
8A01008-032	Doubler, Wheel Weel Aft. Skin	EA

Part Number	Part Description	Unit of Measure
8A01008-033	Doubler, Side Skin Outboard Lt.	EA
8A01008-034	Doubler, Side Skin Outboard Rt.	EA
8A01008-035	Doubler, Side Skin Inboard Lt.	EA
8A01008-036	Doubler, Side Skin Inboard Rt.	EA
8A01008-060	Cover, Bulkhead Stn. #14	EA
8A01008-080	Cover, Bulkhead Cylinder Hole	EA
8A01008-096	Angle, Stn. #16 Inside	EA
8A01008-097	Angle, Stn. #16 Inside	EA
8A01008-120	Spacer-Tunnel End Cap	EA
8A01008-136	Floor, Baggage Comp. Aft. Rt.	EA
8A01008-137	Floor, Baggage Comp. Fwd. Lt.	EA
8A01012-001	Panel-Blkhd, Stn #8, LT	EA
8A01012-002	Panel-Blkhd, Stn #8, RT	EA
8A01012-003	Panel-Spreader Bar, Frt, LT	EA
8A01012-005	Panel-Spreader Bar, Rear, LT	EA
8A01012-006	Panel-Spreader Bar, Rear, RT	EA
8A01012-007	Panel, Strut, Center Rear Right.	EA
8A01012-008	Panel, Strut, Center Front Right.	EA
8A01012-009	Panel, Strut, Rear Right.	EA
8A01012-010	Panel, Strut, Rear Front Right.	EA
8A01012-011	Angle, Strut Panel, Center Left.	EA
8A01012-012	Angle, Strut Panel, Center Right.	EA
8A01012-013	Angle, Strut Panel, Rear Left.	EA
8A01012-014	Angle, Strut Panel, Rear Right.	EA
8A01012-015	Bulkhead Stn. #17 Upper Panel	EA
8A01012-016	Bulkhead Stn. #17 Lower Panel	EA
8A01151-055	Stiffener, Side Skin #1	EA
8A01151-056	Stiffener, Side Skin #2	EA
8A01151-057	Stiffener, Side Skin #3	EA
8A01151-058	Stiffener, Side Skin #4	EA
8A01151-059	Skin, Btm. Fwd. Lt.	EA
8A01151-060	Skin, Btm. Fwd. Rt.	EA
8A01156-025	Bulkhead Stn. #1	EA
8A01156-027	Gusset, Stn. #1 Side	EA
8A01156-028	Gusset, Stn. #1 Top	EA
8A01156-031	Reinforcement, Rear Cleat	EA
8A01156-033	Spacer, Cleat Reinforcement Aft.	EA
8A01156-034	Spacer, Carry Thru Strap #14 Bulk	EA
8A01156-035	Spacer, Skin Stn. #23 Top	EA
8A01156-036	Spacer, Skin. #23 Aft.	EA
8A01156-073	Spacer, Skin Stn. #23 Side	EA
8A01156-074	Doubler, Cable Guide Stn. #20	EA
8A01156-100	Shim-Angle Reinf. Top Skin Ct	EA
8A01156-103	Spacer, Top Deck	EA
8A01156-104	Spacer, Top Deck	EA
8A01158-021	Skin, Side Inboard Lt.	EA
8A01158-022	Skin, Side Inboard Rt.	EA
8A01158-023	Skin, Side Outboard Lt.	EA
8A01158-024	Skin, Side Outboard Rt.	EA
8A01158-025	Skin, Top Lt.	EA
8A01158-026	Skin, Top Rt.	EA
8A01158-045	Cover, Wheel Well, Rear Spreader Bar	EA
8A01158-126	Bulkhead Stn. #15 Straight	EA

Part Number	Part Description	Unit of Measure
8A01158-128	Support Panel, Bulkhead 11 thru 16	EA
8A01158-130	Bulkhead Stn. #9-1 Fwd	EA
8A01158-131	Bulkhead Stn. #9 Rt.	EA
8A01158-138	Skin, Bottom, Aft, Right	EA
8A01158-139	Skin, Bottom, Aft, Left	EA
8A01162-003	Cover, Baggage	EA
8A01162-006	Lip, Baggage	EA
8A01163-005	Cover, Inspection	EA
8A01163-006	Cover, Inspection	EA
8A01163-025	Shim-Gusset, St.#23	EA
8A01200-003	Strip-Wear	EA
8A01211-002	Drain Plug, 8000 Float	EA
8A01211-003	Drain Plug, 8000 Float	EA
8A01214-002	Angle, Doubler #16	EA
8A01268-005	Drain plug, 8000 Float	EA
8A01268-006	Drain Plug, 8000 Float	EA
8A01268-007	Drain Plug, 8000 Float	EA
8A01339-037	Angle, Top Skin Reinforcement	EA
8A01339-038	Angle, Top Skin Reinforcement	EA
8A01340-019	Angle, Tunnel Top Lt.	EA
8A01340-020	Angle, Tunnel Top Rt.	EA
8A01340-021	Angle, Inspection Cover	EA
8A01340-026	Angle, Wheel Well Rt.	EA
8A01340-027	Angle, Wheel Well Lt.	EA
8A01342-005	Sister Keel, Outer Lt.	EA
8A01342-006	Sister Keel, Outer Rt.	EA
8A01347-005	Keel, Aft.	EA
8A01347-010	Keel Aft. Repair	EA
8A01348-004	Angle, Tunnel Attach Stn. #1	EA
8A01348-005	Angle, Baggage Compt. Inboard Lt.	EA
8A01348-006	Angle, Baggage Compt. Inboard Rt.	EA
8A01348-023	Angle, Baggage Compartment Left	EA
8A01348-024	Angle, Baggage Compartment Right	EA
8A01351-005	Chine, Fwd. Lt.	EA
8A01351-006	Chine, Fwd. Rt.	EA
8A01352-012	Angle, Baggage Floor Attach	EA
8A01352-013	Angle, Baggage Floor Attach	EA
8A01352-014	Angle, Top Skin Baggage Compartment	EA
8A01352-019	Angle, Cover Reinforcement	EA
8A01353-002	Stiffener, Side Skin Rt.	EA
8A01353-003	Stiffener, Side Skin Lt.	EA
8A01354-005	Keel, Main	EA
8A01354-007	72" Cap Main Keel Repair	EA
8A01354-008	21" Splice Main Keel Repair	EA
8A01354-009	32" Splice Main Keel Repair	EA
8A01354-010	43" Splice Main Keel Repair	EA
8A01354-011	57" Splice Main Keel Repair	EA
8A01357-009	Angle, Side Stn. #8 Lt.	EA
8A01357-010	Angle, Side Stn. #8 Rt.	EA
8A01357-011	Angle, Spreader Bar Panel Fwd. Lt.	EA
8A01357-012	Angle, Spreader Bar Panel Fwd. Rt.	EA
8A01357-013	Angle, Horiz. Stn. #16	EA
8A01357-014	Angle, Vert. Stn. #16 Rt.	EA

Part Number	Part Description	Unit of Measure
8A01357-015	Angle, Vert. Stn. #16 Lt.	EA
8A01357-016	Angle, Spreader Bar Panel Aft. Rt.	EA
8A01357-017	Angle, Spreader Bar Panel Aft. Lt.	EA
8A01357-018	Angle, Spreader Bar Panel Aft. Rt.	EA
8A01357-019	Angle, Spreader Bar Panel Aft. Lt.	EA
8A01359-056	Angle, Nose Box Attach Vert. Rt.	EA
8A01359-057	Angle, Nose Box Attach Vert. Lt.	EA
8A01359-058	Angle, Keel Attach Stn. #8 Rt.	EA
8A01359-059	Angle, Keel Attach Stn. #8 Lt.	EA
8A01359-060	Angle, Sister Keel Attach Stn. #8 Rt.	EA
8A01359-061	Angle, Sister Keel Attach Stn. #8 Lt.	EA
8A01359-062	Angle, Sister Keel Attach Stn. #11&14 Rt.	EA
8A01359-063	Angle, Sister Keel Attach Stn. #11&14 Lt.	EA
8A01359-065	Angle, Sister Keel Attach Stn. #12&13 Lt.	EA
8A01359-066	Angle, Horiz. Stn. #15	EA
8A01359-067	Angle, Horiz. Stn. #16 Upper	EA
8A01359-068	Angle, Horiz. Stn. #16 Lower	EA
8A01359-069	Angle, Carry Thru Strap Attach	EA
8A01359-070	Angle, Carry Thru Strap Attach	EA
8A01359-071	Angle, Horiz. Stn. #17	EA
8A01359-072	Angle, Wheel Well Attach Rt.	EA
8A01359-073	Angle, Wheel Well Attach Lt.	EA
8A01359-074	Angle, Horiz. Stn. #23	EA
8A01359-075	Angle, Panel Brace Stn. #17 Upper	EA
8A01359-076	Angle, Panel Brace Stn. #17 Lower	EA
8A01359-077	Angle, Carry Thru Strap Inbrd. Lt.	EA
8A01359-078	Angle, Carry Thru Strap Inbrd. Rt.	EA
8A01359-079	Angle, Carry Thru Strap Outboard Lt.	EA
8A01359-080	Angle, Carry Thru Strap Outboard Rt.	EA
8A01359-081	Angle, Carry Thru Strap Stn. #16	EA
8A01359-082	Angle, Carry Thru Strap Stn. #16	EA
8A01359-090	Angle, Access Stn. #14 Upper	EA
8A01359-091	Angle, Access Stn. #14 Lower	EA
8A01359-114	Angle, Nose Bumper Rt.	EA
8A01359-115	Angle, Nose Bumper Lt.	EA
8A01359-249	Angle - Center Cover Reinforcement	EA
8A01361-013	Angle, Reinforcement Top Skin	EA
8A01361-014	Sister Keel, Inner Rt.	EA
8A01361-015	Sister Keel, Inner Lt.	EA
8A01361-016	Sister Keel, Outer Aft. Rt.	EA
8A01361-017	Sister Keel, Outer Aft. Lt.	EA
8A01361-018	Sister Keel, Inner Aft. Rt.	EA
8A01361-019	Sister Keel, Inner Aft. Lt.	EA
8A01361-022	Angle, Aft. to #23 Bulkhead Rt.	EA
8A01361-023	Angle, Sister Keel Attach Aft. Lt.	EA
8A01361-024	Angle, Sister Keel Attach Aft. Rt.	EA
8A01363-006	Chine, Aft. Rt.	EA
8A01366-005	Gunwall, Lt.	EA
8A01366-006	Gunwall, Rt.	EA
8A01426-003	Angle, Slide Tube Left	EA
8A01426-004	Angle, Slide Tube Right	EA
8A01567-006	Cover Seal, 11" X 13.38"	EA
8A01567-007	Cover Seal, 12.43" X 14.81"	EA

Part Number	Part Description	Unit of Measure
8A01652-005	Spacer - Transducer	EA
8A01730-001	Bumper-Nose	EA
8A01740-002	Hinge, Baggage Cover 3/4in	EA
8A01741-002	Hinge, Baggage Cover 1.5in	EA
8A02000-036	Strut Assy. Fwd. Right.	EA
8A02000-037	Strut Assy. Fwd. Left.	EA
8A02000-038	Strut Assy. Mid. Right.	EA
8A02000-039	Strut Assy. Mid. Left.	EA
8A02000-040	Strut Assy. Aft. Right.	EA
8A02000-041	Strut Assy. Aft. Left.	EA
8A02000-051	Strip Fairing Assy. Aft. Lt.	EA
8A02000-052	Strip Fairing Assy. Aft. Rt.	EA
8A02000-053	Fairing Assy. Lt.	EA
8A02000-054	Fairing Assy. Rt.	EA
8A02000-060	Cover Assy. Main Gear	EA
8A02000-061	Strut Step Assy-Cargo, Fwd,DHC3/208	EA
8A02000-062	Strut Step Assy-Cargo, Aft, DHC/208	EA
8A02000-085	Strut Step Assy-CoPilot, DHC3/208	EA
8A02000-086	Strut Step Assy-Pilot, DHC3/208	EA
8A02005-184	Strip Fairing, Short Lt, Fwd.	EA
8A02005-185	Strip Fairing, Long Rt, Aft	EA
8A02005-187	Cover, Main Gear	EA
8A02005-188	Cover, Main Gear	EA
8A02005-189	Cover, Main Gear	EA
8A02046-002	Fitting, Brace Wire Aft. Rt.	EA
8A02046-003	Fitting, Brace Wire Aft. Lt.	EA
8A02053-005	Fitting, Slide, Strut	EA
8A02053-005	Fitting, Slide, Strut	EA
8A02053-006	Fitting, Step Strut-Pilot/Copilot	EA
8A02053-007	Fitting, Cargo Step Stut Top	EA
8A02057-002	Beam, Fuselage Latteral Support	EA
8A02067-001	Fitting, Brace Wire/Strut Fwd. Lt.	EA
8A02067-002	Fitting, Brace Wire/Strut Fwd. Rt.	EA
8A02088-001	Axle, Fuselage Strut Attach	EA
8A02095-001	Bushing, Strut Panels	EA
8A02100-001	Fitting, Brace Wire Fwd. Old Style	EA
8A02100-003	Fitting, Brace Wire Fwd.	EA
8A02195-002	Fitting, Strut Center Lower Rt.	EA
8A02195-003	Fitting, Strut Center Lower Lt.	EA
8A02195-004	Fitting, Strut Rear Lower Rt.	EA
8A02195-005	Fitting, Strut Rear Lower Lt.	EA
8A02195-006	Fitting, Strut to Fuselage Fwd.	EA
8A02198-007	Fitting, Strut Front	EA
8A02198-008	Fitting, Strut Center Top	EA
8A02198-009	Fitting, Strut Center Lower	EA
8A02198-010	Fitting, Strut Rear Upper	EA
8A02198-011	Fitting, Strut Rear Lower	EA
8A02198-012	Fitting, Strut Fwd. Upper (universal)	EA
8A02198-013	Fitting, Strut Fwd. Lower (Universal)	EA
8A02198-014	Fitting, Strut Mid. Lower Link	EA
8A02198-015	Fitting, Strut Rear Lower Link	EA
8A02205-001	Spacer, Beam Axle	EA
8A02205-002	Spacer, Beam Axle	EA

Part Number	Part Description	Unit of Measure
8A02273-007	Rod, Slide, Float	EA
8A02273-007	Rod, Slide, Float	EA
8A02369-002	Step, Fwd. Top Rt.	EA
8A02369-003	Step, Fwd. Top Lt.	EA
8A02369-004	Step, Fwd. Bottom	EA
8A02369-005	Step, Cargo	EA
8A02409-001	Tube-Front Strut Support	EA
8A02458-003	Barrel Nut(2452-080)	EA
8A02458-004	Barrel Nut(2452-126)	EA
8A02560-002	Fairing, Rt.	EA
8A03000-008	Spreader Bar Assy. Fwd.	EA
8A03005-393	Fairing, Spreader Bar, Fwd	EA
8A03005-394	Fairing, Spreader Bar Rear RT.	EA
8A03005-395	Fairing, Spreader Bar Rear Lt.	EA
8A03005-396	Fairing, Spr. Bar Mid Fwd trailing edge.	EA
8A03005-397	Fairing, center trailing edge (W/ CABLE CUTOUT) rear.	EA
8A03049-001	Support, Spreader Bar Fwd. Lt.	EA
8A03049-002	Support, Spreader Bar Aft. Rt.	EA
8A03049-003	Support, Spreader Bar Aft. Lt.	EA
8A03049-004	Support, Spreader Bar Fwd. Rt.	EA
8A03158-246	Fairing, Spreader Bar Fwd. Rt. (208)	EA
8A03158-247	Fairing, Spreader Bar Fwd. Lt. (208)	EA
8A03410-001	Spreader Bar, Fwd.	EA
8A03410-002	Spreader Bar, Rear	EA
8A04000-021	Axle Assy.	EA
8A04000-039	Brake Line Assy. #3 Alum.	EA
8A04101-001	Fitting, Main Gear Axle	EA
8A04103-001	Drag Brace, Main Gear	EA
8A04154-004	Plug, Drag Brace Support Tube	EA
8A04211-001	Trunion, Main Gear Attach	EA
8A04256-005	Piston Old Style	EA
8A04261-004	Metering Pin Shock-Strut	EA
8A04270-003	Metering Tube Shock-Strut	EA
8A04296-002	Tube, Drag brace	EA
8A04407-003	Outer Cylinder Shock-Strut	EA
8A04538-002	Inner Cylinder Shock-Strut 8000	EA
8A05000-010	Assy, Ram, Main Gear 8000 Old Style	EA
8A05116-003	Cylinder, Main Gear Old Style	EA
8A05195-001	Cap, Slide Tube Aft.	EA
8A05402-004	Slide Tube	EA
8A06000-029	Plate Assembly, Tow Lug	EA
8A06210-002	Plate, Nose Spring Attach Lower	EA
8A06308-001	Block, Pivot	EA
8A06600-001	Washer	EA
8A07156-037	Cover, Nose Box Top	EA
8A07156-038	Cover, Nose Box Bottom	EA
8A07185-002	Link Trolley Nose Gear	EA
8A07188-001	Trolley Nose Gear	EA
8A07201-002	End Cap Nose Box	EA
8A07201-002	End Cap Nose Box	EA
8A07212-001	Plate, Nose Spring Attach Upper	EA
8A07257-002	Rod End, Nose Gear Ram	EA
8A07337-003	End, Nose Gear Track Left.	EA

Part Number	Part Description	Unit of Measure
8A07337-003	End, Nose Gear Track Left.	EA
8A07337-003	End, Nose Gear Track Left.	EA
8A07337-004	End, Nose Gear Track Right.	EA
8A07357-038	Angle, Nose Box Bottom	EA
8A07364-003	Track, Side Nose Box Lt.	EA
8A07364-004	Track, Side Nose Box Rt.	EA
8A07427-004	Angle, Nose Box Top	EA
8A07505-001	Axle Trolley Link	EA
8A07534-003	Axle Trolley	EA
8A08000-023	Water Rudder Blade Assy. W/O Arms	EA
8A08000-030	Fuselage beam Pulley Bracket	EA
8A08000-031	Cable Assy. Retract Fuselage	EA
8A08000-033	Cable Assy. Steering Lt.	EA
8A08000-034	Cable Assy. Steering Fuselage	EA
8A08000-035	Cable Assy. Balance Lt.	EA
8A08000-036	Cable Assy. Balance Rt.	EA
8A08000-037	Cable Assy. Retract Lt.	EA
8A08000-038	Cable Assy. Retract Rt.	EA
8A08000-039	Cable Assy. Retract, Float	EA
8A08000-040	Pulley Bracket Assy. Spreader Bar Rear	EA
8A08000-041	Pulley Bracket Assy. Spreader Bar Rear	EA
8A08000-042	Pulley Bracket Assy. Spreader Bar Rear	EA
8A08000-043	Cable Assy. Pulley Stn. #23	EA
8A08000-044	Cable Assy. Elevator Stop	EA
8A08000-057	Pulley Bracket & Support-Water Rudder Assy.	EA
8A08000-058	Pulley Bracket & Support Assy.	EA
8A08000-059	Pulley Bracket & Support Assy.	EA
8A08000-061	Water Rudder Handle Assy.	EA
8A08000-078	Water Rudder Steering Cable Cvr. Assy.	EA
8A08000-079	Water Rudder w/ Doublers and Arms	EA
8A08000-098	Water Rudder Post Assy.	EA
8A08000-121	Water Rudder Retract Assy.	EA
8A08000-148	Water Rudder Pulley Bracket Assy.	EA
8A08001-013	Water Rudder Blade	EA
8A08001-029	Doubler, Water Rudder Lt.	EA
8A08001-030	Doubler, Water Rudder Rt.	EA
8A08002-053	Pulley Bracket, Side Fuselage Beam Lt.	EA
8A08002-054	Pulley Bracket, Side Fuselage Beam Rt.	EA
8A08002-065	Pulley Bracket Retract, Water Rudder	EA
8A08002-066	Pulley Bracket, Water Rudder Retract	EA
8A08002-068	Pulley Bracket, Water Rudder	EA
8A08002-069	Pulley Bracket, Water Rudder	EA
8A08002-070	Pulley Bracket, Support	EA
8A08002-071	Pulley Bracket, Water Rudder	EA
8A08002-072	Pulley Bracket, Water Rudder	EA
8A08002-073	Pulley Bracket, Water Rudder	EA
8A08002-074	Pulley Bracket-Water Rudder	EA
8A08002-077	Bracket-Fairlead, Water Rudder	EA
8A08002-078	Pulley Bracket, Water Rudder	EA
8A08002-079	Pulley Bracket, Water Rudder	EA
8A08002-080	Pulley Bracket, Support	EA
8A08002-081	Pulley Bracket	EA
8A08002-082	Pulley Bracket	EA

Part Number	Part Description	Unit of Measure
8A08002-083	Bracket Brace, Retract	EA
8A08002-084	Bracket Brace, Retract	EA
8A08002-094	Base-Fus. Beam Pulley Brkt.	EA
8A08002-097	Doubler, Water Rudder Steering Cable Cover	EA
8A08008-083	Angle, Retract Rudder	EA
8A08008-084	Bracket Support, Retract Rt.	EA
8A08008-085	Bracket Support, Retract Lt.	EA
8A08033-003	Spacer, Retract Handle	EA
8A08044-001	Arm, Water Rudder Lt.	EA
8A08044-002	Arm, Water Rudder Rt.	EA
8A08068-001	Lever, Water Rudder	EA
8A08076-001	Spacer, Retract Handle	EA
8A08077-001	Spacer, Retract Handle	EA
8A08180-001	Lever, Water Rudder Retract	EA
8A08183-006	Stop, Water Rudder	EA
8A08194-001	Bracket-Pulley, Stn. #23 Lt.	EA
8A08194-002	Bracket-Pulley, Stn. #23 Rt.	EA
8A08260-001	Spacer, Pulley Bracket	EA
8A08267-005	Spacer, Retract Handle	EA
8A08267-006	Spacer, Retract Handle	EA
8A08267-007	Spacer, Retract Handle	EA
8A08270-005	Handle, Water Rudder Retract	EA
8A08492-001	Drawbar-Wtr Rdr Steering Spring	EA
8A08517-001	Bushing(S2614-3-23)	EA
8A08537-001	Link, Rudder Horn Lt. Old Style	EA
8A08537-003	Link, Rudder Horn Lt.	EA
8A08540-001	Link, Rudder Horn Rt. Old Style	EA
8A08540-004	Link, Water Rudder Rt.	EA
8A08602-004	Stop, Water Rudder Up	EA
8A08608-001	Guide-Cable, Anti-Vibration	EA
8A08629-001	Strip, Rub	EA
8A08648-001	Cover, Water Rudder Steering Cable	EA
8A08662-001	Cable Guide	EA
8A08702-036	Pulley - Spreader Bar	EA
8A09000-102	Gear Selector Assy. 24Volt	EA
8A09000-153	Angle Assy. Pump Brkt., Top	EA
8A09000-154	Angle Assy. Pump Brkt., Btm	EA
8A09000-241	Plate, Hyd. Pump Mount Assy.	EA
8A09003-053	Ass'y, Bracket, Hand Pump, Lt.	EA
8A09003-054	Ass'y, Bracket, Hand Pump, RH	EA
8A09005-210	Cover, Hand Pump	EA
8A09008-077	Channel-Pump Plate	EA
8A09008-077	Channel-Pump Plate	EA
8A09008-104	Plate-Pump Mounting	EA
8A09158-097	Cover, Hyd. Lines	EA
8A09162-030	Pump Filter Plate (Caravan) Out dated	EA
8A09357-053	Angle, Horiz. Plate-Pump Bottom	EA
8A09707-001	Reducer, Brake Line-Modified	EA
8A10000-006	Wire Harness Assy.	EA
8A10000-014	Diode Assembly (8000)	EA
8A11000-021	Wire Harness 208 12'	EA
8A11000-022	Wire Harness 208 29'	EA
8A11000-100	Wire Harness, Gear Advisory 208	EA

Part Number	Part Description	Unit of Measure
8A11199-006	Housing, Gear Selector	EA
8A11280-005	Socket Adapter	EA
8A12000-002	Assembly, Bracket Aux Fin	EA
8A12000-004	Aux Finlet Assembly, Upper	EA
8A12000-004	Aux Finlet Assembly, Upper	EA
8A12000-005	Aux Finlet Assembly, Lower	EA
8A12000-025	Fitting Assy. Aux Fin	EA
8A12000-026	Fitting Assy. Aux Fin	EA
8A12000-028	Fitting Assy. Aux Fin	EA
8A12000-029	Fitting Assy. Aux Fin	EA
8A12000-044	Bracket, Solenoid Assy. (Caravan)	EA
8A12000-055	Sub Assy. Finlet Front Spar	EA
8A12000-056	Rear Spar	EA
8A12000-057	8000 Finlet Frame Sub Assly	EA
8A12002-085	Spar-Ft Aux. Fin	EA
8A12002-086	Spar-RR-LWR Aux. Fin	EA
8A12002-087	Spar-RR-UPR Aux. Fin	EA
8A12003-055	Washer, 1.25 OD, .475 ID, .063 Thk	EA
8A12003-072	Hat Section-Firewall Reinf. Rt. Out dated	EA
8A12003-073	Hat Section-Firewall Reinf. Lt. Out Dated	EA
8A12004-028	Bracket-Aux. Finlet, C208	EA
8A12004-029	Rib, Aux Fin	EA
8A12004-030	Rib, Aux Fin	EA
8A12004-031	Rib, Aux Fin	EA
8A12004-032	Rib, Aux Fin	EA
8A12004-033	Rib, Aux Fin	EA
8A12004-034	Rib, Aux Fin	EA
8A12004-035	Rib, Aux Fin	EA
8A12004-036	Rib, Aux Fin	EA
8A12004-037	Rib, Aux Fin	EA
8A12004-038	Rib, Aux Fin	EA
8A12004-039	Rib, Aux Fin	EA
8A12004-040	Rib, Aux Fin	EA
8A12004-041	Bracket, Aux Fin	EA
8A12005-186	Cover, Cowling Lower,4 Hole W/O A/C	EA
8A12005-191	Spar-Center Aux. Fin	EA
8A12005-192	Gusset, Aux Fin	EA
8A12008-127	Doubler, Fuselage Step Strut	EA
8A12010-003	Doubler, Stabilizer	EA
8A12010-004	Cover, Stabilizer Skin	EA
8A12010-005	Cover, Stabilizer Skin	EA
8A12011-009	Fitting, Aux Fin Fwd. Upper	EA
8A12016-002	Skin, Stabilizer Closure	EA
8A12016-005	Skin, Trailing Edge Aft. Upper	EA
8A12016-006	Skin, Fwd. Edge Upper	EA
8A12016-008	Skin, Aux Fin Fwd. Lwr.	EA
8A12016-010	Skin, Trailing Edge Lower	EA
8A12032-003	Channel, Fin	EA
8A12069-001	Fitting, Aux Fin	EA
8A12070-003	Fitting, Aux Fin	EA
8A12072-001	Bracket, Bungee Attach	EA
8A12073-001	Fitting, Fin Upper	EA
8A12110-001	Fitting-Support, Firewall Old style	EA

Part Number	Part Description	Unit of Measure
8A12110-002	Fitting-Support, Firewall Old Style	EA
8A12152-006	Cover, Nose Gear,5 Hole With A/C	EA
8A12158-120	Bracket-Contactor	EA
8A12205-006	Support Rod Pivot, Fuel Rod 208	EA
8A12273-009	Mounting Bracket, Fuel Step 208	EA
8A12273-010	Support Rod, Fuel Step 208	EA
8A12340-099	Angle, Access Cover-Hand Pump	EA
8A12369-030	Step, Fuel Step 208	EA
8A12391-001	Aux. Fin, Attachment Rear	EA
8A12456-007	Bushing - Rudder Horn (S2614-3-22)	EA
8A12487-006	Link, Elevator Down	EA
8A12506-006	Mounting Pin, Fuel Step 208	EA
8A12518-004	Bushing (NAS43HT8-72)	EA
8A16000-031	Extended Baggage Assembly cover - 208	EA
8A16002-230	Extended Baggage Cover - 208	EA
8A16002-236	Access Cover - Baggage Cover - 208	EA
8A16002-237	Angle-Baggage Cover-208	EA
8A16002-238	Angle-Baggage Cover-208	EA
8A16002-239	Angle-Baggage Cover-208	EA
8A16005-386	Bushing Retainer	EA
8A16005-387	Bushing Retainer	EA
8A16008-115	Bracket	EA
8S01000-393	Skin Assy. Top Lt.	EA
8S01000-394	Skin Assy. Top Rt.	EA
8S01001-022	Doubler, Top Skin Outboard Rt.	EA
8S01001-023	Doubler, Top Skin Outboard Lt.	EA
8S01001-024	Doubler, Top Skin Inboard Rt.	EA
8S01001-025	Doubler, Top Skin Inboard Lt.	EA
8S01002-059	Bulkhead Stn. #17	EA
8S01002-101	Cover, Nose Bulkhead	EA
8S01008-078	Angle, Skin Attach Lower Rt.	EA
8S01008-079	Angle, Skin Attach Lower Lt.	EA
8S01156-056	Spacer, Carry Thru Strap	EA
8S01156-057	Spacer, Carry Thru Strap	EA
8S01158-059	Skin, Top Lt.	EA
8S01158-060	Skin, Top Rt.	EA
8S01158-062	Skin, Side Outboard Rt.	EA
8S01158-121	Doubler, Sister Keel Out dated	EA
8S01158-136	Skin, Aft. Rt.	EA
8S01158-137	Skin, Aft. Lt.	EA
8S01354-006	Keel, Main	EA
8S01361-026	Sister Keel, Aft. Rt.	EA
8S01361-027	Sister Keel, Aft. Lt.	EA
8S01732-001	Bumper-Nose	EA
8S03000-036	Spreader Bar Assembly, Front	EA
8S03049-007	Support, Spreader Bar Rear	EA
8S03049-008	Support, Spreader Bar, Front	EA
8S03049-009	Support, Spreader Bar, Aft	EA
8X1/2	Cover Screws 1/2", Flathead	EA
9014	Fin, Ventral (Maule M7)	EA
9020	Kit, Ventral Fin Install (Maule M7)	EA
90F1117	Relay, Plug-in, 24v, Bracket Mount, Double-Pull Double-Throw, Foam Pump (replaced with 17M0234)	EA

Part Number	Part Description	Unit of Measure
91375A585	Set Screw, 5/16"x18x1.25" (25/pkg)	EA
914-8D-27	Hand Pump	EA
9175F-1L	Fitting, Fwd Left, strut attach Maule M7,(bolt on)	EA
9175F-1R	Fitting, Fwd Right, Strut attach, Maule M7 (Bolt on)	EA
9282K22	1 1/8-1 3/16 Foam Grip / Packs of 2	EA
9283K13	EMERGENCY PUMP HANDLE PLUG	EA
9283K13	EMERGENCY PUMP HANDLE PLUG	EA
93270080-112	Flute Bottom Doubler	EA
93270100-101	Web, Super Panel Add-On	EA
93783A033	Washers, Pressure Sealing, W/ Zinc plating, 1/2" DIA (10/pkg)	EA
93783A035	Washers, Pressure Sealing, W/ Zinc plating, 5/8" DIA	EA
9528K15	Ball, Metal, 1/4"	EA
9600-INSTALL	Kit-Gear Advisory	EA
97-3057-1004-1	Cable Clamp Amphenol	EA
9779-513-6	Bushing (2 used on one Float Installation)	EA
9881020-2	Valve Selector Gear, Control	EA
9A01001-045	Support, Deck Fitting Fwd.LT.	EA
9A01001-046	Support, Deck Fitting Fwd. RT.	EA
9A02000-108	Strut Fitting Assy. Aft.	EA
9A02000-118	Strut Assy. Fwd.	EA
9A02000-119	Strut Assy. Mid.	EA
9A02000-120	Strut Step Assy-Copilot, DHC3	EA
9A02000-121	Strut Step Assy-Pilot, DHC	EA
9A02000-122	Strut Assy. Aft.	EA
9A02000-123	Bulkhead, Support, Lower Fairing	EA
9A02005-251	Cover, Belly Fairing	EA
9A02043-001	Fitting, Drag Wire Support	EA
9A02056-012	Fitting, Drag Wire Aft. Upper	EA
9A02056-013	Fitting, Drag Wire Lower Rear	EA
9A02056-014	Fitting, Strut Front	EA
9A02056-015	Fitting, Strut Rear	EA
9A02057-003	Fitting, Strut Aft. Lt.	EA
9A02057-004	Fitting, Strut Aft. Rt.	EA
9A02059-007	Fitting, Drag Wire RR	EA
9A02059-008	Fitting, Drag Wire Aft. Rt.	EA
9A02059-009	Fitting, Drag Wire Support	EA
9A02066-004	Fitting, Strut Fwd. Left. Link	EA
9A02066-005	Fitting, Drag Wire Fwd.	EA
9A02066-006	Fitting, Drag Wire Fwd. Upper	EA
9A02066-007	Fitting, Strut Fwd. Left.	EA
9A02066-008	Fitting, Strut Fwd. Right.	EA
9A02066-009	Fitting, Strut Fwd. Left.	EA
9A02111-001	Fitting, Strut Float Fwd.	EA
9A02113-001	Fitting, Float Strut Aft.	EA
9A02113-002	Fitting, Float Strut Aft.	EA
9A02155-023	Buckboard Support	EA
9A02163-059	Spacer	EA
9A02163-062	Step, Strut Doubler	EA
9A02218-001	Cover Strut	EA
9A02276-002	Washer, Drag Wire Support	EA
9A02327-003	Strut, Fwd.	EA
9A02369-019	Step, Pilot Upper	EA
9A02369-020	Step, Copilot Upper	EA

Part Number	Part Description	Unit of Measure
9A02369-024	Step, Boarding	EA
9A02369-026	Step, Boarding	EA
9A02369-028	Step, Mid. Rt.	EA
9A02369-029	Step, Aft. Mid. Lt.	EA
9A02454-004	Bushing, Fuselage Strut Aft.	EA
9A02547-002	Bushing, Fuselage Strut Fwd.	EA
9A02604-002	Spacer Step	EA
9A02734-001	Bolt, Drag Wire Aft.	EA
9A03000-019	Spreader Bar Assy. Aft.	EA
9A03158-256	Fairing, Spreader Bar Mid Aft. (Single Otter)	EA
9A03158-257	Fairing, Spreader Bar Mid Fwd. (Single Otter)	EA
9A03158-260	Fairing, Spreader Bar Mid Aft.W/ Cabling Hole	EA
9A03163-060	Spacer Cover; Spreader Bar Aft.	EA
9A03197-010	1Cover, Spreader Bar Aft.	EA
9A08000-106	Water Rudder Pivot Bracket Assy.	EA
9A08000-108	Water Rudder Pivot Shaft Assy.	EA
9A08000-109	Water Rudder Pivot Block Assy.	EA
9A08000-110	Cable Assy. Retract	EA
9A08000-111	Cable Assy. Retract Lt.	EA
9A08000-112	Cable Assy. Retract Rt.	EA
9A08000-113	Cable Assy. Steering Lt.	EA
9A08000-114	Cable Assy. Steering Rt.	EA
9A08000-115	Water Rudder Pulley Bracket Assy.	EA
9A08011-008	Water Rudder Steering, Bracket	EA
9A08151-101	Water Rudder Pulley, Bracket Rt.	EA
9A08155-019	Water Rudder Pulley, Bracket	EA
9A08155-021	Water Rudder Support, Bracket	EA
9A08155-022	Doubler, Belly	EA
9A08156-122	Support Pannel, Water Rudder	EA
9A08163-045	Reinforcement, Rudder Core	EA
9A08236-001	Water Rudder Pivot Support, Bracket	EA
9A08260-004	Bushing, Rudder Horn Steering	EA
9A08274-004	Water Rudder Steering Rod	EA
9A08454-005	Bushing, Water Rudder Pivot	EA
9A08547-001	Shaft, Water Rudder Pivot Not to be sold See 9A08000-108	EA
9A09000-176	Bracket Assy. Hyd. Pump Mount	EA
9A09000-187	Gear Selector Assy.	EA
9A09163-046	Bracket, Hyd. Pump Mount	EA
9A09207-004	Manifold, Hydraulic	EA
9A09382-018	Angle, Hydraulic Mainifold Mount	EA
9A12000-030	Ventral Fin Mount Assy.	EA
9A12000-051	Selector Head Panel Assembly	EA
9A12004-082	Ventral Fin, Rib Handle	EA
9A12004-083	Ventral Fin, Rib #3	EA
9A12004-084	Ventral Fin, Rib #4	EA
9A12005-255	Angle Ventral Fin, Front Lt.	EA
9A12008-141	Ventral Fin Bracket, Attach Lt.	EA
9A12010-009	Ventral Fin, Rib Upper Fwd.	EA
9A12010-010	Ventral Fin, Rib Upper Mid.	EA
9A12010-011	Ventral Fin, Rib Upper Aft.	EA
9A12098-002	Ventral Fin Collar, Attach (lower)	EA
9A12184-002	Ventral Fin, Washer Attach	EA
9A12256-007	Ventral Fin Collar, Attach Upper	EA

Part Number	Part Description	Unit of Measure
9A12420-001	Ventral Fin Frame, Tube	EA
9A12528-003	Tube, Steel	EA
9A12606-004	Plug, Tube End	EA
9A12733-001	Ventral Fin Mount Tube-Stud	EA
9A3-671	Tinnerman - Float Cover	EA
9A3-671	Tinnerman - Float Cover	EA
9B3-138-10	Plate, Serial 2350 Float	EA
9B3-138-11	Plate, Serial 3000 Float	EA
9B3-138-12	Plate, Serial 3450 Float	EA
9B3-138-13	Plate, Serial 10000 Float	EA
9B3-138-3	Plate, Serial 4000 Float	EA
9B3-138-4	Plate, Serial 6000 Float	EA
9B3-138-6	Plate, Serial 13000 Float	EA
9B3-138-8	Plate, Serial 8000 Float	EA
9B3-138-9	Plate, Serial 2100 Floats	EA
9B3-280	Placard - Selector L.H.	EA
A4050	Bearing, Tapered Roller, Cone, non-chrome	EA
AD1A2	Tire 2.8 x 2.5 - 4, Nose Tire, 2100, 2350	EA
AD1B2	Tire, 10.00 x 3.50 x 4, Nose Tire, 3000	EA
AN665-155LS	Clevis Tie Rod Kit (Stainless)	EA
AN665-155R	Tie Rod, Clevis, Thread 1/2-13, RH	EA
AN665-155RS	Clevis Tie Rod Kit (Stainless)	EA
AN665-202LS	Clevis Tie Rod (Stainless)	EA
AN665-202RS	Clevis Tie Rod (Stainless)	EA
AN665-247L	Tie Rod, Clevis, Thread 5/8-11, LH	EA
AN665-247LS	Tie Rod, Clevis, Thread 5/8-11, LH, Stainless Steel	EA
AN665-247R	Tie Rod, Clevis, Thread 5/8-11, RH	EA
AN665-247RS	Clevis Rod end for Tie Rod, Thread 5/8-11, R/H, Stainless Steel	EA
AN665-34L	Tie Rod, Clevis, Thread 1/4-28, LH	EA
AN665-34LS	Tie Rod, Clevis, Thread 1/4-28, LH, Stainless Steel	EA
AN665-34R	Tie Rod, Clevis, Thread 1/4-28, RH	EA
AN665-34RS	Tie Rod, Clevis, Thread 1/4-28, RH, Stainless Steel	EA
AN665-430L	Tie Rod, Clevis, Thread 3/4-10, LH	EA
AN665-430LS	Tie Rod, Clevis, Thread 3/4-10, LH, Stainless Steel	EA
AN665-46L	Tie Rod, Clevis, Thread 5/16-24, LH	EA
AN665-46LS	Clevis Tie Rod Kit (Stainless)	EA
AN665-46R	Tie Rod, Clevis, Thread 5/16-24, RH	EA
AN665-46RS	Clevis Tie Rod Kit (Stainless)	EA
AN665-61L	Tie Rod, Clevis, Thread 5/16-24, LH	EA
AN665-61LS	Clevis Tie Rod Kit (Stainless)	EA
AN665-61R	Tie Rod, Clevis, Thread 5/16-24, RH	EA
AN665-80L	Tie Rod, Clevis, Thread 3/8-24, LH	EA
AN665-80LAS	Tie Rod, Clevis, Thread 5/16-24, LH, Stainless Steel	EA
AN665-80R	Tie Rod, Clevis, Thread 3/8-24, RH	EA
AN665-80RAS	Clevis Tie Rod Kit (Stainless)	EA
AN676AC-5575	Fly Wire, Aft (Maule 3000)	EA
AN820-4D	Cap, Flared Tube, 1/4" Tube DIA, 7/16-20 Thread, Aluminum	EA
AN820-5D	Cap, Flared Tube, 5/16" Tube DIA, 1/2-20 Thread, Aluminum	EA
AN824-5D	Tee, Flared Tube, 5/16" Tube DIA, 1/2-20 Thread, Aluminum	EA
AN8-30A-MOD	Modified Caravan bolt	EA
C2CF889	Block - Aileron Cont Stop	EA
C3CF622-3	Kit, Parts Actuator	EA
F15PX	Pump, Hand, Float, 15"	EA

Part Number	Part Description	Unit of Measure
F15PX	Pump, Hand, Float, 15"	EA
F24PX	Pump, Hand, Float, 24"	EA
H-K73068	Bolt-Skt Hd, .250-28UNF x 1 1/2 long, Stl, Blk Oxide	EA
LM29710	Bearing, Cup, non-chrome, 2-3/8" DIA	EA
LM67010	Bearing, Cup, non-chrome, 2-1/8" DIA	EA
LM67010	Bearing, Cup, non-chrome, 2-1/8" DIA	EA
LM67048	Bearing, Cone, non-chrome, 1-1/4" DIA	EA
MB56H-950-1	Motor Cover	EA
NAS6208-36D-MOD	Modified Caravan anti corrosion bolt	EA
NAS6208-56D-MOD	Modified, Caravan sea provision	EA
PD40-W	Deck Plate Large 4" screw off, Beckson	EA
RM448	Cable, SSSL 302 3/16in (.187) X 7 X 19D	FT
RM688	Cable SSSL 302 1/16" X 7 X 7	FT
RM689	Cable SSSL Type 302 1/8 X 7 X 19	FT
RM690	Cable SSSL Type 302 3/32 X 7 X 19 Comp B M83420	FT
RM750-24	Bilge Pump, 24V, 750, GPH, Fully Automated, RuleMate	EA
SK182-34C	Nose Wheel Fork Replacement Kit	EA
XA1AA	Tube, 2.80 x 4.00, Nose 2100,2350	EA
XA1AB	Tube, 4.10 x 3.5, Nose 3000,3450,3730,4000	EA
XA1AD	Tube, 6.00 x 6, Main 3000, 3450, 6100, 8000, Nose 13000	EA
XA1AM	Tube, 8.50 x 10, Main 9000, 10000, 13000	EA
062-10700	Brake Piston, 1-3/4" DIA, 1/8" Groove, Black	EA
066-10800	Brake Lining, Length 2-1/4", 2 Holes 1/8"	EA
073-04200	Pressure Plate Assembly, w/ 2 brake linings filling 4 holes, Length 5"	EA
074-02900	Back Plate, w/ Break Lining, Length 3", 2 Screw holes 1/4", 3 Filled holes by lining	EA
074-30027	Brake Plate Assembly, w/ brake linings, 2 screw holes 1/4" DIA	EA
075-20700	Torque Plate, 1-5/8" DIA, LENGTH 3-1/2"	EA
1001103	Bushing Assembly, Shock Strut, 3450	EA
1002068	Shock Strut Assembly, 6100	EA
1002121	Brake Assembly , Left 2100A	EA
1002122	Brake Assembly, Right 2100A	EA
1002129	Assembly, Main Drag Link, Lt.	EA
1002130	Assembly, Main Drag Link, RH(Grove)	EA
1002141	Assy, Main Wheel, Grove, 2100	EA
1002144	Assy, Main Wheel, Grove, 2350	EA
1002145	Assy, Rim & Bearings,Grove, 2350	EA
1002146	Assy, Rim & Brake Disc, Grove, 2350	EA
1002239	ASSY, CARRIAGE, MAIN GEAR BUSHINGS	EA
1002261	Assy, Nose Box, 8000	EA
1002262	Assy, Nose Gear, Actuator, 8000	EA
1002578	Kit, Rebuild, Nose Cylinder, (1002572) 3000/3450, Mains (1002574) 2100/2350, & Nose (1002571) 2100/2350	EA
1002636	Assembly, Nosebox, Actuator, 6100	EA
1002639	Assy, Ram, Main Gear, 6100	EA
1002640	Assy, Ram, Main Gear, 8000	EA
1002640	Assy, Ram, Main Gear, 8000	EA
1003547	Seal, Bearing, Wheel, Inner	EA
1003548	Seal, Bearing, Wheel, Outer	EA
1231K2	Oiler, replaces 1205K12, 1/4" DIA	EA
13A04098-005	Piston Shock-Strut	EA

Part Number	Part Description	Unit of Measure
13A04498-002	Inner Cylinder Shock-Strut 13000	EA
13A06000-015	Nose Wheel Assy./w tire	EA
164-03006	Brake Disc, 7-3/4" DIA, 9 Mounting Holes, for 13A000	EA
164-30615-3	Brake Disc, Standard, Forged, 4" DIA, 3 Mounting Holes	EA
21A05000-020	Main Gear Retraction Assembly Rt	EA
21A06000-021	Nose Wheel Assembly (21,23)	EA
23A04000-111	Main Drag Link Assy. Old Style	EA
23A04000-112	Main Drag Link Assy. Olde Style	EA
30A04000-102	Brake Assy. Rt.(3,34)	EA
30A04000-103	Brake Assy. Lt.(3,34)	EA
30A04000-106	Main Gear Assy.(3,34)	EA
30A04000-107	Main Gear Assy.(3,34)	EA
34A05000-029	Main Gear Retract Assy. Lt. (3450)	EA
34A05000-030	Main Gear Retract Assy. Rt.(3450)	EA
34A06000-028	Nose Fork & Spring Assy.	EA
3A04000-002	Main Wheel Assy (2100/3730, Chrome bearings, includes Tire/Tube)	EA
6A01201-001	Fitting, fwd. Slide Tube	EA
6A04000-013	Main Gear Assy. Complete	EA
6A04000-015	Main Gear Axle Assy.	EA
6A06000-005	Nose Wheel Assy.	EA
8A04000-018	Main Gear Assy. Complete	EA
8A04000-018	Main Gear Assy. Complete	EA
8A04000-019	Main Gear Assy. W/O Wheels	EA
8A04000-031	Main Wheel Assy.	EA
8A06000-008	Nose Gear Wheel Assy.	EA
8A06000-012	Nose Fork & Pivot Assy. Complete	EA
8A06626-001	Spring, Nose	EA
8A06626-001	Spring, Nose	EA
AA1D4	Tire, 5.00 x 5 - 6, Type 3, Nose 6000, Main 2100, 2350, 3730, 4000	EA
AA1E6	Tire, 6.00 x 6 - 8, Type 3, Nose 13000, Main 3000, 3450, 6100, 8000	EA
AA1N6	Tire, 8.50 x 10.00 - 8, Main 13000	EA
1001151	Skin, Formed Bottom, Left(6100,8000)	EA
1001153	Skin, Formed Bottom, Left(3000,3450,4000)	EA
1001154	Skin, Formed Bottom, Right(3000,3450,4000)	EA
1001881	Spring, Nose Gear	EA
1002027	T Seal (4115 B001 TR032)	EA
1002028	T Seal (4115 B001 TP034)	EA
1002028	T Seal (4115 B001 TP034)	EA
1002111	Fly Wire Ass'y	EA
1002153	Assy, Drag Wire, Rear, 180/185, 3000 (SK 66)	EA
1002154	Fitting, Upper, Fwd, Lt., 180/185, 3000 (SK 66)	EA
1002155	Fitting, Upper, Fwd, RH, 180/185, 3000 (SK 66)	EA
1002229	T-Seal	EA
1002229	T-Seal	EA
1002563	Extrusion, Keel AFT. 6061T6 180" long (die 14345-1)	EA
1002563	Extrusion, Keel AFT. 6061T6 180" long (die 14345-1)	EA
1002571	Cylinder-Nose Gear, 2100-2350	EA
1002572	Cylinder-Nose Gear, 3000-3450	EA
1002573	Cylinder, Main Gear, 3000-3450	EA
1002574	Cylinder-Main Gear, 2100-2350	EA
1003447	Fly Wire Ass'y, FWD, Kodiak	EA
1003448	Fly Wire Ass'y Rear, Kodiak	EA
1050CW	Aero Ring, Shock Cord, 5/8" Thick, 20" Loop	EA

Part Number	Part Description	Unit of Measure
10A01000-452	Tube with Flange Assembly Rt.	EA
10A01000-454B	Blank-Scoop Tube	EA
10A01000-454B	Blank-Scoop Tube	EA
10A01000-455B	Blank-Scoop Tube	EA
10A12000-059	Tube Filler Vent Aft	EA
10A12424-001	Tube - Float Deck to Tank L.H.	EA
10A12424-001	Tube - Float Deck to Tank L.H.	EA
10A12424-002	Tube - Float Deck to Tank R.H.	EA
10A12424-002	Tube - Float Deck to Tank R.H.	EA
10A12532-008	Flange Filler Vent Aft.	EA
10A12594-001	Tube - Inlet L.H.	EA
10A12594-002	Tube - Inlet R.H.	EA
10A12666-002	Vent Tube Assembly	EA
10A13340-182	Vortex Generator, Air Tractor	EA
11128-1	Bracket, Assembly, Yellow, 1/2 Cylinder Arch, 1 Bracket on arch	EA
11130-1	Bracket, Assembly, Yellow, 1/2 Cylinder Arch, 2 Brackets on arch	EA
1250CW	Aero Ring	EA
13A01733-001	Bumper-Nose, Amphib. Modified	EA
13A01734-001	Bumper-Rear, A&S, Modified	EA
13A02000-079	Fly Wire, Ass'y Fwd	EA
13A06633-001	Spring, Nose Yellow	EA
13MHHM300	Water Tube Clamp, 1000	EA
13S01735-001	Bumper, Nose, Straight Only	EA
20PS001EB700 W500W	Switch, Pressure, Male 3/8-24, 2 Loose Wire Thread Ends	EA
21A01000-295	Bumper Nose Assy	EA
21A01000-295	Bumper Nose Assy	EA
21A01321-001	Keel, Main	EA
21A02000-134	Fly Wire, Assy. (AN705AC-5000)	EA
21A02000-135	Fly Wire, Assy. (AN705AC-5150)	EA
21A02000-136	Fly Wire, Assy. (AN704AC-4925) OBSOLETE 8-7-06	EA
21A02000-137	Fly Wire, Assy. (AN705AC-5225)	EA
21A02000-138	Fly Wire, Assy.-(Maule/PA-12/PA-18)	EA
21A02000-139	Fly Wire, Assy.-(Scout/PA-18)	EA
21A02000-149	Fly Wire, Assy.-(Scout/170)	EA
21A02000-164	Fly Wire, Assy.-(170)	EA
21A04000-076	Drag Link, Main Gear RH (21/23)	EA
21A04000-077	Drag Link, Main Gear Lt. (21/23)	EA
21A04565-001	Bushing, Polyurethane-Black	EA
21A04565-002	Bushing, Polyurethane-Blue	EA
21A05525-008	Spring Gear (21/23/3/34)	EA
21A06653-001	Spring, Nose Gear(2100 only)	EA
21A07323-001	Nose Box Gear Extrusion(21,23)RM323	EA
21A08442-001	Post-Water Rudder, 2100 Old Style	EA
21A08525-005	Spring, rudder horn extension(21,23)	EA
21A08525-006	Spring-Water Rudder Retract, 2100/2350	EA
21A08525-007	Rudder Spring Return(21,23)	EA
21S01321-004	Keel, Main Str.	EA
21S01738-001	Straight Nose Bumpers	EA
23A06654-002	Spring, Nose Gear 2350	EA

Part Number	Part Description	Unit of Measure
30-241	Brake Assy. (Replaces D-30793-5)	EA
30-67C	Brake Assy. 10,000/13,000	EA
30-9C	Brake Assembly, 5" External, Single Cylinder, Single Piston	EA
30A01000-365	Bumper Nose Assy.	EA
30A02000-188	Fly Wire Assy. Aft (Maule 3000)	EA
30A02000-189	Fly Wire Assy. (182 3000)	EA
30A02000-191	Fly Wire, Assy. Fwd (Maule C Model Only 3000)	EA
30A02000-210	Fly Wire Assy. Aft. (Maule if Welded 3000)	EA
30A02000-211	Fly Wire Assy. Fwd. (Maule)	EA
30A02000-216	Fly Wire, Fwd Ass'y (180/185) OBSOLETE	EA
30A02000-235	Fly Wire Assy, Fwd (AN676AC-6225)	EA
30A04000-090	Drag Link, Main Gear(3,34)	EA
30A04000-091	Drag Link, Main Gear(3,34)	EA
30A04565-003	Bushing, Shock Strut Poly-Black	EA
30A04565-004	Bushing, Shock Strut Poly-Blue	EA
30A06655-001	Spring Nose Gear	EA
30A07323-002	Nose Box Gear Extr(3,34)RM323-1	EA
30A08525-009	Spring, Aileron Interconnect (182)	EA
30A08589-001	Spring, Water Rudder, Centering	EA
30S01739-001	Bumper Nose 3000	EA
34A02000-208	Fly Wire, Assy.Rear (185)	EA
34A02000-209	Fly Wire, Assy.Rear (AN677AC-6238)	EA
34A02062-012	Fitting, Fuselage Attach Rt. (206)	EA
34A02062-013	Fitting, Fuselage Attach Lt. (206)	EA
34A02062-014	Fitting, Fuselage Attach Rt. (185)	EA
34A02062-015	Fitting, Fuselage Attach Lt. (185)	EA
34A06656-001	Spring, Nose Gear	EA
3A01436-001B	Casting 356-T6 Spreader Bar / 9C3-112 Rev B / 3730-3900	EA
3A01525-003	Spring, Baggage Cover	EA
3A01727-001	Bumper-Nose, Modified	EA
3A01727-001	Bumper-Nose, Modified	EA
3A02000-044	Fly Wire, Assy.(FWD185)	EA
3A02000-045	Fly Wire, Assy. (AN676AC-5975)	EA
3A02000-046	Fly Wire, Assy. Aft. (AN675AC-5575)	EA
3A02344-001	Fitting, Fuselage Aft. Lt.(185)	EA
3A03345-001	Block, Spacer Spreader Bar	EA
3A05360-001	Frame, Retractor Lt.	EA
3A05360-002	Frame, Retractor Rt.	EA
3A05701-001	Magnet, .250"dia (+/- .010) x 1"L (+/- .015) alnico 5 material	EA
3A06438-001	Fork, Nose Gear	EA
3A07343-001	Nose Box	EA
3A08525-001	Spring	EA
3G3283-1	Sensor, Red Green Black Wires	EA
40-101D	Wheel, Main Assembly, 10,000/13,000	EA
40-101D	Wheel, Main Assembly, 10,000/13,000	EA
40-101D	Wheel, Main Assembly, 10,000/13,000	EA
40-101D	Wheel, Main Assembly, 10,000/13,000	EA
40-418	Main Wheel Assy (standard bearing and disc)	EA
40-418-3	Wheel, Main Assembly/chrome disk (3000/3450/6100/8000)	EA
40-426	Wheel, Nose Assembly, 6.00-6, (10,000/13000)	EA
40-78A	Wheel Assembly, External, 5.00 x 5, w/Chrome Bearing, 3730/4000 Floats	EA
40-87H	Assembly, Rim, Nose Wheel	EA
4102	Magnet, 1/4" DIA Cylinder, 1-3/8" Length	EA

Part Number	Part Description	Unit of Measure
4A01749-001	Pump-Out Cup	EA
4A01749-001	Pump-Out Cup	EA
4A01749-001	Pump-Out Cup	EA
4A02000-058	Fly Wire, Ass'y Aft (206)	EA
4A02000-059	Fly Wire, Ass'y Fwd (206)	EA
4A02000-069	Fly Wire, Ass'y Fwd (185)	EA
4A02000-070	Fly Wire, Ass'y Aft (AN677AC-5775)	EA
4A08525-004	Spring, Water Rudder Retract	EA
4A16002-001	Channel, Upper Aux,RH Door	EA
4A16378-001	Block, Door Splice Lower	EA
4A16379-001	Block, Door Splice Upper	EA
5073914-1431-600	Lamp Light, Red 14v	EA
5073914-1432-600	Lamp Light, Green 14v	EA
5073914-1434-600	Lamp Light, Blue 14v	EA
5073918-1431-600	Indicator Lamp, Light, Red, 28v	EA
5073918-1432-600	Indicator Lamp, Light, Green, 28v	EA
5073918-1433-600	Indicator Lamp, Light, Amber, 28v	EA
5073918-1434-600	Indicator Lamp, Light, Blue, 28v	EA
56205-62A	Grip, Black Rubber Tube, 1-1/2" Top DIA, 3/4" Bottom DIA, 4-1/2" Length	EA
6044CW	Aero Ring, Shock Cord, 1/2" Thick, 17" Loop	EA
61233-1	Pressure Switch-Overtorque, 3/8-24	EA
634873	Pump	EA
636603A	Pump Assy W/Motor	EA
641131	Pump, Hydraulic, 24V	EA
642873	Pump, Emergency Hand (Replaces 638203)	EA
6A01729-001	Bumper-Nose	EA
6A02000-027	Fly Wire Assy. Aft (5C2-640) AN679AC-7475	EA
6A02000-028	Fly Wire Assy. Fwd. (5C2-639) AN677AC-7625	EA
6A02000-124	Fly Wire Assy. Aft. 6000lb	EA
6A06625-001	Nose Spring	EA
6A13002-218	Wing Access Cover	EA
6A15261-001	Fitting, Front Seat Lock	EA
6A15263-001	Knob, Front Seat	EA
6A16525-010	Spring, Rudder Return-Turbo Beaver	EA
6P02000-100	Fly Wire, Ass'y-Fwd (AN677AC-7731)	EA
6P02000-101	Fly Wire Assembly, AFT (AN678AC-7825)	EA
6S01731-001	Bumper-Nose, Modified	EA
7010CW	Aero Ring, Shock Cord, 1/2" Thick, 32" Loop	EA
70124CW	Aero Ring, Shock Cord, 1/2" Thick, 41-1/2" Loop	EA
70144CW	Aero Ring, Shock Cord, 1/2" Thick, 48" Loop	EA
704528	Reservoir	EA
80069-5	Support Assembly, Yellow, 2 Fins	EA
80073-9	Valve Lever Assembly, yellow, 1" Tube	EA
8020CW	Aero Ring, Shock Cord, 1/2" Thick, 66" Loop	EA
8050CW	Aero Ring, Shock Cord, 1/2" Thick, 19-1/2" Loop	EA
80526-1	Assy, Hinge For Top Filler Door	EA

Part Number	Part Description	Unit of Measure
81035-9	Tank, Foam, Fuselage	EA
81162-1	Hopper Door Frame	EA
81174-1	Rod, w/ Spring, Air Tractor	EA
81218-1	Rod Assembly, Dump Vent, 802, Air Tractor	EA
8A02000-042	Fly Wire Assy. Aft. (AN682AC-6037)	EA
8A02000-043	Fly Wire Assy. Fwd. (AN680AC-6075)	EA
9A02000-109	Fly Wire, Assy. Fwd.	EA
9A02000-110	Fly Wire, Assy. Aft.	EA
A4050 20027	Bearing, Tapered Roller, Cone, Chrome Plated	EA
A4138	Bearing, Tapered Roller, Cup, non-chrome	EA
A4138 20027	Bearing, Tapered Roller, Cup, Chrome Plated	EA
BIM-PST-AN6X KLP80	Position Switch and Harness	EA
BK590716	Bolt Mounting Kit, 4 pcs	EA
D-30380	Nose Wheel Assembly, 2.75 x 4.00	EA
DG4V32ALMFP BWLH760	Valve, Solenoid, 4V	EA
EA5175-22	Airspeed Indicator, by EDO-AIRE	EA
GPP1250-23	Pressure Switch	EA
GPP1250-40	Pressure Switch	EA
JR25000	Accumulator(SB0210-0.32E4/112S-210CK)	EA
KLR1-ASB6	Probe Indicator Clamp	EA
LM29710CP	Bearing, Cup, Chrome Plated, 2-3/8" DIA	EA
LM29749	Bearing, Cone, non-chrome, 2-1/2" DIA	EA
LM-2C-50R/QC	Pressure Switch, 3 Prongs, 3/8"	EA
M62-350	Springs, 0.625 x 3.5 Blue	EA
MB56-N1	Electric Motor, 24V, DC Motor Assembly	EA
MB56-N1	Electric Motor, 24V, DC Motor Assembly	EA
MB56-N2	Electric Motor, 12V, DC Motor Assembly	EA
SP15KXGV1	Adapter, 2 Connectors 3/4" DIA on sides, 1 Connector 1" DIA on Bottom	EA
TF-1	Check Valve, Large Diameter Tidflex, 4" O.DIA	EA